


SCHEMATIC DIAGRAMS

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

2. Schematic Diagrams

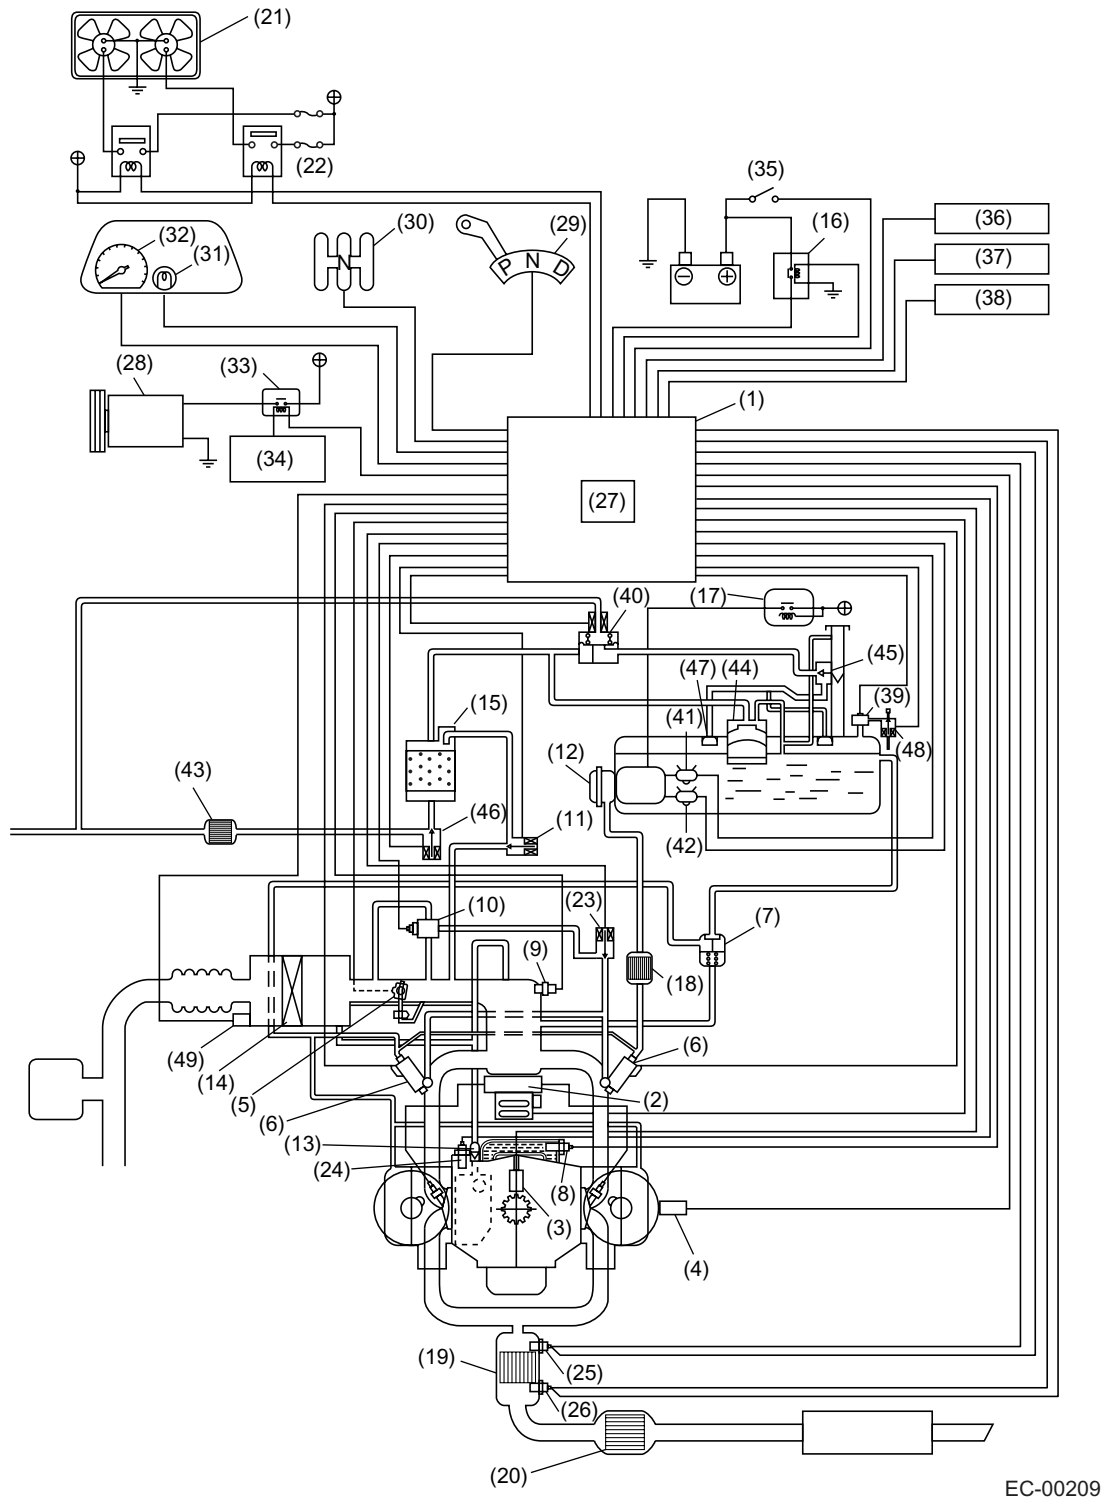

EC(H4SO)-4

SCHEMATIC DIAGRAMS

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

- | | | |
|--|---|---|
| (1) Engine control module (ECM) | (18) Fuel filter | (35) Ignition switch |
| (2) Ignition coil and igniter assembly | (19) Front catalytic converter | (36) Transmission control module (TCM) (AT models only) |
| (3) Crankshaft position sensor | (20) Rear catalytic converter | (37) Vehicle speed sensor |
| (4) Camshaft position sensor | (21) Radiator fan | (38) Data link connector |
| (5) Throttle position sensor | (22) Radiator fan relay | (39) Fuel tank pressure sensor |
| (6) Fuel injector | (23) Air assist injector solenoid valve | (40) Pressure control solenoid valve |
| (7) Pressure regulator | (24) Knock sensor | (41) Fuel temperature sensor |
| (8) Engine coolant temperature sensor | (25) Front oxygen (A/F) sensor | (42) Fuel level sensor |
| (9) Manifold absolute pressure sensor | (26) Rear oxygen sensor | (43) Drain filter |
| (10) Idle air control solenoid valve | (27) Atmospheric pressure sensor | (44) Vent valve |
| (11) Purge control solenoid valve | (28) A/C compressor | (45) Shut-off valve |
| (12) Fuel pump | (29) Inhibitor switch (AT models only) | (46) Drain valve |
| (13) PCV valve | (30) Neutral switch (MT models only) | (47) Fuel cut valve |
| (14) Air cleaner element | (31) Engine malfunction indicator light | (48) Fuel tank sensor control valve |
| (15) Canister | (32) Tachometer | (49) Intake air temperature sensor |
| (16) Main relay | (33) A/C relay | |
| (17) Fuel pump relay | (34) A/C control module | |

EC(H4SO)-5