

KEYLESS ENTRY SYSTEM

SECURITY AND LOCKS

3. Keyless Entry System

A: CONSTRUCTION

- The keyless entry system consists of a transmitter, keyless entry control module (with a built-in antenna), integrated module, door lock actuators, door switches, horn, buzzer, and interior light.
- The keyless entry system operates on a radio frequency, so its transmitter can be used in almost all directions relative to the vehicle.

B: FUNCTION

1. DOOR LOCKING

- 1) Push the transmitter's LOCK button once.
- 2) All doors are locked.
- 3) Check that the buzzer sounds once and the hazard warning lights flash once.

2. DOOR UNLOCKING (DRIVER'S DOOR)

- 1) Push the transmitter's UNLOCK button once.
- 2) The driver's door is unlocked and the interior light turns ON (when the interior light switch is set at the DOOR position).

NOTE:

The interior light illuminates for 30 seconds and then goes out. (However, if a door locking procedure is performed again during this period, the lights will go out immediately.)

- 3) Check that the buzzer sounds twice and the hazard warning lights flash twice.

3. DOOR UNLOCKING (ALL DOORS)

- 1) Push the transmitter's UNLOCK button 2 times within 5 seconds.
- 2) All doors are unlocked.
- 3) Check that the buzzer sounds twice and the hazard warning lights flash twice.

4. SELF POSITION DETECTION FUNCTION

- 1) Push the transmitter's UNLOCK button 3 times within 5 seconds.
- 2) Check that the horn sounds once and the hazard warning lights flash 3 times.

5. PANIC ALARM SETTING

- 1) Push the transmitter's UNLOCK button for more than 2 seconds.
- 2) The horn sounds continuously and the hazard warning lights will flash. To stop the horn, push any button on the transmitter.

6. ANSWER BACK (BUZZER SIGNALING) ON/OFF SELECTION

- 1) Push the transmitter's UNLOCK button.
- 2) Push the transmitter's LOCK and UNLOCK buttons simultaneously for more than 2 seconds to activate the answer back function and push them again to deactivate it.
- 3) When the answer back function is activated, the buzzer will sound once and the hazard warning lights flash once. When it is deactivated, the buzzer will sound twice and the hazard warning lights flash twice.

KEYLESS ENTRY SYSTEM

SECURITY AND LOCKS

7. DOOR OPEN WARNING FUNCTION

The buzzer sounds five times and the hazard warning lights flash five times if the transmitter's LOCK button is pressed with any door or the rear gate open.

SL-5