


### 4. Datum Points and Dimensions Concerning On-Board Aiming Adjustment

If headlight aiming is misaligned due to damaged body panel, repair headlight mating surface using body and headlight datum points as a guide.

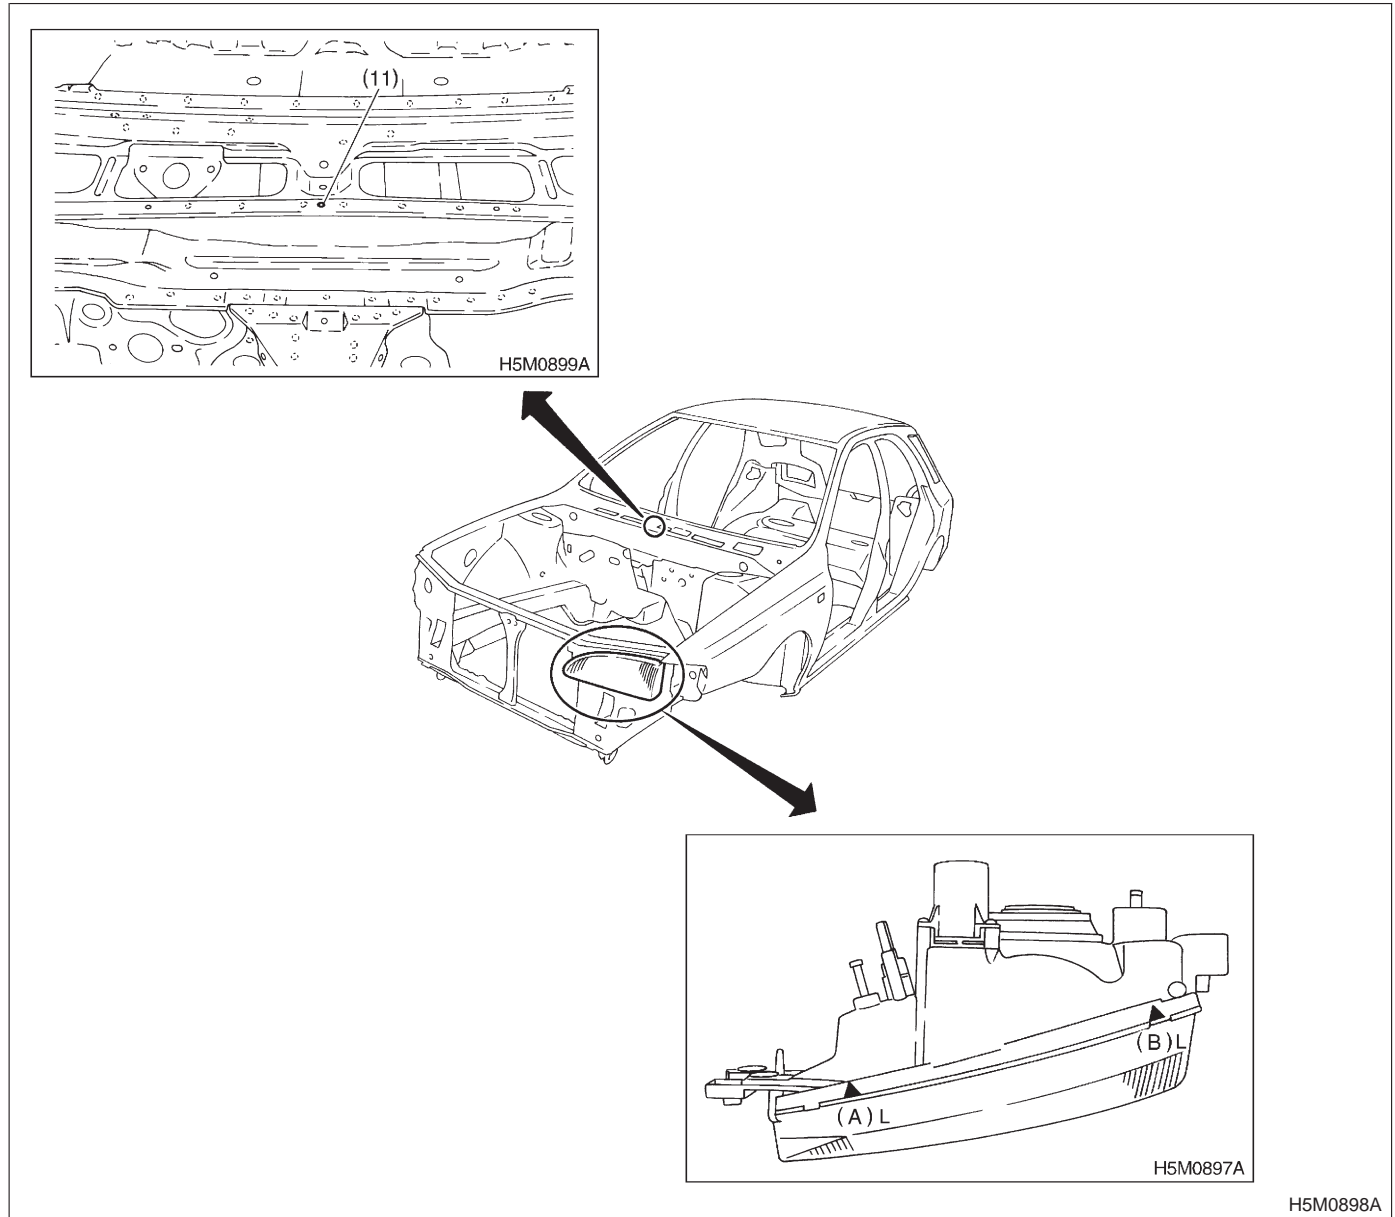

		Unit: mm (in)		
Point to point	Dimension		Point to point	Dimension
(11) to (A) L	993 (39.09)		(11) to (B) L	1,048 (41.26)
(11) to (A) R	993 (39.09)		(11) to (B) R	1,048 (41.26)