


### 3. Airbag Module


#### A: REMOVAL AND INSTALLATION

**CAUTION:**


- The airbag module (driver side and passenger side) must not be disassembled. The airbag module cannot be used again once inflated.

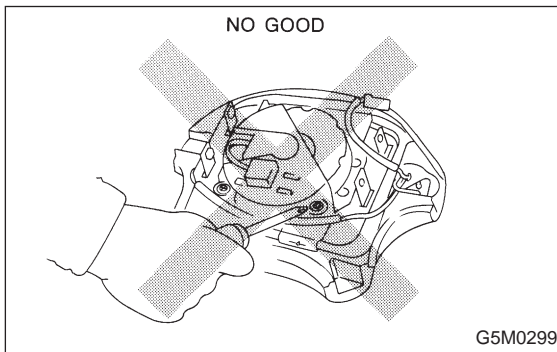


- When removing and installing the airbag module (driver side and passenger side), the operator should stand, as much as possible, on the side of the airbag module.

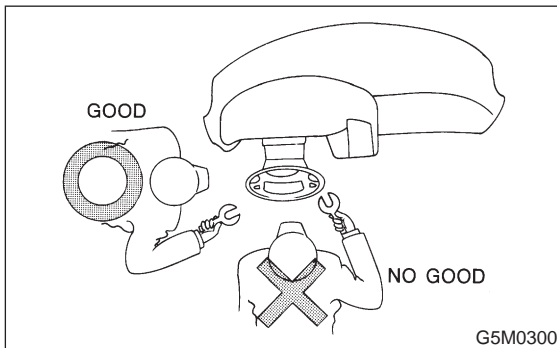

- After removal, the airbag module (driver side and passenger side) should be kept away from heat and light sources, and stored on a clean, flat surface to prevent from any damage to its lower structure.

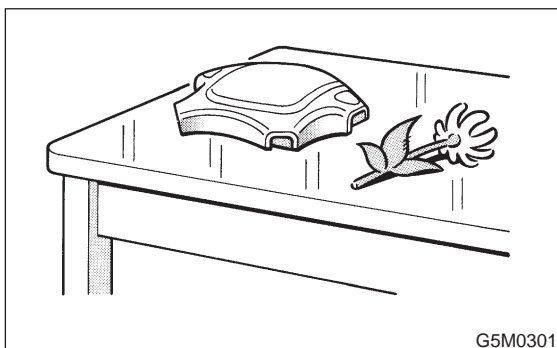



- Do not check airbag module (driver side and passenger side) continuity with airbag removed from the vehicle body.

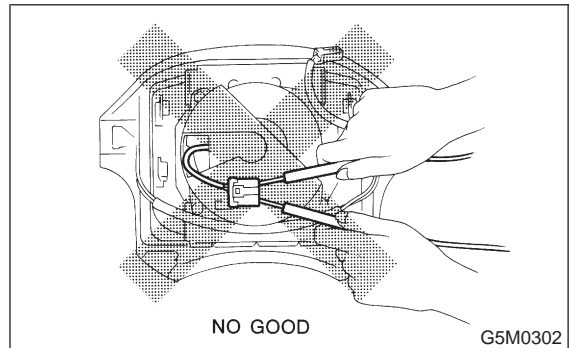



- Replace airbag module (driver side and passenger side) with a new one, should any of the following conditions develop:
  - Pad surface is scratched or cracked.
  - Connector harness is damaged.
  - Inflator side structure of module is cracked or deformed.
  - Module is excessively stained with water, oil, etc.
  - Module was accidentally dropped.
- When storing a removed airbag module (driver side and passenger side), be sure to place it in parallel with floor with the pad facing up. Do not place it against a wall, or place anything on the pad; otherwise, a dangerous condition may be created if the module malfunctions.

Driver side


 
GOOD

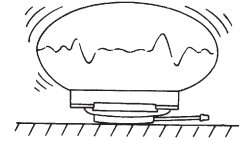


NO GOOD

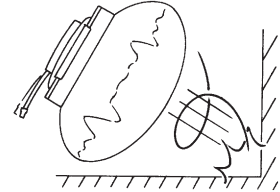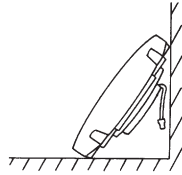

NO GOOD

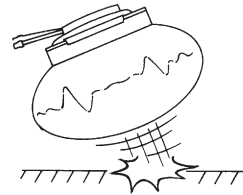
 


NO GOOD


 


Passenger side


GOOD

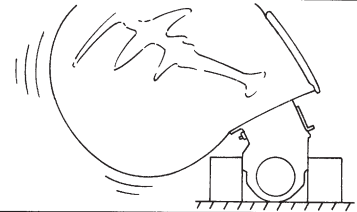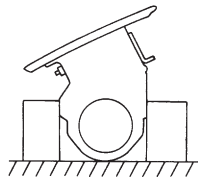

NO GOOD

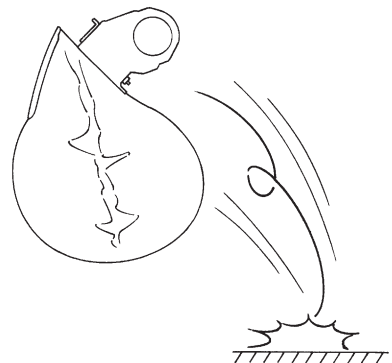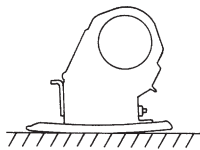

NO GOOD

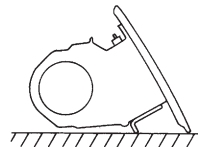


G5M0604


## 1. DRIVER SIDE

- 1) Set front wheels in straight ahead position.
- 2) Turn ignition switch off.
- 3) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.

4) Using TORX® BIT T30, remove two TORX® bolts.

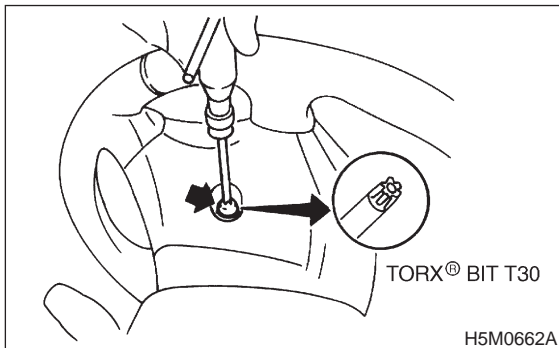

5) Disconnect airbag connector on back of airbag module. <Ref. to 5-5 [M2F2].>

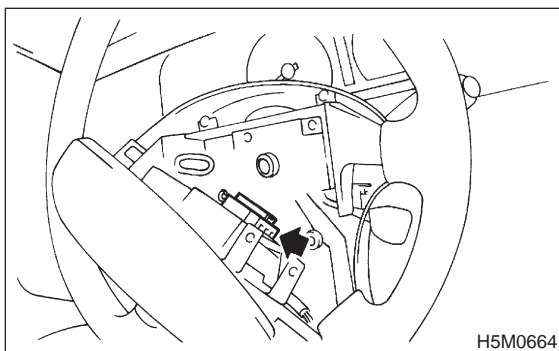


6) Refer to “CAUTION:” for handling of a removed airbag module. <Ref. to 5-5 [W3A0].>  
7) Installation is in the reverse order of removal.


**CAUTION:**  
Do not allow harness and connectors to interfere or get caught with other parts.

## 2. PASSENGER SIDE

- 1) Turn ignition switch off.
- 2) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove glove box. <Ref. to 5-4 [W1A0].>
- 4) Disconnect airbag connector. <Ref. to 5-5 [M2F2].>

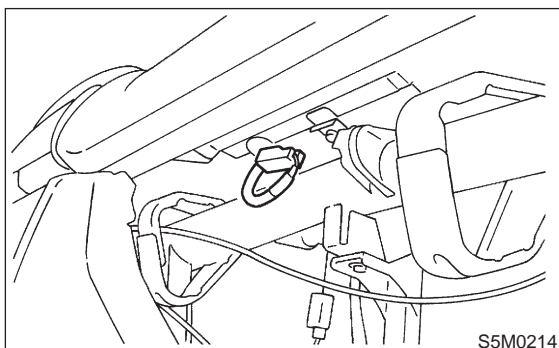

5) Remove seven bolts and then carefully remove airbag module.

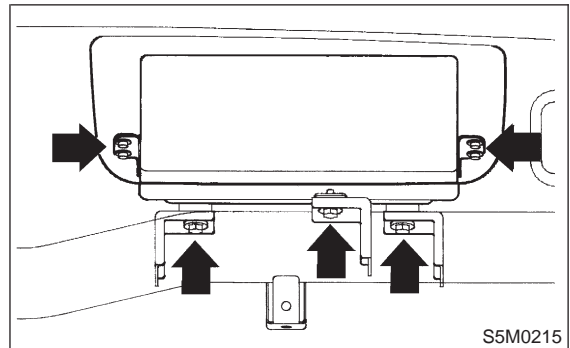

6) Refer to “CAUTION:” for handling of a removed airbag module. <Ref. to 5-5 [W3A0].>  
7) Installation is in the reverse order of removal.

**CAUTION:**  
Do not allow harness and connectors to interfere or get caught with other parts.