

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

A: DIAGNOSTIC TROUBLE CODE (DTC) LIST

DTC No.	Item	Index
P0106	Intake manifold pressure sensor circuit range/performance problem	<Ref. to 2-7 [T10B0].>
P0107	Intake manifold pressure sensor circuit low input	<Ref. to 2-7 [T10C0].>
P0108	Intake manifold pressure sensor circuit high input	<Ref. to 2-7 [T10D0].>
P0111	Intake air temperature sensor circuit range/performance problem	<Ref. to 2-7 [T10E0].>
P0112	Intake air temperature sensor circuit low input	<Ref. to 2-7 [T10F0].>
P0113	Intake air temperature sensor circuit high input	<Ref. to 2-7 [T10G0].>
P0116	Engine coolant temperature sensor circuit low input	<Ref. to 2-7 [T10H0].>
P0117	Engine coolant temperature sensor circuit high input	<Ref. to 2-7 [T10I0].>
P0121	Throttle position sensor circuit range/performance problem (high input)	<Ref. to 2-7 [T10J0].>
P0122	Throttle position sensor circuit low input	<Ref. to 2-7 [T10K0].>
P0123	Throttle position sensor circuit high input	<Ref. to 2-7 [T10L0].>
P0125	Insufficient coolant temperature for closed loop fuel control	<Ref. to 2-7 [T10M0].>
P0131	Front oxygen (A/F) sensor circuit range/performance problem (low input)	<Ref. to 2-7 [T10N0].>
P0132	Front oxygen (A/F) sensor circuit range/performance problem (high input)	<Ref. to 2-7 [T10O0].>
P0133	Front oxygen (A/F) sensor circuit slow response	<Ref. to 2-7 [T10P0].>
P0136	Rear oxygen sensor circuit malfunction	<Ref. to 2-7 [T10Q0].>
P0139	Rear oxygen sensor circuit slow response	<Ref. to 2-7 [T10R0].>
P0141	Rear oxygen sensor heater circuit low input	<Ref. to 2-7 [T10S0].>
P0171	Fuel trim malfunction (A/F too lean)	<Ref. to 2-7 [T10T0].>
P0172	Fuel trim malfunction (A/F too rich)	<Ref. to 2-7 [T10U0].>
P0181	Fuel temperature sensor A circuit range/performance problem	<Ref. to 2-7 [T10V0].>
P0182	Fuel temperature sensor A circuit low input	<Ref. to 2-7 [T10W0].>
P0183	Fuel temperature sensor A circuit high input	<Ref. to 2-7 [T10X0].>
P0301	Cylinder 1 misfire detected	<Ref. to 2-7 [T10Y0].>
P0302	Cylinder 2 misfire detected	<Ref. to 2-7 [T10Z0].>

ON-BOARD DIAGNOSTICS II SYSTEM**[T10A0] 2-7**

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

DTC No.	Item	Index
P0303	Cylinder 3 misfire detected	<Ref. to 2-7 [T10AA0].>
P0304	Cylinder 4 misfire detected	<Ref. to 2-7 [T10AB0].>
P0325	Knock sensor circuit malfunction	<Ref. to 2-7 [T10AC0].>
P0335	Crankshaft position sensor circuit malfunction	<Ref. to 2-7 [T10AD0].>
P0336	Crankshaft position sensor circuit range/performance problem	<Ref. to 2-7 [T10AE0].>
P0340	Camshaft position sensor circuit malfunction	<Ref. to 2-7 [T10AF0].>
P0341	Camshaft position sensor circuit range/performance problem	<Ref. to 2-7 [T10AG0].>
P0420	Catalyst system efficiency below threshold	<Ref. to 2-7 [T10AH0].>
P0440	Evaporative emission control system malfunction	<Ref. to 2-7 [T10AI0].>
P0443	Evaporative emission control system purge control valve circuit low input	<Ref. to 2-7 [T10AJ0].>
P0446	Evaporative emission control system vent control low input	<Ref. to 2-7 [T10AK0].>
P0451	Evaporative emission control system pressure sensor range/performance problem	<Ref. to 2-7 [T10AL0].>
P0452	Evaporative emission control system pressure sensor low input	<Ref. to 2-7 [T10AM0].>
P0453	Evaporative emission control system pressure sensor high input	<Ref. to 2-7 [T10AN0].>
P0461	Fuel level sensor circuit range/performance problem	<Ref. to 2-7 [T10AO0].>
P0462	Fuel level sensor circuit low input	<Ref. to 2-7 [T10AP0].>
P0463	Fuel level sensor circuit high input	<Ref. to 2-7 [T10AQ0].>
P0480	Cooling fan relay 1 circuit low input	<Ref. to 2-7 [T10AR0].>
P0483	Cooling fan function problem	<Ref. to 2-7 [T10AS0].>
P0500	Vehicle speed sensor malfunction	<Ref. to 2-7 [T10AT0].>
P0505	Idle control system circuit low input	<Ref. to 2-7 [T10AU0].>
P0506	Idle control system RPM lower than expected	<Ref. to 2-7 [T10AV0].>
P0507	Idle control system RPM higher than expected	<Ref. to 2-7 [T10AW0].>
P0601	Internal control module memory check sum error	<Ref. to 2-7 [T10AX0].>
P0703	Brake switch input malfunction	<Ref. to 2-7 [T10AY0].>
P0705	Transmission range sensor circuit malfunction	<Ref. to 2-7 [T10AZ0].>
P0710	Transmission fluid temperature sensor circuit malfunction	<Ref. to 2-7 [T10BA0].>

2-7 [T10A0]

ON-BOARD DIAGNOSTICS II SYSTEM

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

DTC No.	Item	Index
P0715	Torque converter turbine speed sensor circuit malfunction	<Ref. to 2-7 [T10BB0].>
P0720	Output speed sensor (vehicle speed sensor 2) circuit malfunction	<Ref. to 2-7 [T10BC0].>
P0725	Engine speed input circuit malfunction	<Ref. to 2-7 [T10BD0].>
P0731	Gear 1 incorrect ratio	<Ref. to 2-7 [T10BE0].>
P0732	Gear 2 incorrect ratio	<Ref. to 2-7 [T10BF0].>
P0733	Gear 3 incorrect ratio	<Ref. to 2-7 [T10BG0].>
P0734	Gear 4 incorrect ratio	<Ref. to 2-7 [T10BH0].>
P0740	Torque converter clutch system malfunction	<Ref. to 2-7 [T10BI0].>
P0743	Torque converter clutch system (Duty solenoid B) electrical	<Ref. to 2-7 [T10BJ0].>
P0748	Pressure control solenoid (Duty solenoid A) electrical	<Ref. to 2-7 [T10BK0].>
P0753	Shift solenoid A (shift solenoid 1) electrical	<Ref. to 2-7 [T10BL0].>
P0758	Shift solenoid B (shift solenoid 2) electrical	<Ref. to 2-7 [T10BM0].>
P1100	Starter switch circuit low input	<Ref. to 2-7 [T10BN0].>
P1101	Neutral position switch circuit low input [MT vehicles]	<Ref. to 2-7 [T10BO0].>
P1101	Neutral position switch circuit high input [AT vehicles]	<Ref. to 2-7 [T10BP0].>
P1103	Engine torque control signal 1 circuit malfunction	<Ref. to 2-7 [T10BQ0].>
P1106	Engine torque control signal 2 circuit malfunction	<Ref. to 2-7 [T10BR0].>
P1110	Atmospheric pressure sensor circuit low input	<Ref. to 2-7 [T10BS0].>
P1111	Atmospheric pressure sensor circuit high input	<Ref. to 2-7 [T10BT0].>
P1112	Atmospheric pressure sensor circuit range/performance problem	<Ref. to 2-7 [T10BU0].>
P1115	Engine torque control cut signal circuit high input	<Ref. to 2-7 [T10BV0].>
P1116	Engine torque control cut signal circuit low input	<Ref. to 2-7 [T10BW0].>
P1120	Starter switch circuit high input	<Ref. to 2-7 [T10BX0].>
P1121	Neutral position switch circuit high input [MT vehicles]	<Ref. to 2-7 [T10BY0].>
P1121	Neutral position switch circuit low input [AT vehicles]	<Ref. to 2-7 [T10BZ0].>
P1130	Front oxygen (A/F) sensor circuit malfunction (open circuit)	<Ref. to 2-7 [T10CA0].>
P1131	Front oxygen (A/F) sensor circuit malfunction (short circuit)	<Ref. to 2-7 [T10CB0].>

ON-BOARD DIAGNOSTICS II SYSTEM**[T10A0] 2-7**

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

DTC No.	Item	Index
P1132	Front oxygen (A/F) sensor heater circuit low input	<Ref. to 2-7 [T10CC0].>
P1133	Front oxygen (A/F) sensor heater circuit high input	<Ref. to 2-7 [T10CD0].>
P1134	Front oxygen (A/F) sensor micro-computer problem	<Ref. to 2-7 [T10CE0].>
P1139	Front oxygen (A/F) sensor #1 heater circuit range/performance problem	<Ref. to 2-7 [T10CF0].>
P1142	Throttle position sensor circuit range/performance problem (low input)	<Ref. to 2-7 [T10CG0].>
P1151	Rear oxygen sensor heater circuit high input	<Ref. to 2-7 [T10CH0].>
P1400	Fuel tank pressure control solenoid valve circuit low input	<Ref. to 2-7 [T10CI0].>
P1420	Fuel tank pressure control solenoid valve circuit high input	<Ref. to 2-7 [T10CJ0].>
P1422	Evaporative emission control system purge control valve circuit high input	<Ref. to 2-7 [T10CK0].>
P1423	Evaporative emission control system vent control high input	<Ref. to 2-7 [T10CL0].>
P1443	Evaporative emission control system vent control function problem	<Ref. to 2-7 [T10CM0].>
P1505	Idle control system circuit high input	<Ref. to 2-7 [T10CN0].>
P1507	Idle control system malfunction (fail-safe)	<Ref. to 2-7 [T10CO0].>
P1520	Cooling fan relay 1 circuit high input	<Ref. to 2-7 [T10CP0].>
P1560	Back-up voltage circuit malfunction	<Ref. to 2-7 [T10CQ0].>
P1700	Throttle position sensor circuit malfunction for automatic transmission	<Ref. to 2-7 [T10CR0].>
P1701	Cruise control set signal circuit malfunction for automatic transmission	<Ref. to 2-7 [T10CS0].>
P1702	Automatic transmission diagnosis input signal circuit low input	<Ref. to 2-7 [T10CT0].>
P1703	Low clutch timing control solenoid valve circuit malfunction	<Ref. to 2-7 [T10CU0].>
P1704	2-4 brake timing control solenoid valve circuit malfunction	<Ref. to 2-7 [T10CV0].>
P1705	2-4 brake pressure control solenoid valve (Duty solenoid D) circuit malfunction	<Ref. to 2-7 [T10CW0].>
P1722	Automatic transmission diagnosis input signal circuit high input	<Ref. to 2-7 [T10CX0].>
P1742	Automatic transmission diagnosis input signal circuit malfunction	<Ref. to 2-7 [T10CY0].>


B: DTC P0106 — INTAKE MANIFOLD PRESSURE SENSOR CIRCUIT RANGE/ PERFORMANCE PROBLEM —

- DTC DETECTING CONDITION:
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● WIRING DIAGRAM:

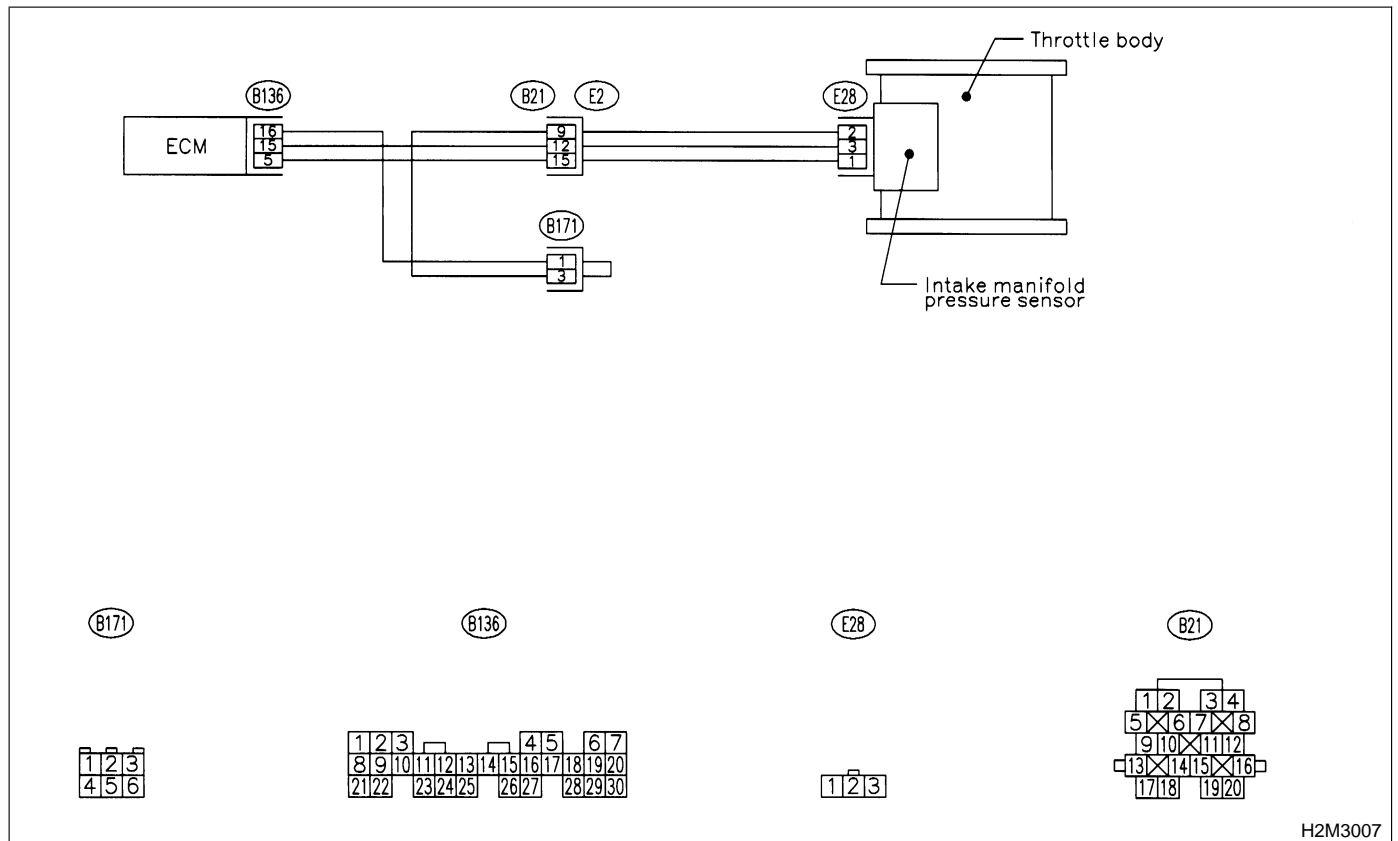

H2M3007

10B1 : CHECK IDLE SWITCH SIGNAL.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor to data link connector.

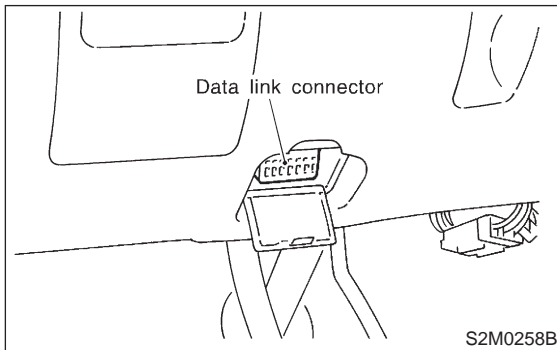

- 3) Turn ignition switch to ON and Subaru Select Monitor switch to ON.
- 4) Operate the LED operation mode for engine using Subaru Select Monitor.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "LED OPERATION MODE FOR ENGINE". <Ref. to 2-7 [T3C8].>

- CHECK** : *Does the LED of {Idle Switch Signal} come on?*
- YES** : Go to step **10B2**.
- NO** : Check throttle position sensor circuit. <Ref. to 2-7 [T10K0].>

NOTE:

In this case, it is not necessary to inspect DTC P0106.

10B2 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : *Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0107 or P0108?*
- YES** : Inspect DTC P0107 or P0108 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:

In this case, it is not necessary to inspect DTC P0106.

- NO** : Go to step **10B3**.

10B3 : CHECK CONDITION OF INTAKE MANIFOLD PRESSURE SENSOR.

- CHECK** : *Is the intake manifold pressure sensor installation bolt tightened securely?*
- YES** : Go to step **10B4**.
- NO** : Tighten intake manifold pressure sensor installation bolt securely.

10B4 : CHECK CONDITION OF THROTTLE BODY.

- CHECK** : *Is the throttle body installation bolt tightened securely?*
- YES** : Replace intake manifold pressure sensor. <Ref. to 2-7 [W20A0].>
- NO** : Tighten throttle body installation bolt securely.


C: DTC P0107 — INTAKE MANIFOLD PRESSURE SENSOR CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

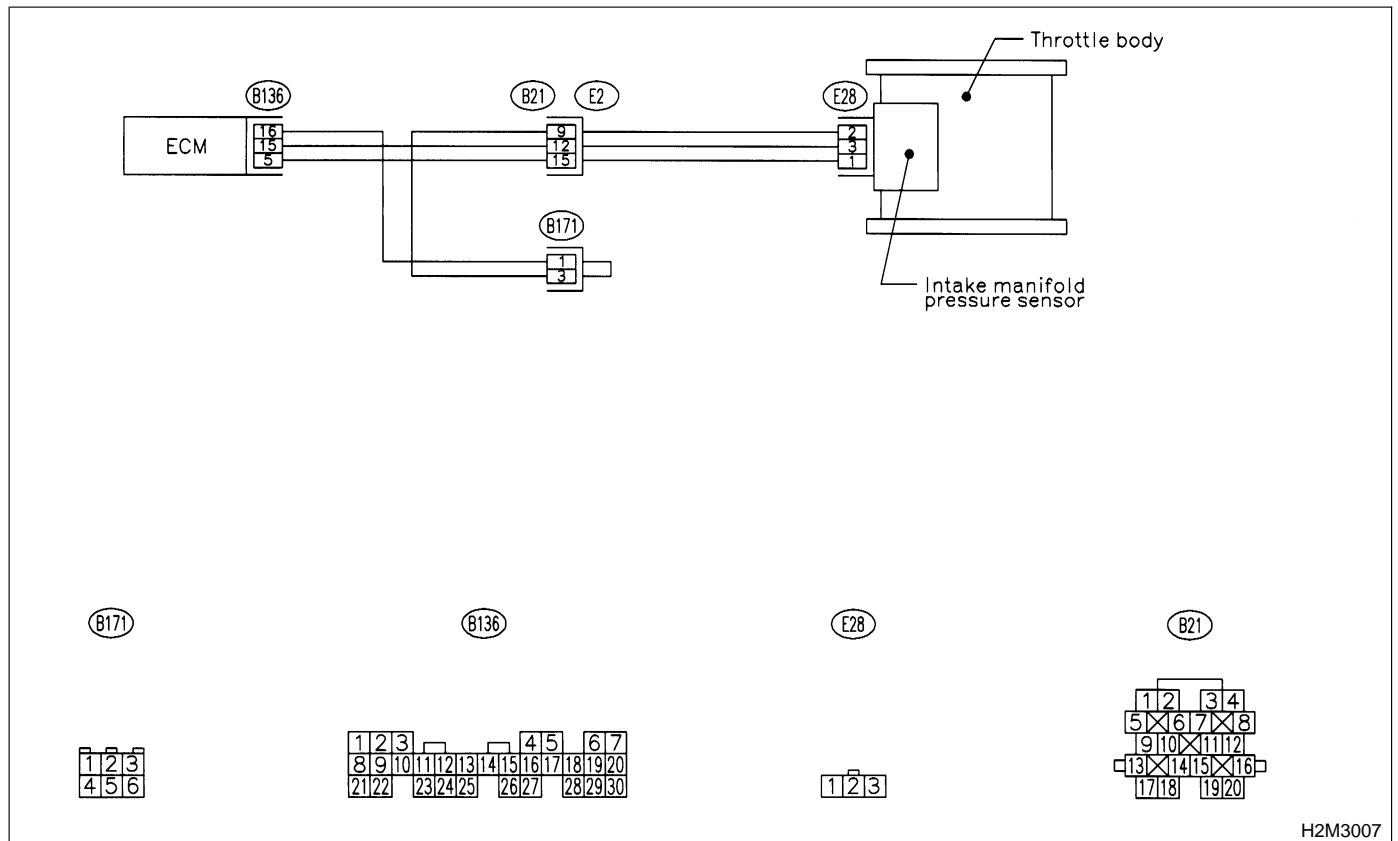

H2M3007

10C1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

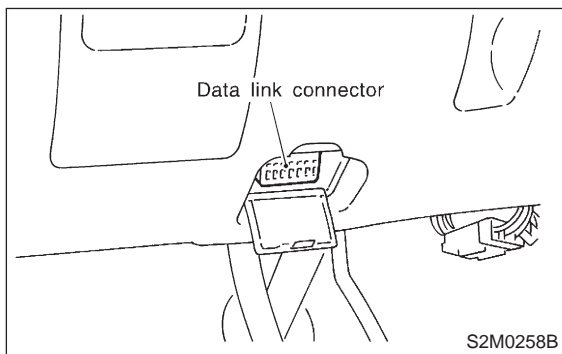

- 3) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value less than 3.3 kPa (25 mmHg, 0.98 inHg)?*

YES : Go to step 10C3.

NO : Go to step 10C2.

10C2 : CHECK POOR CONTACT.

Check poor contact in ECM and pressure sensor connector. <Ref. to FOREWORD [T3C1].>

CHECK : *Is there poor contact in ECM or pressure sensor connector?*

YES : Repair poor contact in ECM or pressure sensor connector.


NO : Even if MIL lights up, the circuit has returned to a normal condition at this time.

10C3 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 15 (+) — Chassis ground (-):

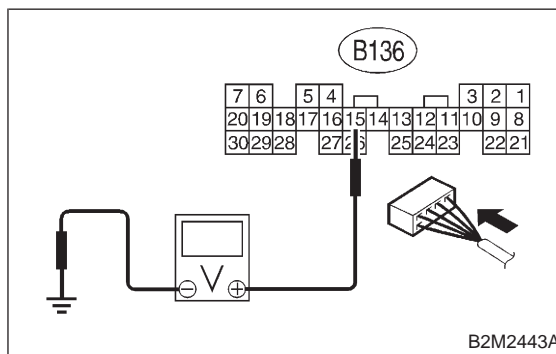

CHECK : *Is the voltage more than 4.5 V?*

YES : Go to step 10C5.


NO : Go to step 10C4.

10C4 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 15 (+) — Chassis ground (-):

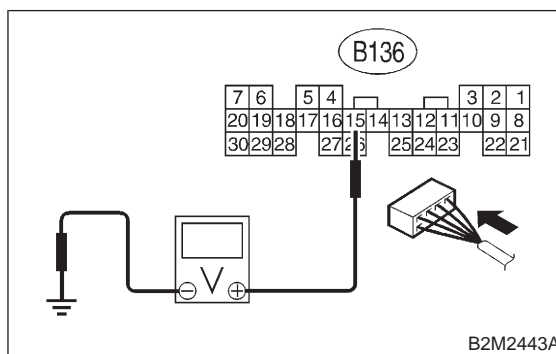

CHECK : *Does the voltage change more than 4.5 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*

YES : Repair poor contact in ECM connector.

NO : Contact with SOA service.

NOTE:


Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10C5 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal

(B136) No. 5 (+) — Chassis ground (-):

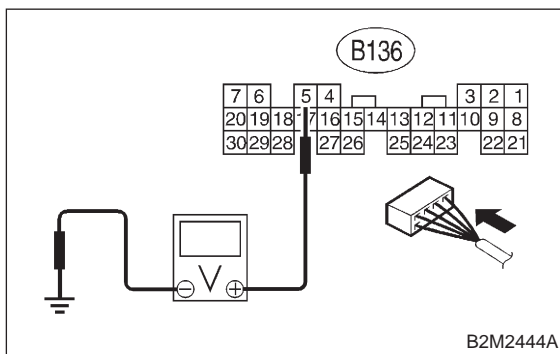

- CHECK** : *Is the voltage less than 0.7 V?*
- YES** : Go to step 10C7.
- NO** : Go to step 10C6.

10C6 : CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)

Read data of atmospheric absolute pressure signal using Subaru Select Monitor.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>


- CHECK** : *Does the value change more than 3.3 kPa (25 mmHg, 0.98 inHg) by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?*
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10C7.

10C7 : CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from intake manifold pressure sensor.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between intake manifold pressure sensor connector and engine ground.

Connector & terminal

(E28) No. 3 (+) — Engine ground (-):

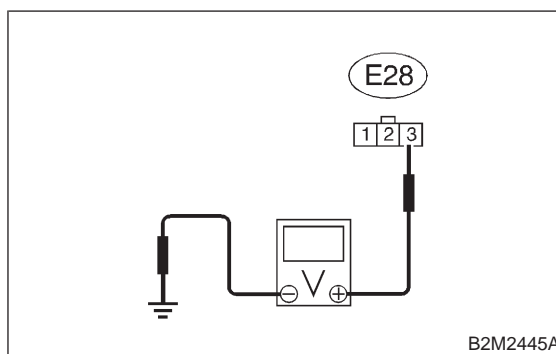


- CHECK** : *Is the voltage more than 4.5 V?*
- YES** : Go to step 10C8.
- NO** : Repair open circuit in harness between ECM and intake manifold pressure sensor connector.

10C8 : CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM and intake manifold pressure sensor connector.

Connector & terminal
(B136) No. 16 — (E28) No. 2:

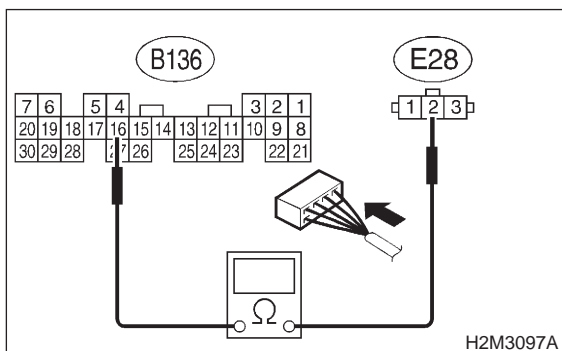


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10C9.
- NO** : Repair open circuit in harness between ECM and intake manifold pressure sensor connector.

10C9 : CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.

Measure resistance of harness between intake manifold pressure sensor connector and engine ground.

Connector & terminal
(E28) No. 1 — Engine ground:

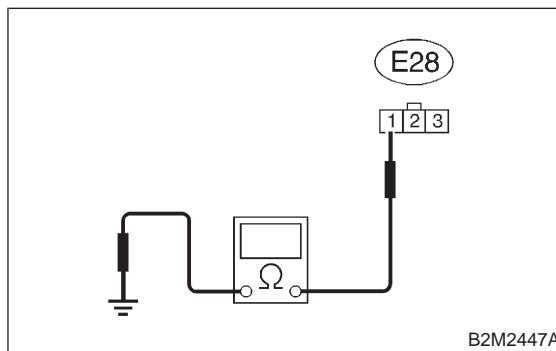

- CHECK** : Is the resistance more than 500 kΩ?
- YES** : Go to step 10C10.
- NO** : Repair ground short circuit in harness between ECM and intake manifold pressure sensor connector.

10C10 : CHECK POOR CONTACT.

Check poor contact in intake manifold pressure sensor connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : Is there poor contact in intake manifold pressure sensor connector?
- YES** : Repair poor contact in intake manifold pressure sensor connector.
- NO** : Replace intake manifold pressure sensor. <Ref. to 2-7 [W20A0].>


D: DTC P0108 — INTAKE MANIFOLD PRESSURE SENSOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:


After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

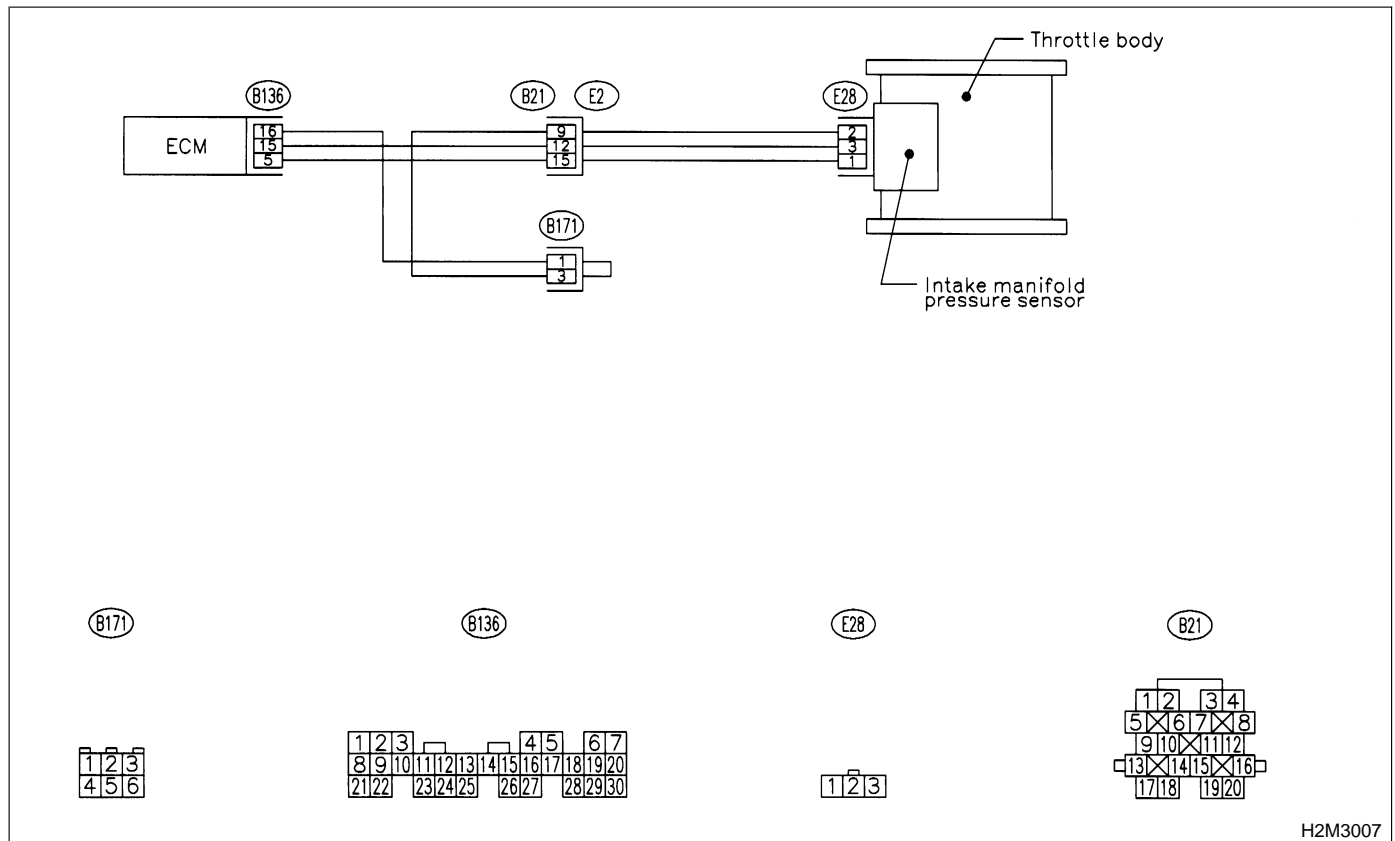

10D1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

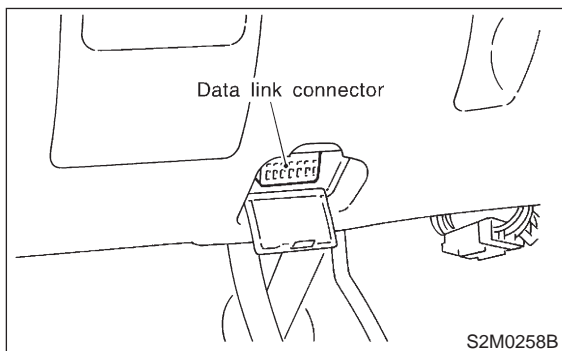

- 3) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value more than 130 kPa (975 mmHg, 38.39 inHg)?*

YES : Go to step 10D10.


NO : Go to step 10D2.

10D2 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 15 (+) — Chassis ground (-):

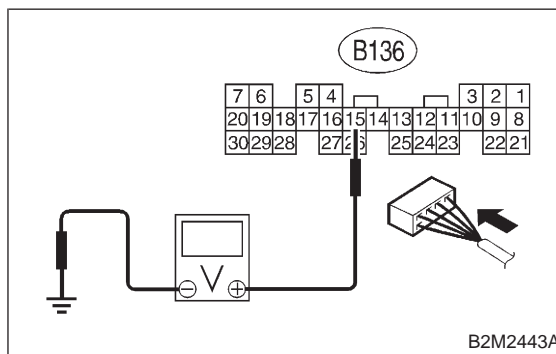

CHECK : *Is the voltage more than 4.5 V?*

YES : Go to step 10D4.


NO : Go to step 10D3.

10D3 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 15 (+) — Chassis ground (-):

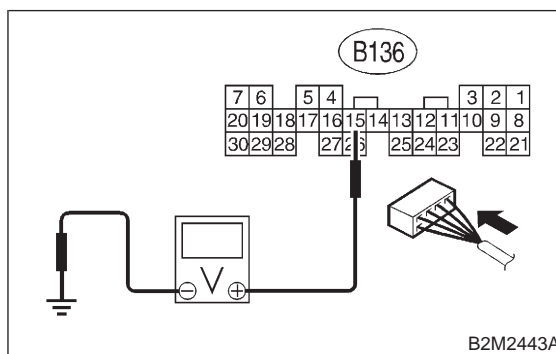

CHECK : *Does the voltage change more than 4.5 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*

YES : Repair poor contact in ECM connector.

NO : Contact with SOA service.

NOTE:


Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10D4 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 5 (+) — Chassis ground (-):

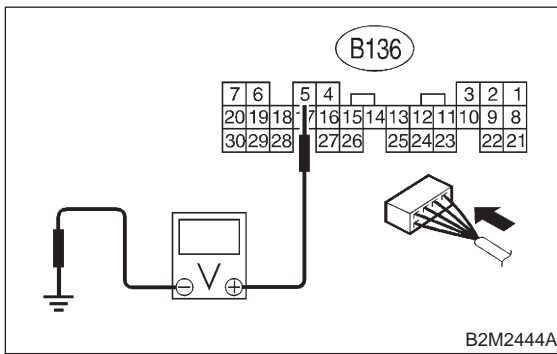

- CHECK** : *Is the voltage less than 0.7 V?*
- YES** : Go to step 10D6.
- NO** : Go to step 10D5.

10D5 : CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)

Read data of atmospheric absolute pressure signal using Subaru Select Monitor.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>


- CHECK** : *Does the value change more than 3.3 kPa (25 mmHg, 0.98 inHg) by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?*
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10D6.

10D6 : CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from intake manifold pressure sensor.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between intake manifold pressure sensor connector and engine ground.

Connector & terminal

(E28) No. 3 (+) — Engine ground (-):

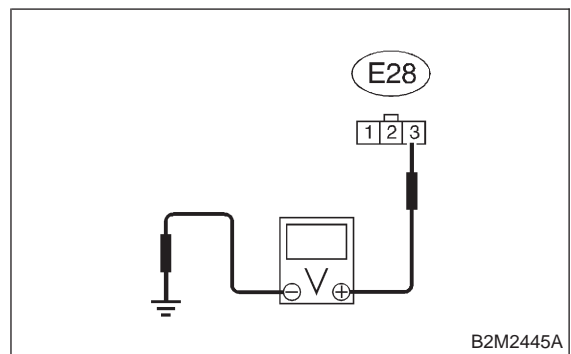


- CHECK** : *Is the voltage more than 4.5 V?*
- YES** : Go to step 10D7.
- NO** : Repair open circuit in harness between ECM and intake manifold pressure sensor connector.

10D7 : CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM and intake manifold pressure sensor connector.

Connector & terminal

(B136) No. 5 — (E28) No. 1:

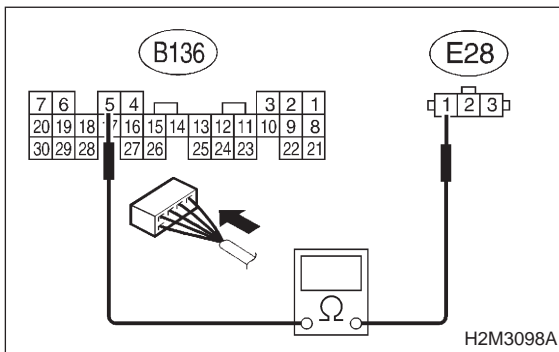


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step 10D8.
- NO** : Repair open circuit in harness between ECM and intake manifold pressure sensor connector.

10D8 : CHECK HARNESS BETWEEN ECM AND INTAKE MANIFOLD PRESSURE SENSOR CONNECTOR.

Measure resistance of harness between ECM and intake manifold pressure sensor connector.

Connector & terminal

(B136) No. 16 — (E28) No. 2:

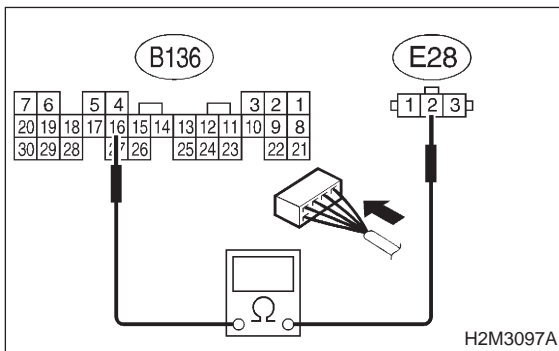

- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step 10D9.
- NO** : Repair open circuit in harness between ECM and intake manifold pressure sensor connector.

10D9 : CHECK POOR CONTACT.

Check poor contact in intake manifold pressure sensor connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in intake manifold pressure sensor connector?*
- YES** : Repair poor contact in intake manifold pressure sensor connector.
- NO** : Replace intake manifold pressure sensor. <Ref. to 2-7 [W20A0].>

10D10 : CHECK HARNESS BETWEEN ECM AND PRESSURE SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF and Subaru Select Monitor or the OBD-II general scan tool switch to OFF.
- 2) Disconnect connector from pressure sensor.
- 3) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 4) Read data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value more than 130 kPa (975 mmHg, 38.39 inHg)?*
- YES** : Repair battery short circuit in harness between ECM and intake manifold pressure sensor connector.
- NO** : Replace intake manifold pressure sensor. <Ref. to 2-7 [W20A0].>


E: DTC P0111 — INTAKE AIR TEMPERATURE SENSOR CIRCUIT RANGE/ PERFORMANCE PROBLEM —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

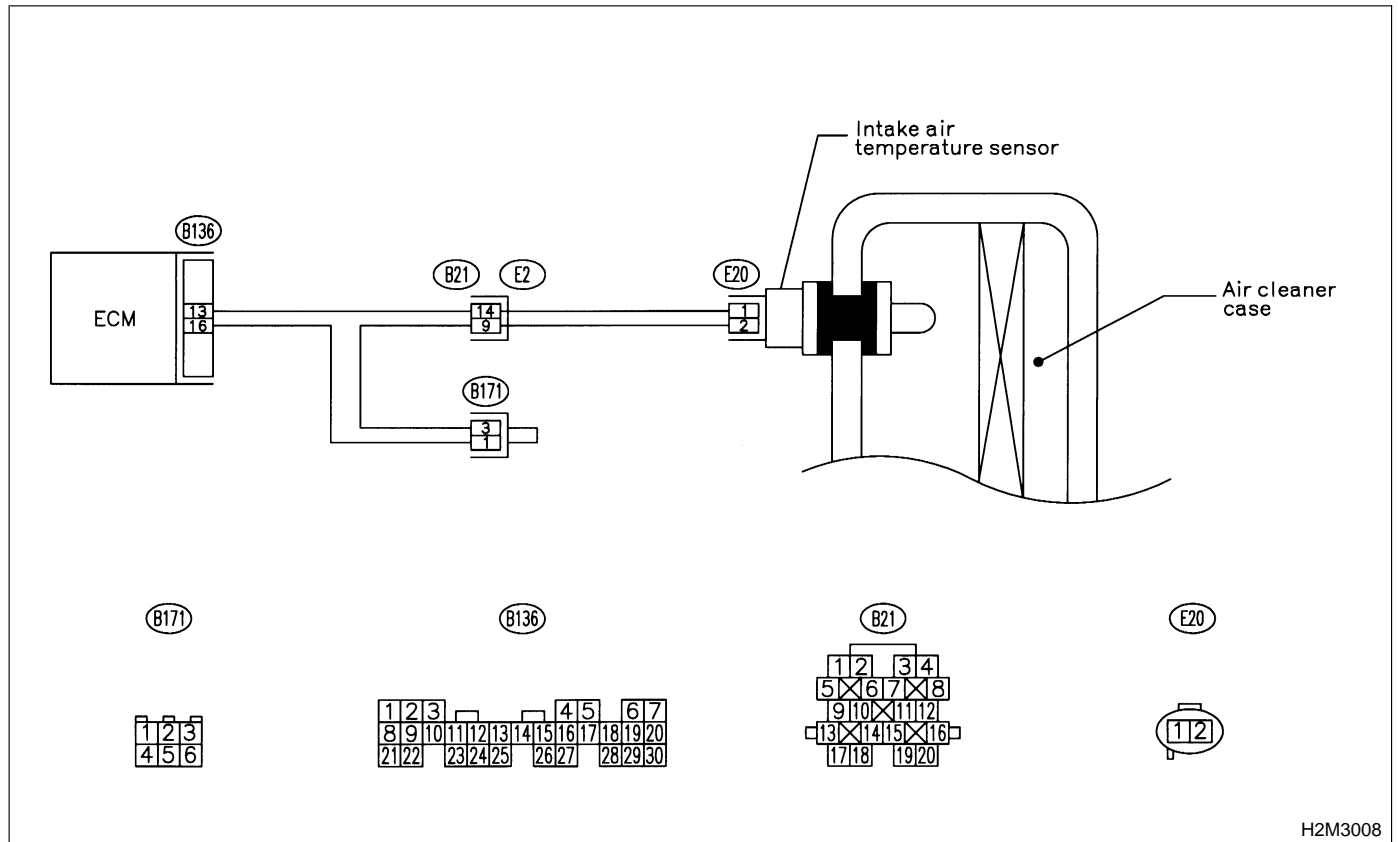

H2M3008

ON-BOARD DIAGNOSTICS II SYSTEM

[T10E1] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10E1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : *Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0112 or P0113?*

YES : Inspect DTC P0112 or P0113 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles".
<Ref. to 2-7 [T10A0].>

NOTE:

In this case, it is not necessary to inspect DTC P0111.

NO : Replace intake air temperature sensor.
<Ref. to 2-7 [W21A0].>


F: DTC P0112 — INTAKE AIR TEMPERATURE SENSOR CIRCUIT LOW INPUT

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

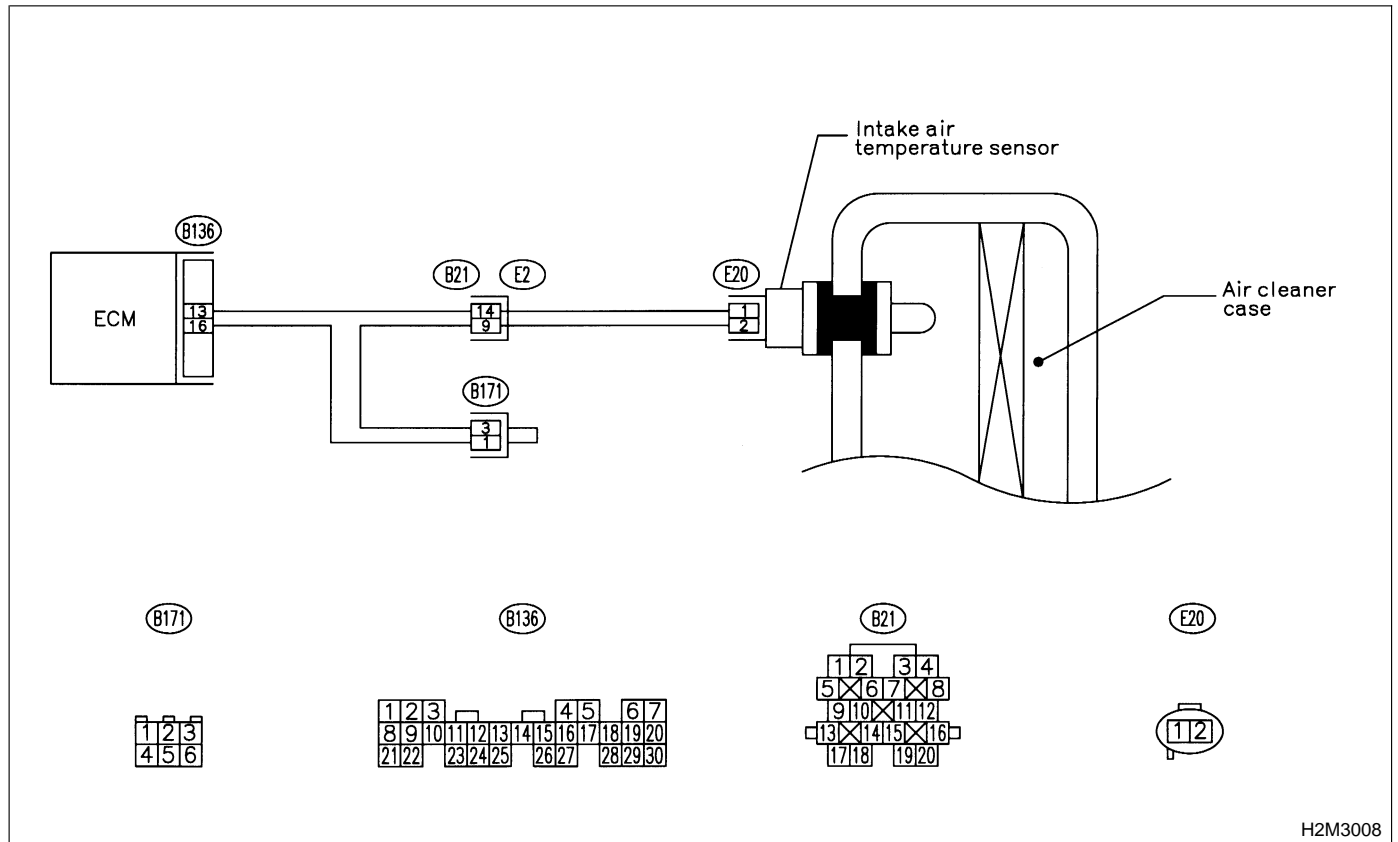

H2M3008

10F1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

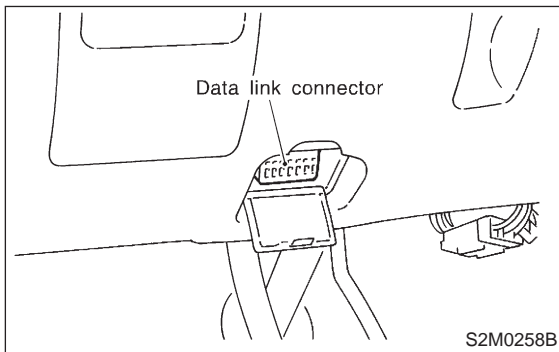

- 3) Turn ignition switch to ON.
- 4) Start engine.
- 5) Read data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value greater than 120°C (248°F)?*

YES : Go to step **10F2**.

NO : Repair poor contact.

NOTE:

In this case, repair the following:

- Poor contact in intake air temperature sensor
- Poor contact in ECM
- Poor contact in coupling connector (B21) and (B171)

10F2 : CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from intake air temperature sensor.
- 3) Turn ignition switch and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Read data of intake air temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value less than -40°C (-40°F)?*

YES : Replace intake air temperature sensor. <Ref. to 2-7 [W21A0].>

NO : Repair ground short circuit in harness between intake air temperature sensor and ECM connector.


G: DTC P0113 — INTAKE AIR TEMPERATURE SENSOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

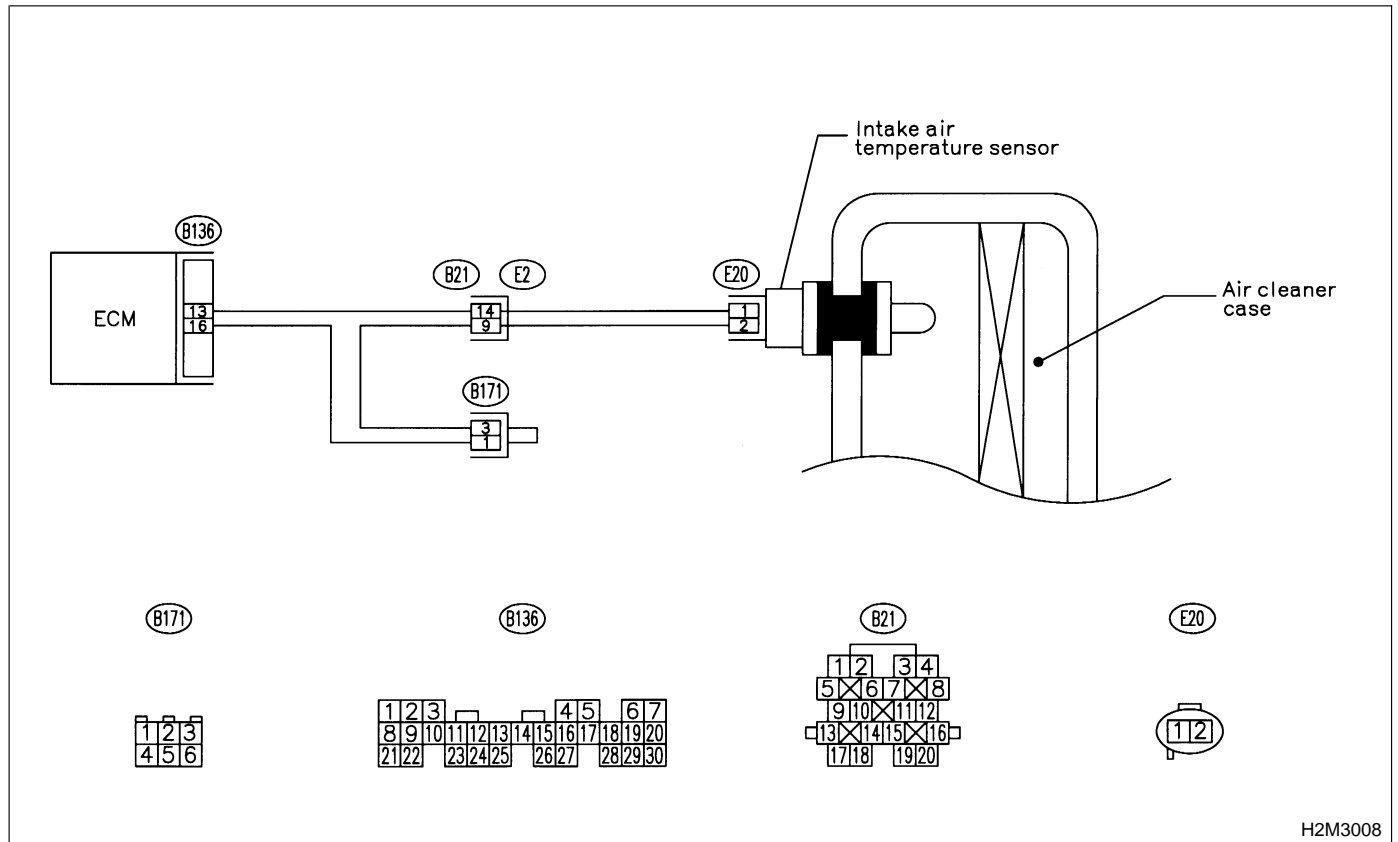

H2M3008

10G1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

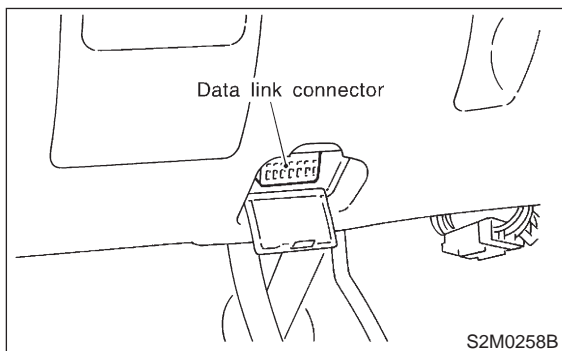

- 3) Turn ignition switch to ON.
- 4) Start engine.
- 5) Read data of intake air temperature signal using Subaru Select Monitor or the OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value less than -40°C (-40°F)?*
YES : Go to step **10G2**.
NO : Repair poor contact.

NOTE:


- In this case, repair the following:
- Poor contact in intake air temperature sensor
 - Poor contact in ECM
 - Poor contact in coupling connector (B21) and (B171)

10G2 : CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from intake air temperature sensor.
- 3) Measure voltage between intake air temperature sensor connector and engine ground.

Connector & terminal

(E20) No. 1 (+) — Engine ground (-):

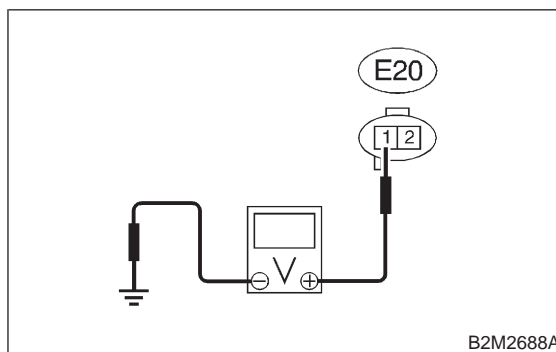

- CHECK** : *Is the voltage more than 10 V?*
YES : Repair battery short circuit in harness between intake air temperature sensor and ECM connector.
NO : Go to step **10G3**.

2-7 [T10G3]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10G3 : CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between intake air temperature sensor connector and engine ground.

Connector & terminal

(E20) No. 1 (+) — Engine ground (-):

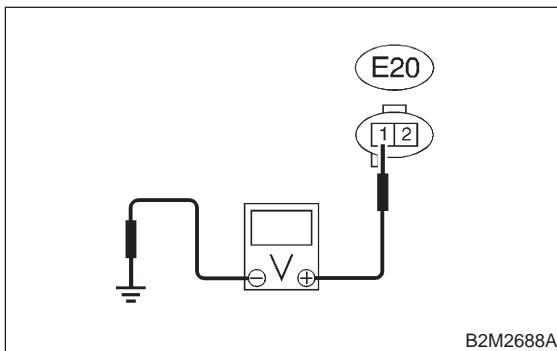


- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in harness between intake air temperature sensor and ECM connector.
- NO** : Go to step **10G4**.

10G4 : CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.

Measure voltage between intake air temperature sensor connector and engine ground.

Connector & terminal

(E20) No. 1 (+) — Engine ground (-):

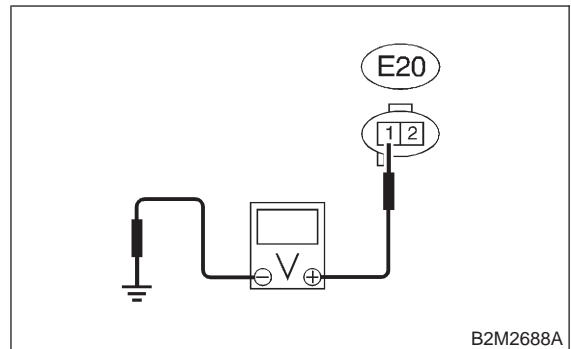

- CHECK** : **Is the voltage more than 3 V?**
- YES** : Go to step **10G5**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between intake air temperature sensor and ECM connector
- Poor contact in intake air temperature sensor
- Poor contact in ECM
- Poor contact in coupling connector (B21)

10G5 : CHECK HARNESS BETWEEN INTAKE AIR TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness between intake air temperature sensor connector and engine ground.

Connector & terminal

(E20) No. 2 — Engine ground:

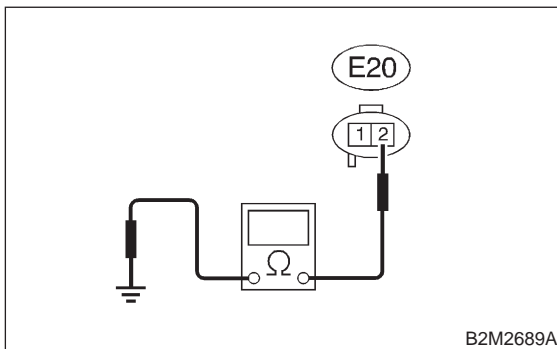

CHECK : **Is the resistance less than 5 Ω?**

YES : Replace intake air temperature sensor.
<Ref. to 2-7 [W21A0].>

NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between intake air temperature sensor and ECM connector
- Poor contact in intake air temperature sensor
- Poor contact in ECM
- Poor contact in coupling connector (B21) and (B171)


H: DTC P0116 — ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Hard to start
 - Erroneous idling
 - Poor driving performance

CAUTION:


After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

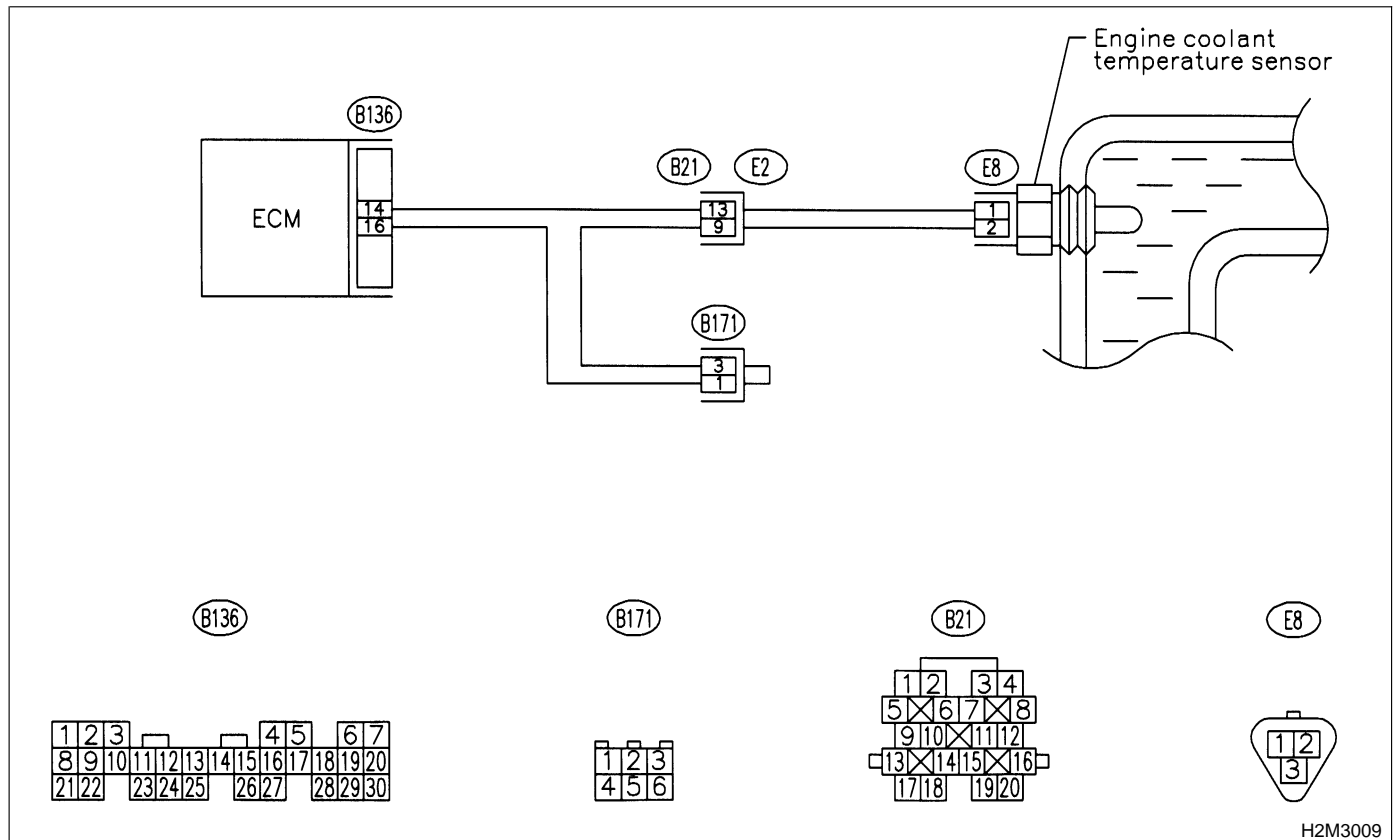

10H1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

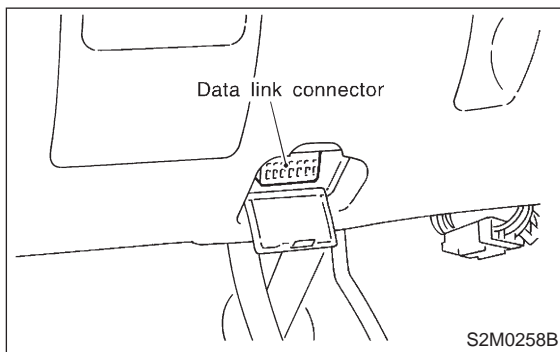

- 3) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value greater than 120°C (248°F)?*

YES : Go to step 10H2.

NO : Repair poor contact.


NOTE:

In this case, repair the following:


- Poor contact in engine coolant temperature sensor
- Poor contact in ECM
- Poor contact in coupling connector (B21) and (B171)

10H2 : CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.


- 1) Turn ignition switch to OFF.
- 2) Remove air intake duct and air cleaner case assembly as a unit.

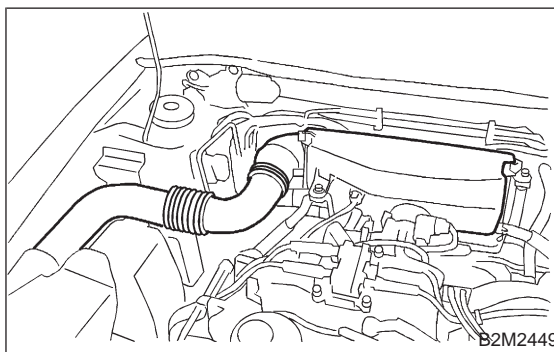

- 3) Remove engine harness connector bracket from cylinder block.

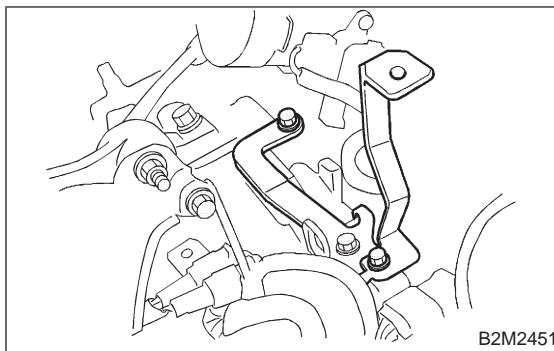

- 4) Remove blow-by hoses.

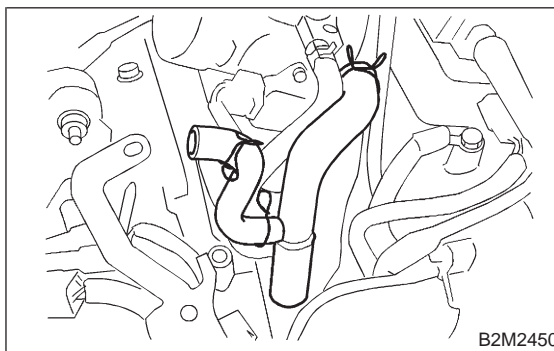

- 5) Disconnect connector from engine coolant temperature sensor.
- 6) Turn ignition switch and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 7) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : ***Is the value less than -40°C (-40°F)?***
- YES** : Replace engine coolant temperature sensor. <Ref. to 2-7 [W5A1].>
- NO** : Repair ground short circuit in harness between engine coolant temperature sensor and ECM connector.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10H2] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


I: DTC P0117 — ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Hard to start
 - Erroneous idling
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

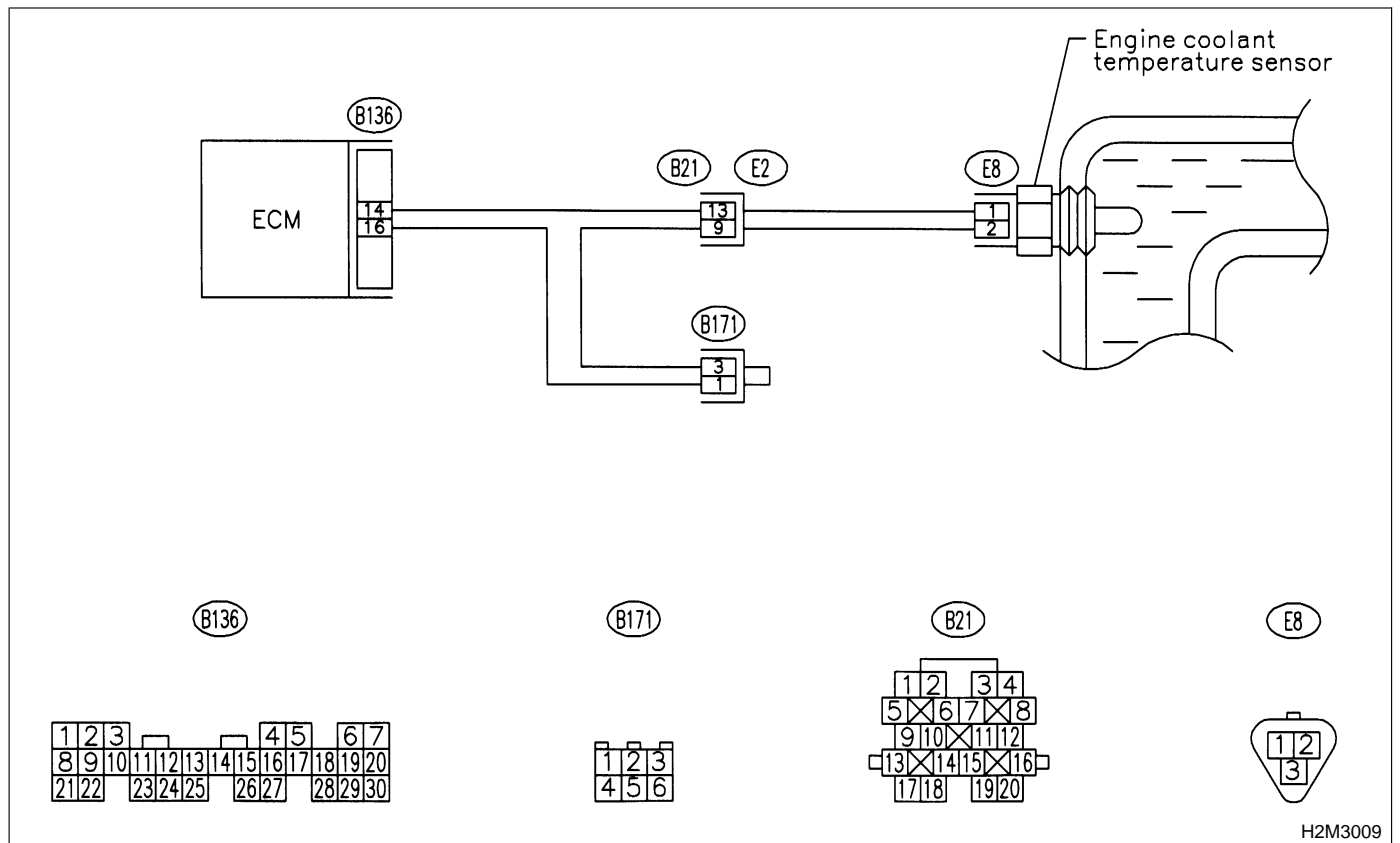

H2M3009

10I1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

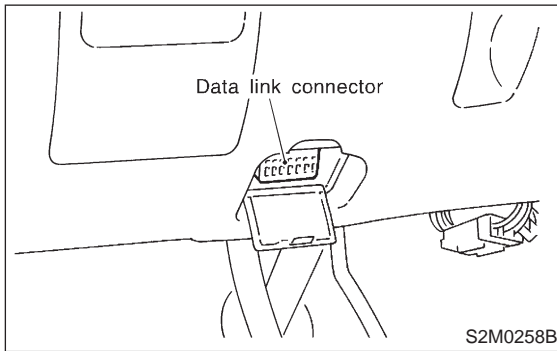

- 3) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value less than -40°C (-40°F)?*
- YES** : Go to step **10I2**.
- NO** : Repair poor contact.


NOTE:

In this case, repair the following:


- Poor contact in engine coolant temperature sensor
- Poor contact in ECM
- Poor contact in coupling connector (B21) and (B171)

10I2 : CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Remove air intake duct and air cleaner case assembly as a unit.

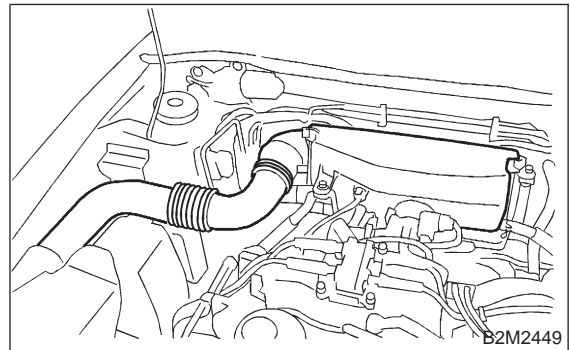

- 3) Remove engine harness connector bracket from cylinder block.

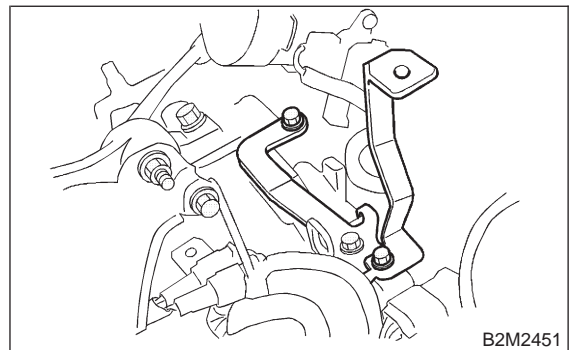

- 4) Remove blow-by hoses.




- 5) Disconnect connector from engine coolant temperature sensor.

6) Measure voltage between engine coolant temperature sensor connector and engine ground.

Connector & terminal

(E8) No. 1 (+) — Engine ground (-):

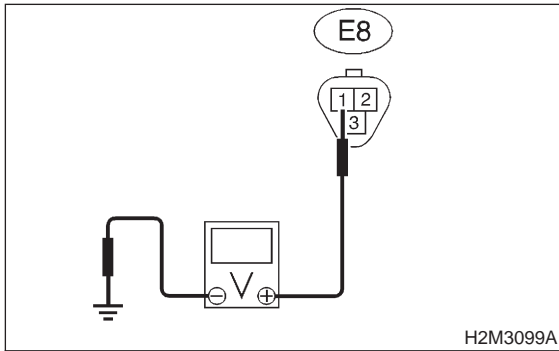


- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in harness between ECM and engine coolant temperature sensor connector.
- NO** : Go to step 1013.

1013 : CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between engine coolant temperature sensor connector and engine ground.

Connector & terminal

(E8) No. 1 (+) — Engine ground (-):

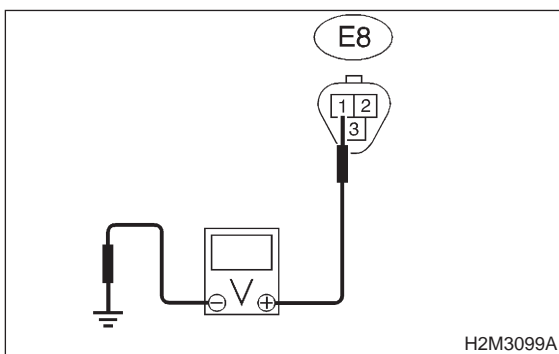


- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in harness between ECM and engine coolant temperature sensor connector.
- NO** : Go to step 1014.

1014 : CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.

Measure voltage between engine coolant temperature sensor connector and engine ground.

Connector & terminal

(E8) No. 1 (+) — Engine ground (-):

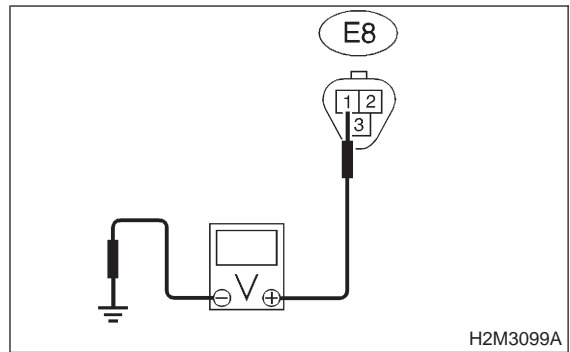

- CHECK** : **Is the voltage more than 4 V?**
- YES** : Go to step 1015.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and engine coolant temperature sensor connector
- Poor contact in engine coolant temperature sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)

1015 : CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness between engine coolant temperature sensor connector and engine ground.

Connector & terminal

(E8) No. 2 — Engine ground:

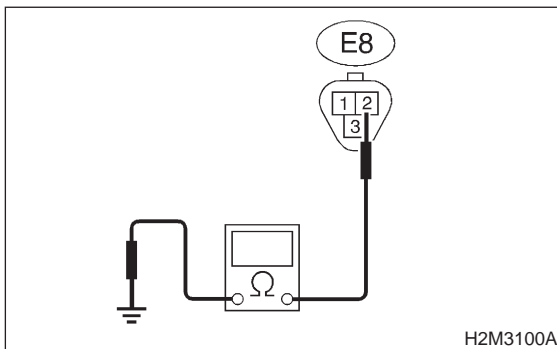

CHECK : **Is the resistance less than 5 Ω?**

YES : Replace engine coolant temperature sensor. <Ref. to 2-7 [W5A1].>

NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and engine coolant temperature sensor connector
- Poor contact in engine coolant temperature sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21) and (B171)


J: DTC P0121 — THROTTLE POSITION SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (HIGH INPUT) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

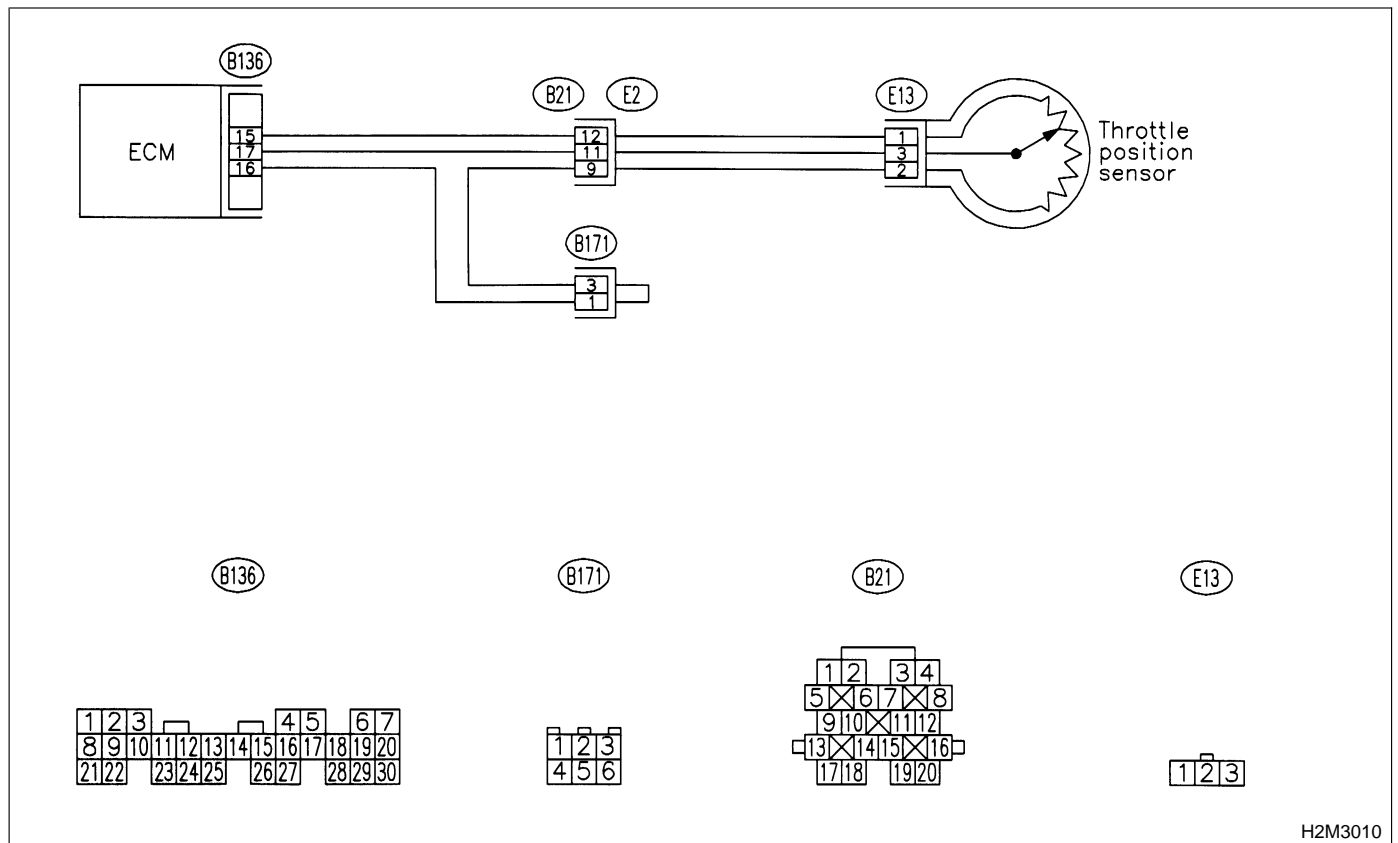

H2M3010

10J1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0107, P0108, P0122 or P0123?
- YES** : Inspect DTC P0107, P0108, P0122 or P0123 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>


NOTE:

In this case, it is not necessary to inspect DTC P0121.

- NO** : Go to step 10J2.

10J2 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

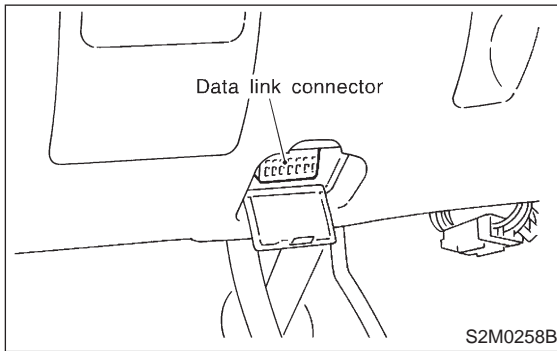

- 3) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value more than 53.3 kPa (400 mmHg, 15.75 inHg)?*
- YES** : Replace intake manifold pressure sensor. <Ref. to 2-7 [W20A0].>
- NO** : Replace throttle position sensor. <Ref. to 2-7 [W9A1].>

K: DTC P0122 — THROTTLE POSITION SENSOR CIRCUIT LOW INPUT —


- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

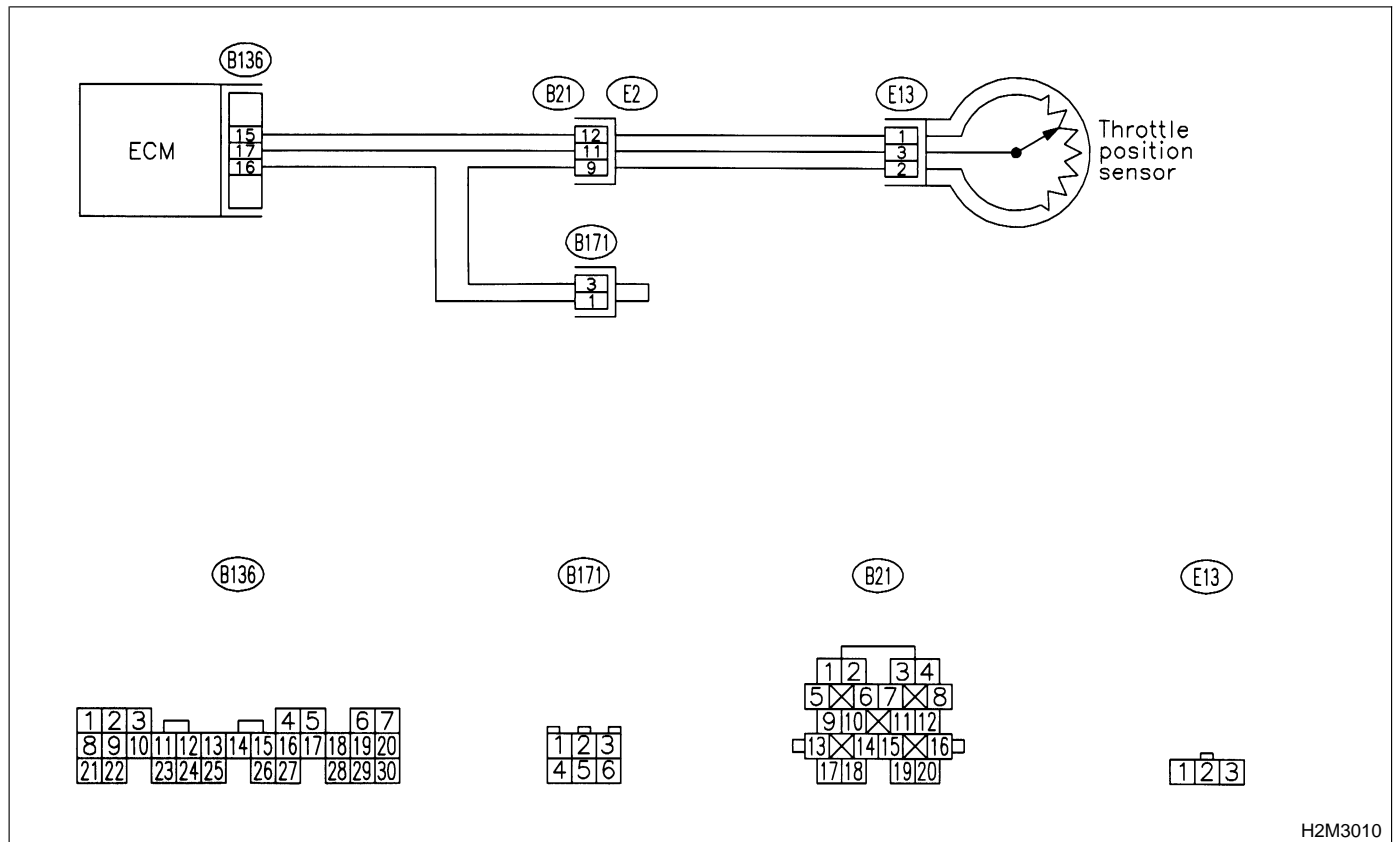

H2M3010

10K1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

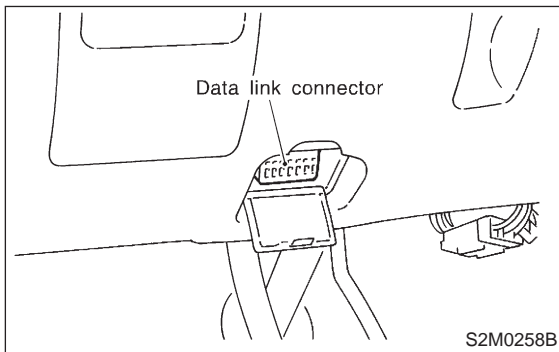

- 3) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value less than 0.1 V?*

YES : Go to step **10K2**.

NO : Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause.

NOTE:

In this case, repair the following:


- Poor contact in throttle position sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21) and (B171)

10K2 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground while throttle valve is fully closed.

Connector & terminal

(B136) No. 15 (+) — Chassis ground (-):

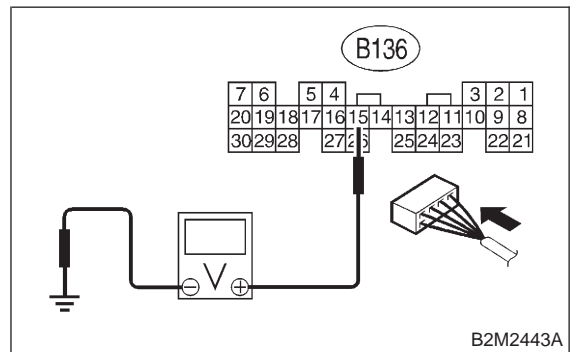

CHECK : *Is the voltage more than 4.5 V?*

YES : Go to step **10K4**.


NO : Go to step **10K3**.

10K3 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 15 (+) — Chassis ground (-):

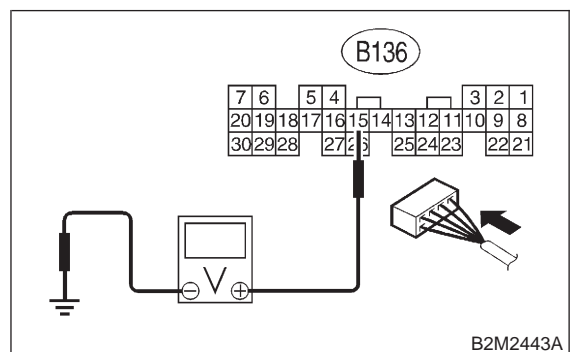

CHECK : *Does the voltage change more than 4.5 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*

YES : Repair poor contact in ECM connector.

NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

2-7 [T10K4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10K4 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 17 (+) — Chassis ground (-):

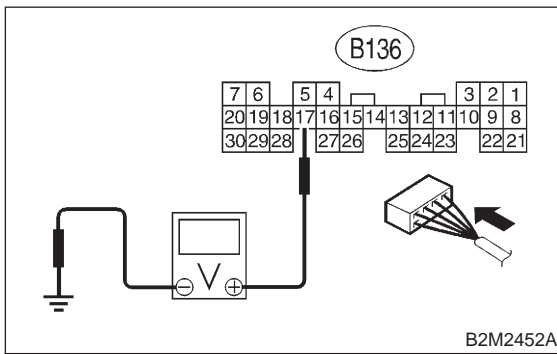

- CHECK** : Is the voltage less than 0.1 V?
YES : Go to step 10K6.
NO : Go to step 10K5.

10K5 : CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)

Measure voltage between ECM connector and chassis ground.


- CHECK** : Does the voltage change more than 0.1 V by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?
YES : Repair poor contact in ECM connector.
NO : Go to step 10K6.

10K6 : CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from throttle position sensor.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between throttle position sensor connector and engine ground.

Connector & terminal

(E13) No. 1 (+) — Engine ground (-):

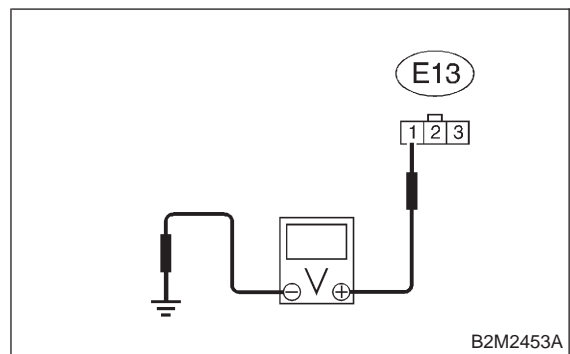

- CHECK** : Is the voltage more than 4.5 V?
YES : Go to step 10K7.
NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between throttle position sensor and ECM connector
- Poor contact in throttle position sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)

10K7 : CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness between ECM connector and throttle position sensor connector.

Connector & terminal

(B136) No. 17 — (E13) No. 3:

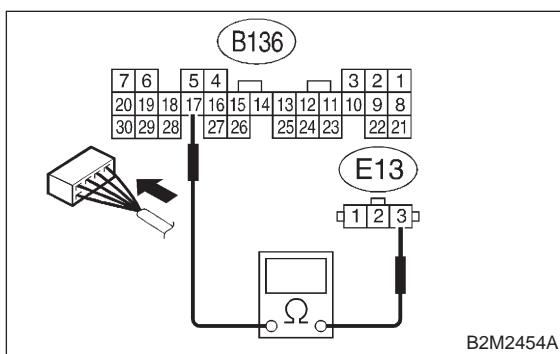

CHECK : Is the resistance less than 1 Ω?

YES : Go to step 10K8.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between throttle position sensor and ECM connector
- Poor contact in ECM connector
- Poor contact in throttle position sensor connector
- Poor contact in coupling connector (B21) and (B171)

10K8 : CHECK HARNESS BETWEEN ECM AND THROTTLE POSITION SENSOR CONNECTOR.

Measure resistance of harness between throttle position sensor connector and engine ground.

Connector & terminal

(E13) No. 3 — Engine ground:

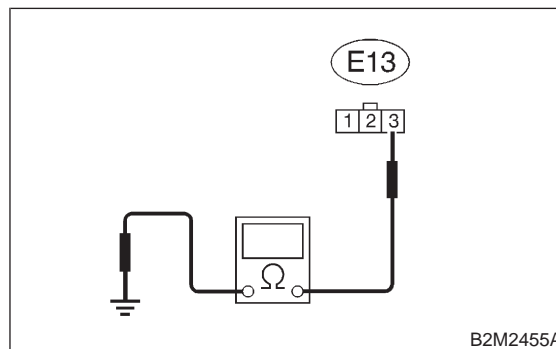

CHECK : Is the resistance less than 10 Ω?

YES : Repair ground short circuit in harness between throttle position sensor and ECM connector.

NO : Go to step 10K9.

10K9 : CHECK POOR CONTACT.

Check poor contact in throttle position sensor connector. <Ref. to FOREWORD [T3C1].>

CHECK : Is there poor contact in throttle position sensor connector?

YES : Repair poor contact in throttle position sensor connector.

NO : Replace throttle position sensor. <Ref. to 2-7 [W9A1].>

L: DTC P0123 — THROTTLE POSITION SENSOR CIRCUIT HIGH INPUT —


- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

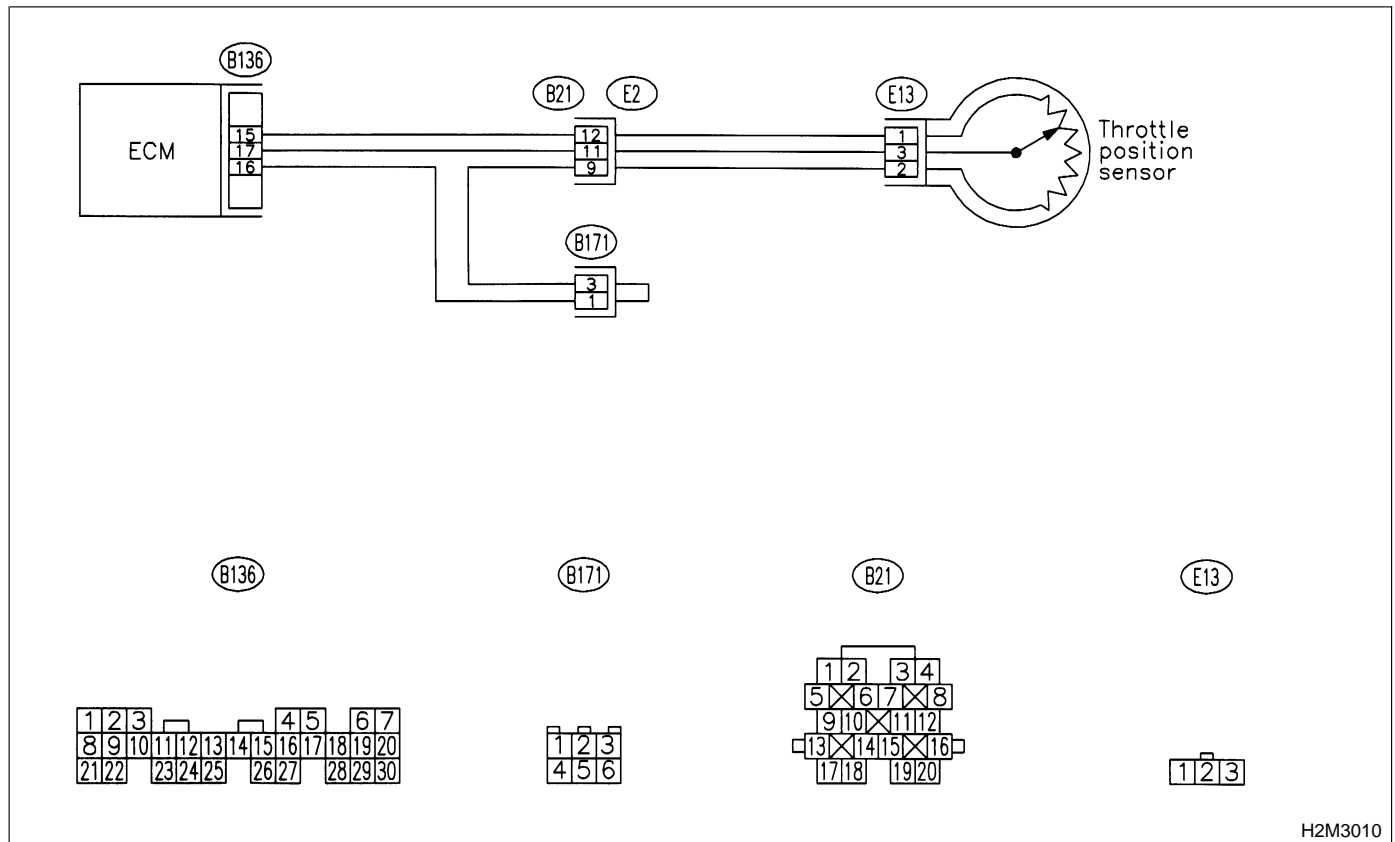


ON-BOARD DIAGNOSTICS II SYSTEM

[T10L2] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10L1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

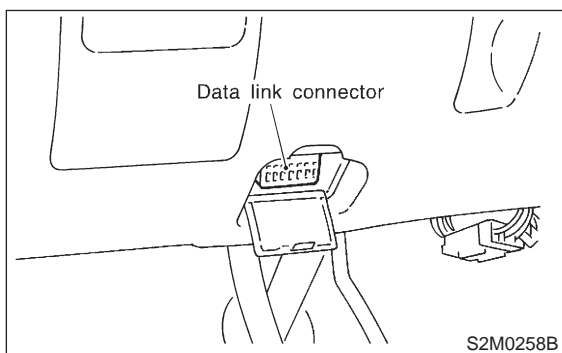

- 3) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read data of throttle position sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value more than 4.9 V?*

YES : Go to step **10L2**.

NO : Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause.

NOTE:

In this case, repair the following:


- Poor contact in throttle position sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21) and (B171)

10L2 : CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from throttle position sensor.
- 3) Measure resistance of harness between throttle position sensor connector and engine ground.

Connector & terminal

(E13) No. 2 — Engine ground:

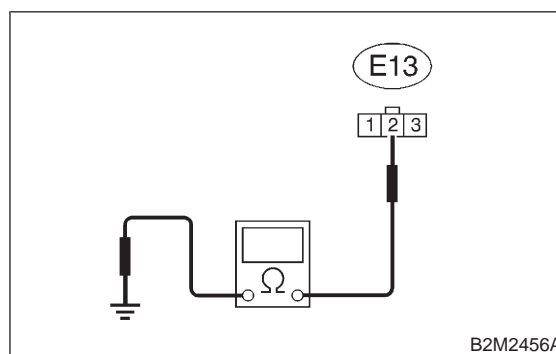

CHECK : *Is the resistance less than 5 Ω?*

YES : Go to step **10L3**.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between throttle position sensor and ECM connector
- Poor contact in coupling connector (B21) and (B171)

10L3 : CHECK HARNESS BETWEEN THROTTLE POSITION SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between throttle position sensor connector and engine ground.

Connector & terminal

(E13) No. 3 (+) — Engine ground (-):

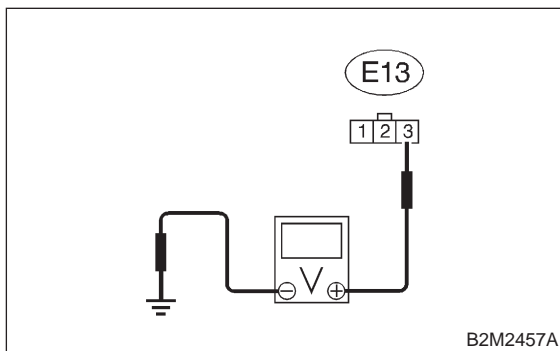

- CHECK** : **Is the voltage more than 4.9 V?**
- YES** : Repair battery short circuit in harness between throttle position sensor and ECM connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Replace throttle position sensor. <Ref. to 2-7 [W9A1].>


M: DTC P0125 — INSUFFICIENT COOLANT TEMPERATURE FOR CLOSED LOOP FUEL CONTROL —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine would not return to idling.

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

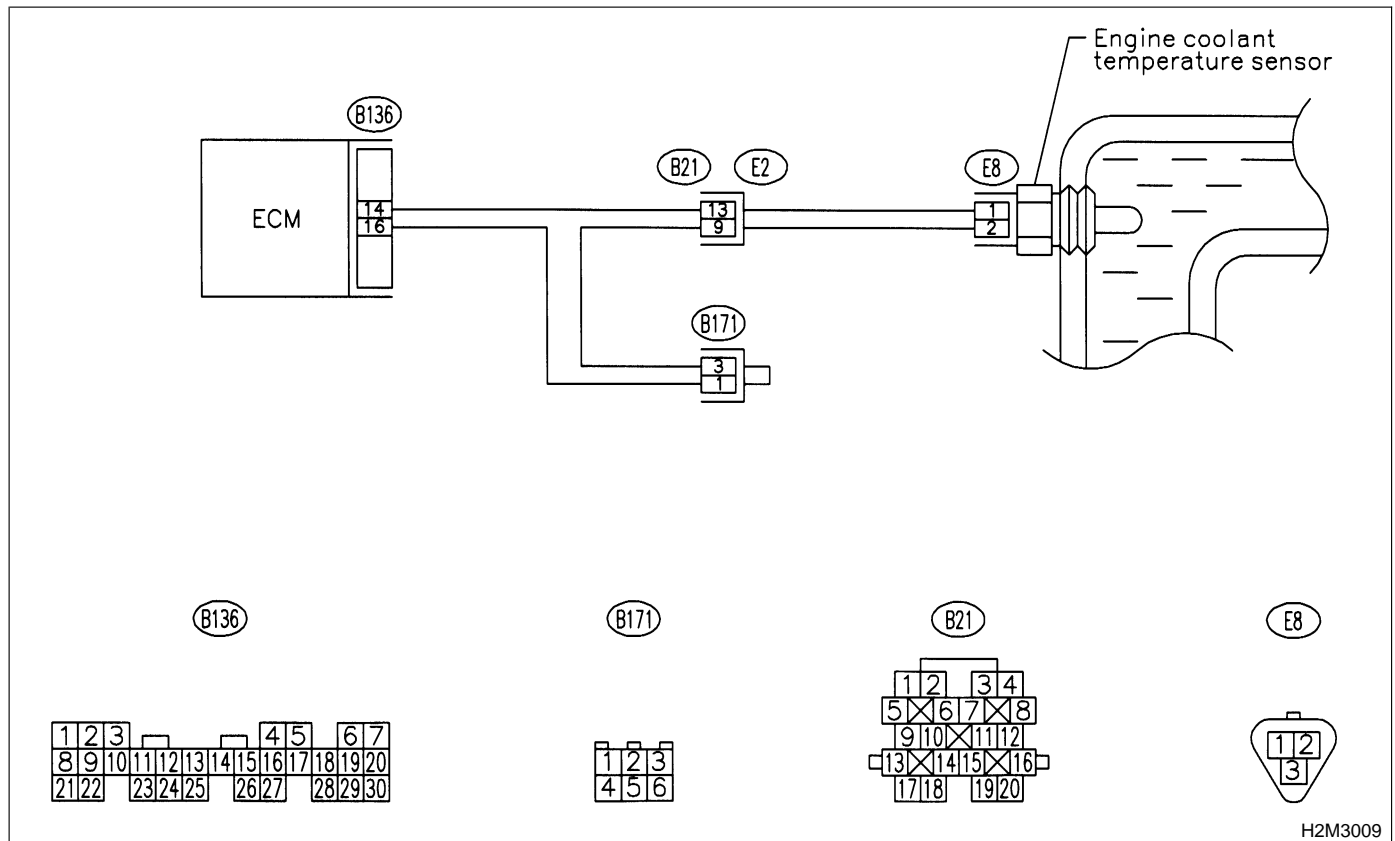

H2M3009

10M1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0116 or P0117?
- YES** : Inspect DTC P0116 or P0117 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:
In this case, it is not necessary to inspect DTC P0125.

- NO** : Replace engine coolant temperature sensor. <Ref. to 2-7 [W5A1].>

N: DTC P0131 — FRONT OXYGEN (A/F) SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (LOW INPUT) —

NOTE:

For the diagnostic procedure, refer to 2-7 [T10O0]. <Ref. to 2-7 [T10O0].>

O: DTC P0132 — FRONT OXYGEN (A/F) SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (HIGH INPUT) —


● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>.

● **WIRING DIAGRAM:**

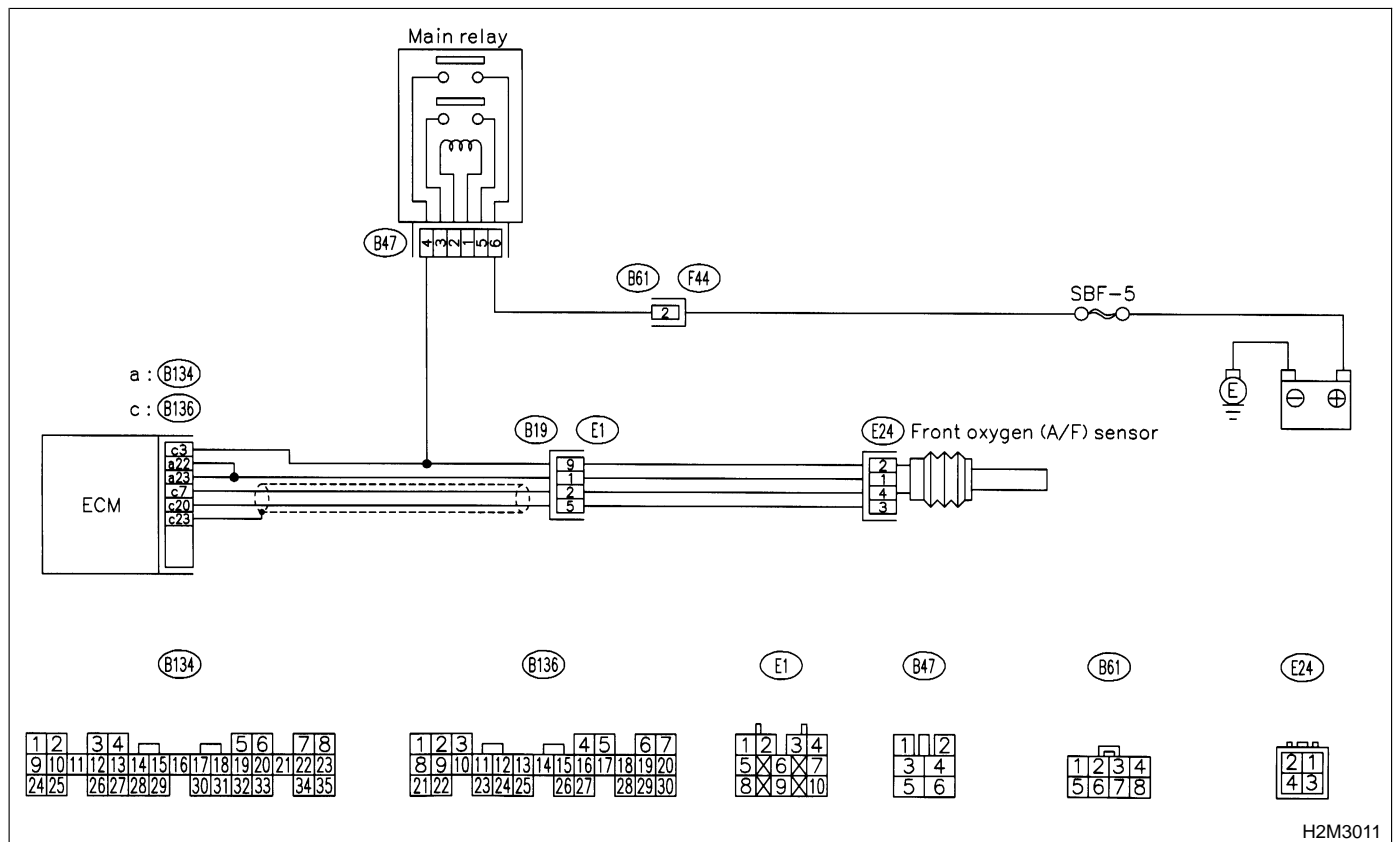

H2M3011

1001 : CHECK ANY OTHER DTC ON DISPLAY.


CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1130 or P1131?

YES : Inspect DTC P1130 or P1131 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NO : Go to step **1002**.

1002 : CHECK FRONT (A/F) OXYGEN SENSOR DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect the Subaru Select Monitor or the OBD-II general scan tool to data link connector.

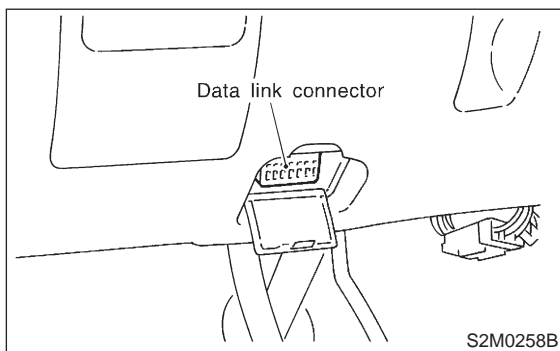

- 3) Start engine and Turn the Subaru Select Monitor and the OBD-II general scan tool switch to ON.
- 4) Warm-up the engine until coolant temperature is above 70°C (160°F).
- 5) Read data of front oxygen (A/F) sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value equal to or more than 0.85 and equal to less than 1.15?*
- YES** : Go to step **1003**.
- NO** : Go to step **1004**.

1003 : CHECK REAR OXYGEN SENSOR SIGNAL.

- 1) Race engine at speeds from idling to 5,000 rpm for a total of 5 cycles.
- 2) Operate the LED operation mode for engine.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "LED OPERATION MODE FOR ENGINE". <Ref. to 2-7 [T3C8].>

- CHECK** : *Does the LED of {Rear O2 Rich Signal} blink?*
- YES** : Repair poor contact in front oxygen (A/F) sensor and rear oxygen sensor connector.
- NO** : Check rear oxygen sensor circuit. <Ref. to 2-7 [T10Q0].>

1004 : CHECK EXHAUST SYSTEM.

Check exhaust system parts.

NOTE:

- Check the following items.
- Loose installation of portions
 - Damage (crack, hole etc.) of parts
 - Looseness of front oxygen (A/F) sensor
 - Looseness and ill fitting of parts between front oxygen (A/F) sensor and rear oxygen sensor

- CHECK** : *Is there a fault in exhaust system?*
- YES** : Repair or replace faulty parts.
- NO** : Replace front oxygen (A/F) sensor. <Ref. to 2-7 [W7A0].>

P: DTC P0133 — FRONT OXYGEN (A/F) SENSOR CIRCUIT SLOW RESPONSE —


● DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● WIRING DIAGRAM:

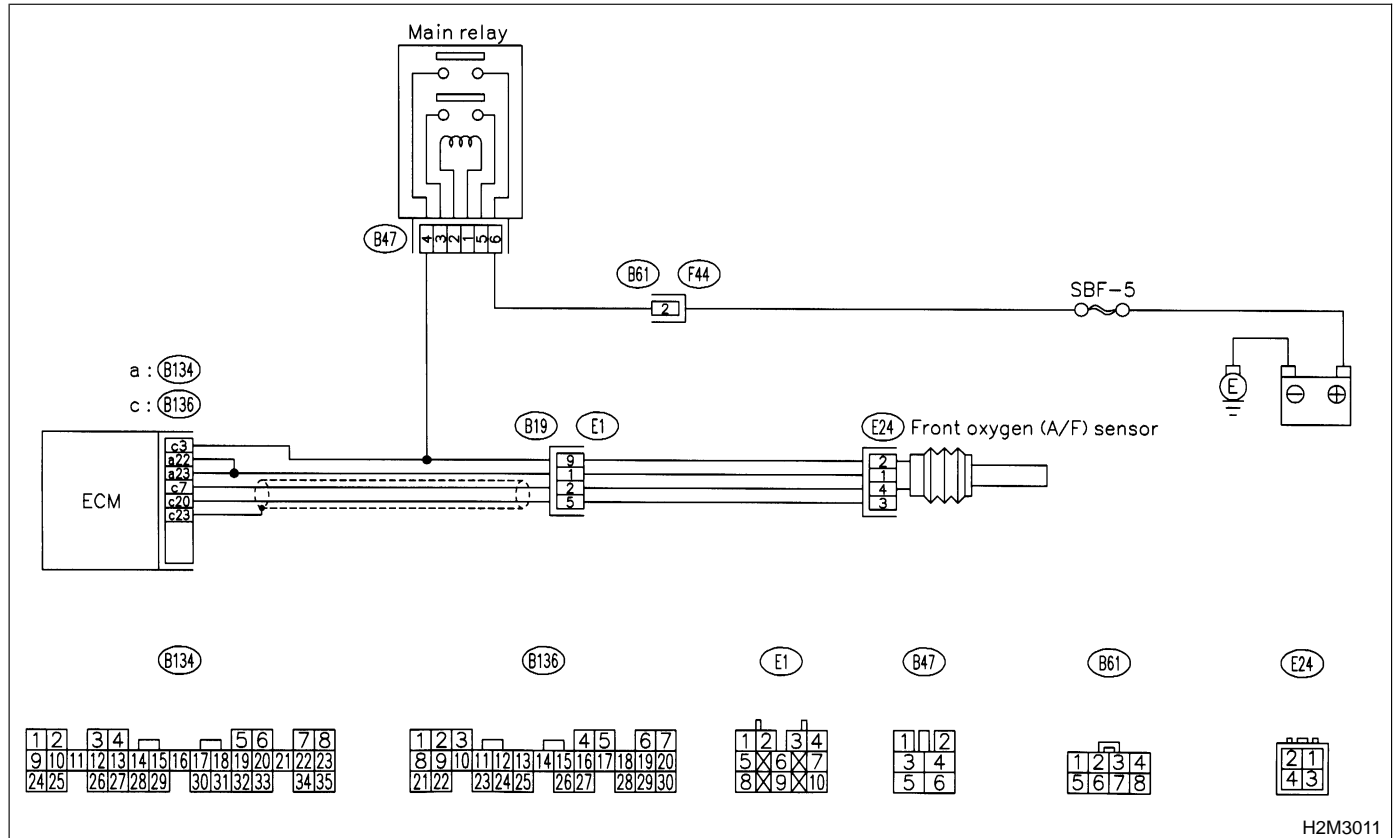

H2M3011

10P1 : CHECK ANY OTHER DTC ON DISPLAY.

10P2 : CHECK EXHAUST SYSTEM.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1130 or P1131?
- YES** : Inspect DTC P1130 or P1131 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:
In this case, it is not necessary to inspect DTC P0133.

NO : Go to step 10P2.

- NOTE:**
Check the following items.
- Loose installation of front portion of exhaust pipe onto cylinder heads
 - Loose connection between front exhaust pipe and front catalytic converter
 - Damage of exhaust pipe resulting in a hole
- CHECK** : Is there a fault in exhaust system?
- YES** : Repair exhaust system.
- NO** : Replace front oxygen (A/F) sensor. <Ref. to 2-7 [W7A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10P2] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


Q: DTC P0136 — REAR OXYGEN SENSOR CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

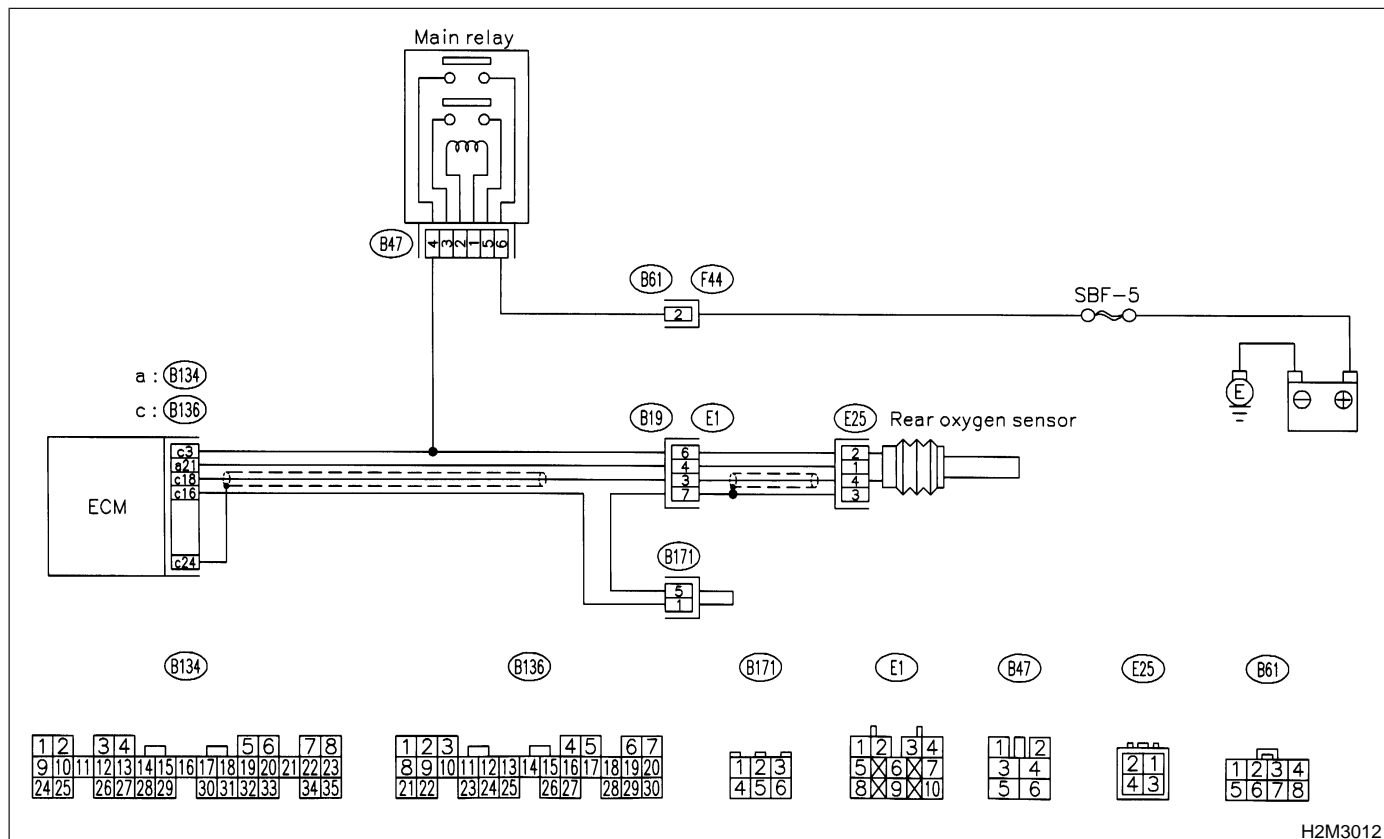

10Q1 : CHECK ANY OTHER DTC ON DISPLAY.

10Q2 : CHECK FAILURE CAUSE OF P1130 OR P1131.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1130 or P1131?
- YES** : Go to step 10Q2.
- NO** : Go to step 10Q3.

Inspect DTC P1130 or P1131 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>


- CHECK** : Is the failure cause of P1130 or P1131 in the fuel system?
- YES** : Check fuel system.

NOTE:
In this case, it is not necessary to inspect DTC P0136.

- NO** : Go to step 10Q3.

10Q3 : CHECK REAR OXYGEN SENSOR DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or OBD-II general scan tool to data link connector.

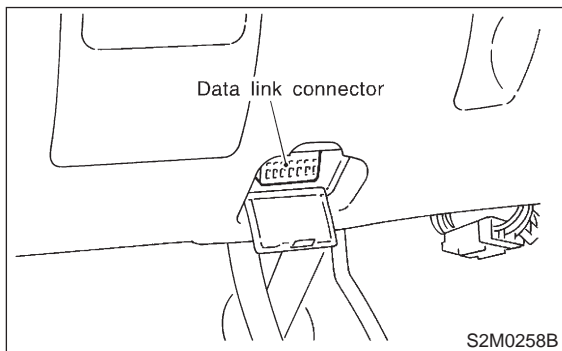

- 3) Start the engine, and turn Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Warm-up the engine until engine coolant temperature is above 70°C (160°F), and keep the engine speed at 2,000 rpm to 3,000 rpm for two minutes.
- 5) Read data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : **Does the value fluctuate?**
- YES** : Go to step **10Q7**.
- NO** : Go to step **10Q4**.

10Q4 : CHECK REAR OXYGEN SENSOR DATA.

Read data of rear oxygen sensor signal using Subaru Select Monitor or OBD-II General Scan Tool.


- CHECK** : **Is the value fixed between 0.2 and 0.4 V?**
- YES** : Go to step **10Q5**.
- NO** : Replace rear oxygen sensor. <Ref. to 2-7 [W8A0].>

10Q5 : CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM and rear oxygen sensor.
- 3) Measure resistance of harness between ECM and rear oxygen sensor connector.

Connector & terminal

(B136) No. 16 — (E25) No. 3:

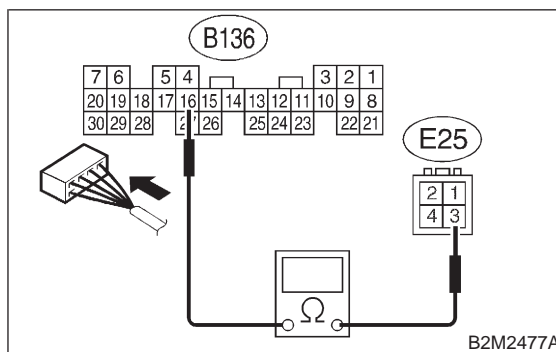


- CHECK** : **Is the resistance more than 3 Ω?**
- YES** : Repair open circuit in harness between ECM and rear oxygen sensor connector.
- NO** : Go to step **10Q6**.

10Q6 : CHECK HARNESS BETWEEN REAR OXYGEN SENSOR AND ECM CONNECTOR.

- 1) Connect connector to ECM.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between rear oxygen sensor harness connector and engine ground or chassis ground.

Connector & terminal

(E25) No. 1 (+) — Engine ground (-):

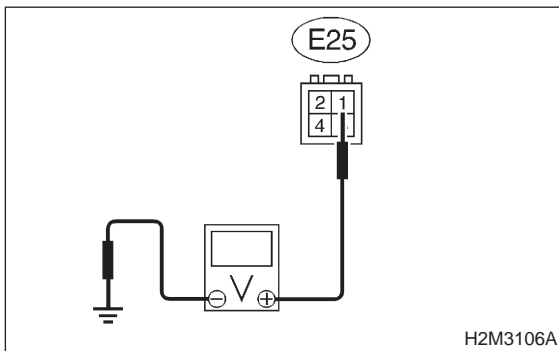

- CHECK** : **Is the voltage more than 0.2 V?**
- YES** : Replace rear oxygen sensor. <Ref. to 2-7 [W8A0].>
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between rear oxygen sensor and ECM connector
- Poor contact in rear oxygen sensor connector
- Poor contact in ECM connector

10Q7 : CHECK EXHAUST SYSTEM.

Check exhaust system parts.

NOTE:

Check the following items.

- Loose installation of portions
- Damage (crack, hole etc.) of parts
- Looseness and ill fitting of parts between front oxygen sensor and rear oxygen sensor

- CHECK** : **Is there a fault in exhaust system?**
- YES** : Repair or replace faulty parts.
- NO** : Replace rear oxygen sensor. <Ref. to 2-7 [W8A0].>


R: DTC P0139 — REAR OXYGEN SENSOR CIRCUIT SLOW RESPONSE —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

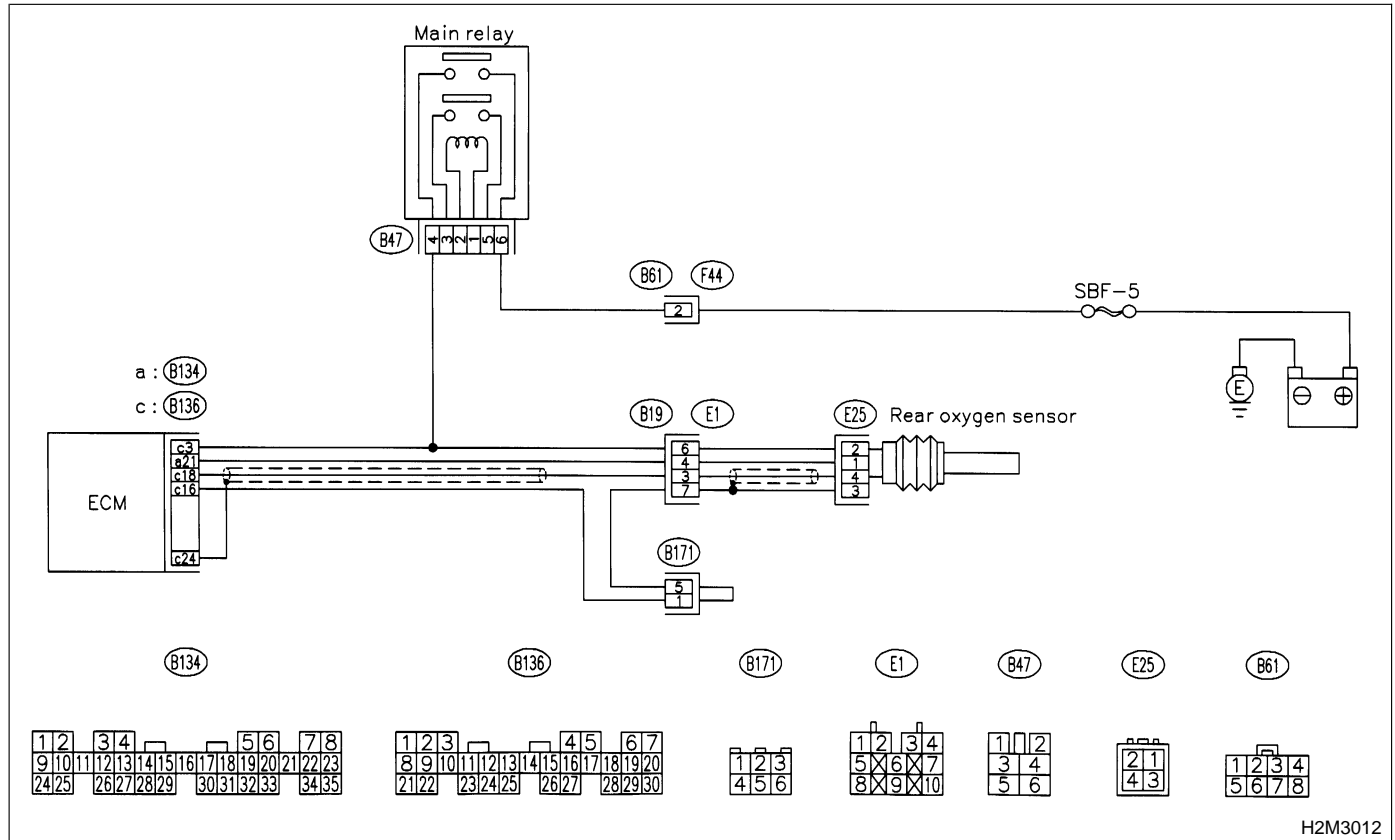

H2M3012

10R1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0136?

YES : Inspect DTC P0136 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:
In this case, it is not necessary to inspect DTC P0139.

NO : Replace rear oxygen sensor. <Ref. to 2-7 [W8A0].>


S: DTC P0141 — REAR OXYGEN SENSOR HEATER CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

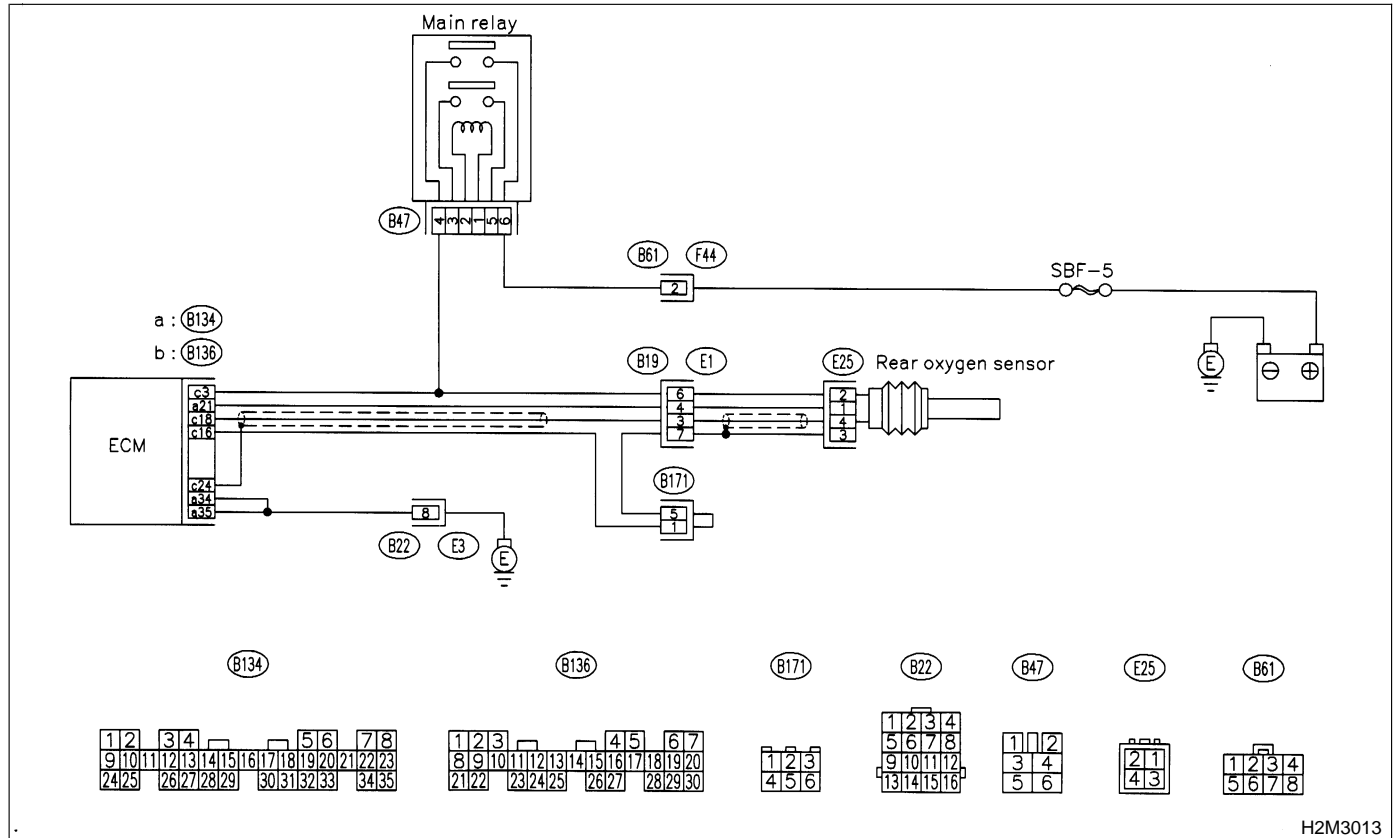

H2M3013

10S1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0141 and P0135 at the same time?

YES : Go to step 10S2.


NO : Go to step 10S3.

10S2 : CHECK GROUND CIRCUIT OF ECM.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal

(B134) No. 35 — Chassis ground:

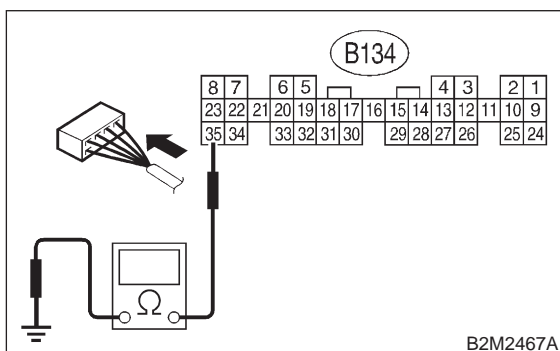

- CHECK** : Is the resistance less than 10 Ω?
- YES** : Go to step 10S4.
- NO** : Go to step 10S3.

10S3 : CHECK GROUND CIRCUIT OF ECM.

- 1) Repair harness and connector.

NOTE:


In this case, repair the following:

- Open circuit in harness between ECM and engine ground terminal
- Poor contact in ECM connector
- Poor contact in coupling connector (B22)

- 2) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal

(B134) No. 34 — Chassis ground:

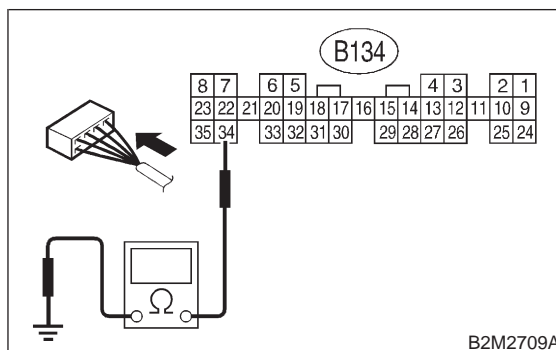

- CHECK** : Is the resistance less than 5 Ω?
- YES** : Go to step 10S4.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and engine ground terminal
- Poor contact in ECM connector
- Poor contact in coupling connector (B22)

10S4 : CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.

Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal

(B134) No. 21 — Chassis ground:

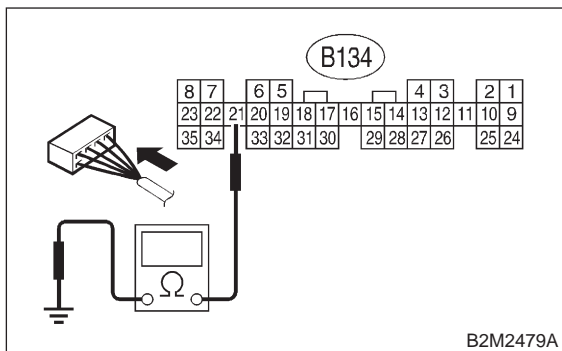


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between ECM and rear oxygen sensor connector.
- NO** : Go to step 10S5.

10S5 : CHECK HARNESS BETWEEN ECM AND REAR OXYGEN SENSOR CONNECTOR.

- 1) Disconnect connector from rear oxygen sensor.
- 2) Measure resistance of harness between ECM and rear oxygen sensor connector.

Connector & terminal

(B134) No. 21 — (E25) No. 4:

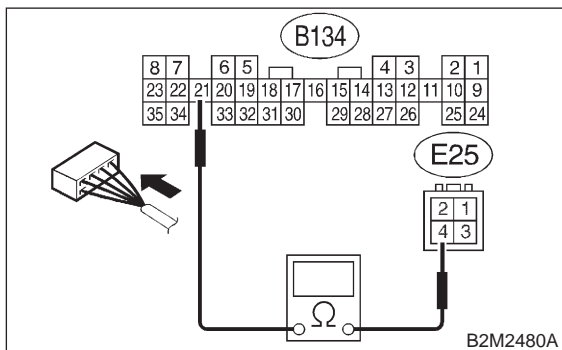


- CHECK** : *Is the resistance less than 3 Ω?*
- YES** : Go to step 10S6.
- NO** : Repair open circuit in harness between ECM and rear oxygen sensor connector.

10S6 : CHECK POWER SUPPLY TO REAR OXYGEN SENSOR.

- 1) Connect connector to ECM.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between rear oxygen sensor connector and engine ground or chassis ground.

Connector & terminal

(E25) No. 2 (+) — Engine ground (-):

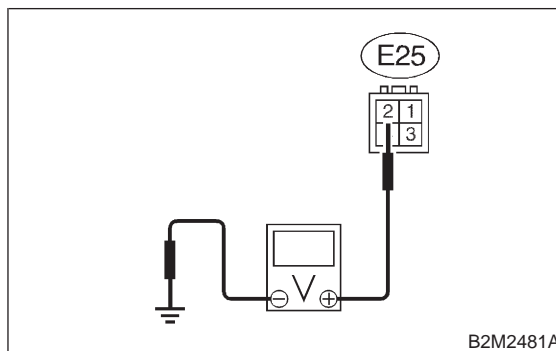

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step 10S7.
- NO** : Repair power supply line.

NOTE:

In this case, repair the following:


- Open circuit in harness between main relay and rear oxygen sensor connector
- Poor contact in rear oxygen sensor connector
- Poor contact in coupling connector (E1)

10S7 : CHECK REAR OXYGEN SENSOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between rear oxygen sensor connector terminals.

Terminals

No. 2 — No. 4:

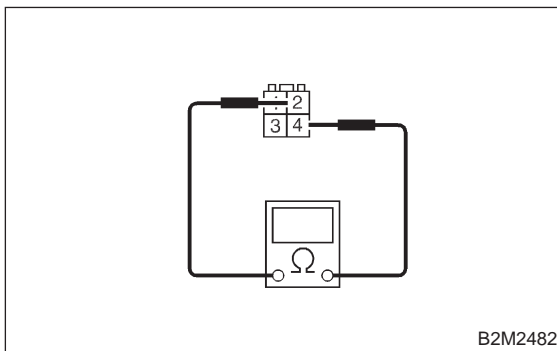

CHECK : *Is the resistance less than 30 Ω?*

YES : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between rear oxygen sensor and ECM connector
- Poor contact in rear oxygen sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (E1)

NO : Replace rear oxygen sensor. <Ref. to 2-7 [W8A0].>

T: DTC P0171 — FUEL TRIM MALFUNCTION (A/F TOO LEAN) —**NOTE:**

For the diagnostic procedure, refer to 2-7 [T10U0]. <Ref. to 2-7 [T10U0].>

U: DTC P0172 — FUEL TRIM MALFUNCTION (A/F TOO RICH) —**● DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

● TROUBLE SYMPTOM:

- Erroneous idling
- Engine stalls.
- Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>.

10U1 : CHECK EXHAUST SYSTEM.

CHECK : Are there holes or loose bolts on exhaust system?

YES : Repair exhaust system.

NO : Go to step 10U2.

10U2 : CHECK AIR INTAKE SYSTEM.

CHECK : Are there holes, loose bolts or disconnection of hose on air intake system?


YES : Repair air intake system.

NO : Go to step 10U3.


10U3 : CHECK FUEL PRESSURE.

1) Release fuel pressure.

- (1) Remove fuel pump access hole lid located on the right rear of trunk compartment floor (Sedan) or luggage compartment floor (Wagon).

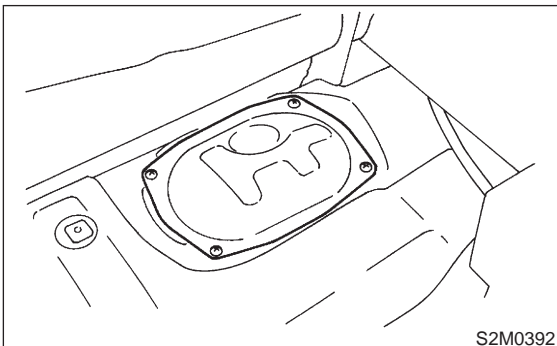

2) Disconnect connector from fuel tank.

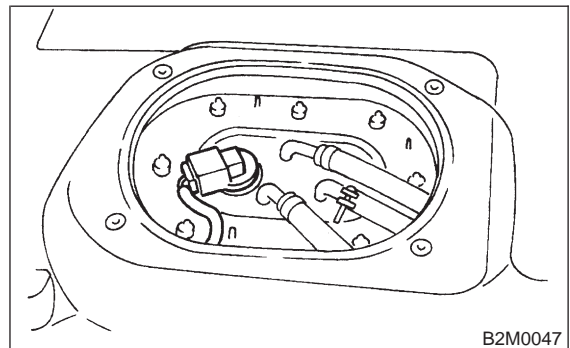


(3) Start the engine, and run it until it stalls.

(4) After stopping the engine, crank the engine for 5 to 7 seconds to reduce fuel pressure.


(5) Turn ignition switch to OFF.

(6) Remove fuel filler cap.

2) Connect connector to fuel tank.

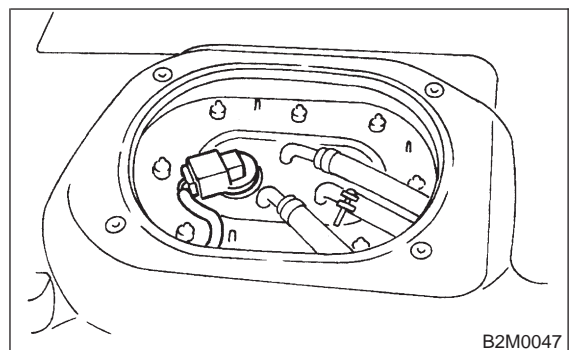


3) Disconnect fuel delivery hose from fuel filter, and connect fuel pressure gauge.

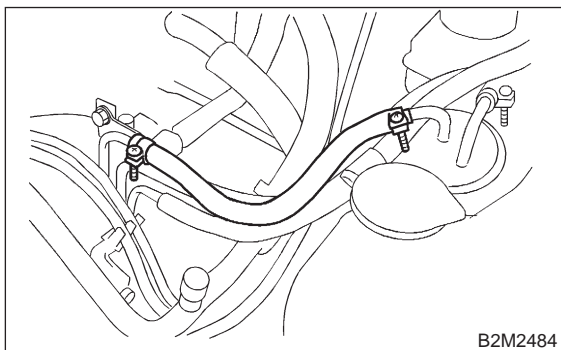

- 4) Install fuel filler cap.
- 5) Start the engine and idle while gear position is neutral.
- 6) Measure fuel pressure while disconnecting pressure regulator vacuum hose from intake manifold.

WARNING:
Before removing fuel pressure gauge, release fuel pressure.

NOTE:
If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again.

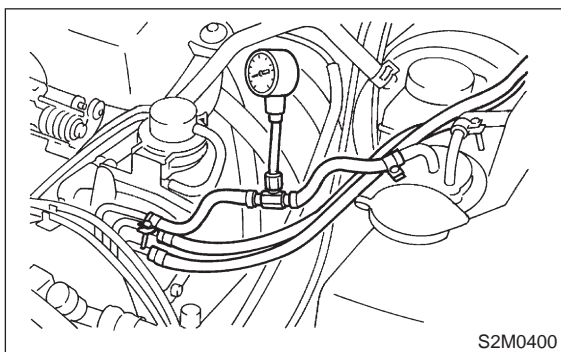

- CHECK** : *Is fuel pressure between 284 and 314 kPa (2.9 — 3.2 kg/cm², 41 — 46 psi)?*
- YES** : Go to step 10U4.
- NO** : Repair the following items.


Fuel pressure too high	<ul style="list-style-type: none"> ● Clogged fuel return line or bent hose
Fuel pressure too low	<ul style="list-style-type: none"> ● Improper fuel pump discharge ● Clogged fuel supply line

10U4 : CHECK FUEL PRESSURE.

After connecting pressure regulator vacuum hose, measure fuel pressure.

WARNING:
Before removing fuel pressure gauge, release fuel pressure.

- NOTE:**
- If fuel pressure does not increase, squeeze fuel return hose 2 to 3 times, then measure fuel pressure again.
 - If out of specification as measured at this step, check or replace pressure regulator and pressure regulator vacuum hose.

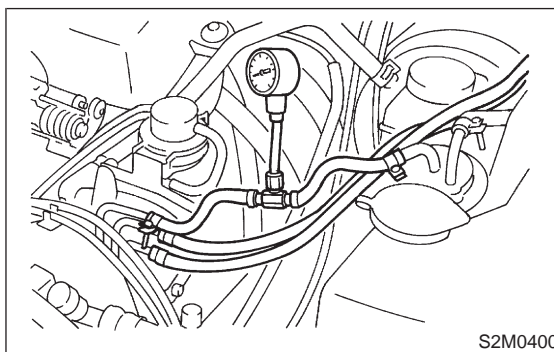

- CHECK** : *Is fuel pressure between 206 and 235 kPa (2.1 — 2.4 kg/cm², 30 — 34 psi)?*
- YES** : Go to step 10U5.
- NO** : Repair the following items.

Fuel pressure too high	<ul style="list-style-type: none"> ● Faulty pressure regulator ● Clogged fuel return line or bent hose
Fuel pressure too low	<ul style="list-style-type: none"> ● Faulty pressure regulator ● Improper fuel pump discharge ● Clogged fuel supply line

NOTE:
The fuel pressure gauge resisters 10 to 20 kPa (0.1 to 0.2 kg/cm², 1.4 to 2.8 psi) higher than standard values during high-altitude operations.


2-7 [T10U5]

ON-BOARD DIAGNOSTICS II SYSTEM

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10U5 : CHECK ENGINE COOLANT TEMPERATURE SENSOR. < REF. TO 2-7 [T10H0].> OR <REF. TO 2-7 [T10I0].>

- 1) Turn ignition switch to OFF.
- 2) Connect the Subaru Select Monitor or the OBD-II general scan tool to data link connector.

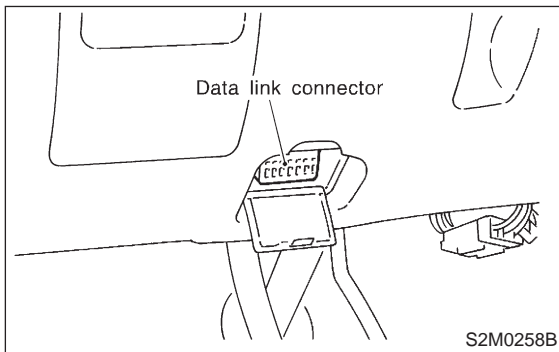

- 3) Start the engine and warm-up completely.
- 4) Read data of engine coolant temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : **Is temperature greater than 60°C (140°F)?**

YES : Go to step **10U6**.

NO : Replace engine coolant temperature sensor. <Ref. to 2-7 [W5A1].>

10U6 : CHECK INTAKE MANIFOLD PRESSURE SENSOR.

- 1) Start the engine and warm-up engine until coolant temperature is greater than 60°C (140°F).
- 2) Place the shift lever in neutral position (MT vehicles) or the selector lever in "N" or "P" position (AT vehicles).
- 3) Turn A/C switch to OFF.
- 4) Turn all accessory switches to OFF.
- 5) Read data of intake manifold pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.

Specification:

- Intake manifold absolute pressure

Engine speed	Specified value
Idling	20.0 — 46.7 kPa (150 — 350 mmHg, 5.91 — 13.78 inHg)
2,500 rpm	20.0 — 46.7 kPa (150 — 350 mmHg, 5.91 — 13.78 inHg)

CHECK : **Is the value within the specifications?**

YES : Go to step **10U7**.

NO : Replace intake manifold pressure sensor. <Ref. to 2-7 [W20A0].>

10U7 : CHECK INTAKE AIR TEMPERATURE SENSOR.

- 1) Start the engine and warm-up engine until coolant temperature is greater than 60°C (140°F).
- 2) Place the shift lever in neutral position (MT vehicles) or the selector lever in "N" or "P" position (AT vehicles).
- 3) Turn A/C switch to OFF.
- 4) Turn all accessory switches to OFF.
- 5) Open front hood.
- 6) Measure ambient temperature.
- 7) Read data of intake manifold pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is value obtained when ambient temperature is subtracted from intake air temperature greater than -10°C (14°F) and less than 50°C (122°F)?*

YES : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

NO : Check intake air temperature sensor.
<Ref. to 2-7 [T10E0].>


V: DTC P0181 — FUEL TEMPERATURE SENSOR A CIRCUIT RANGE/PERFORMANCE PROBLEM —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

- **WIRING DIAGRAM:**

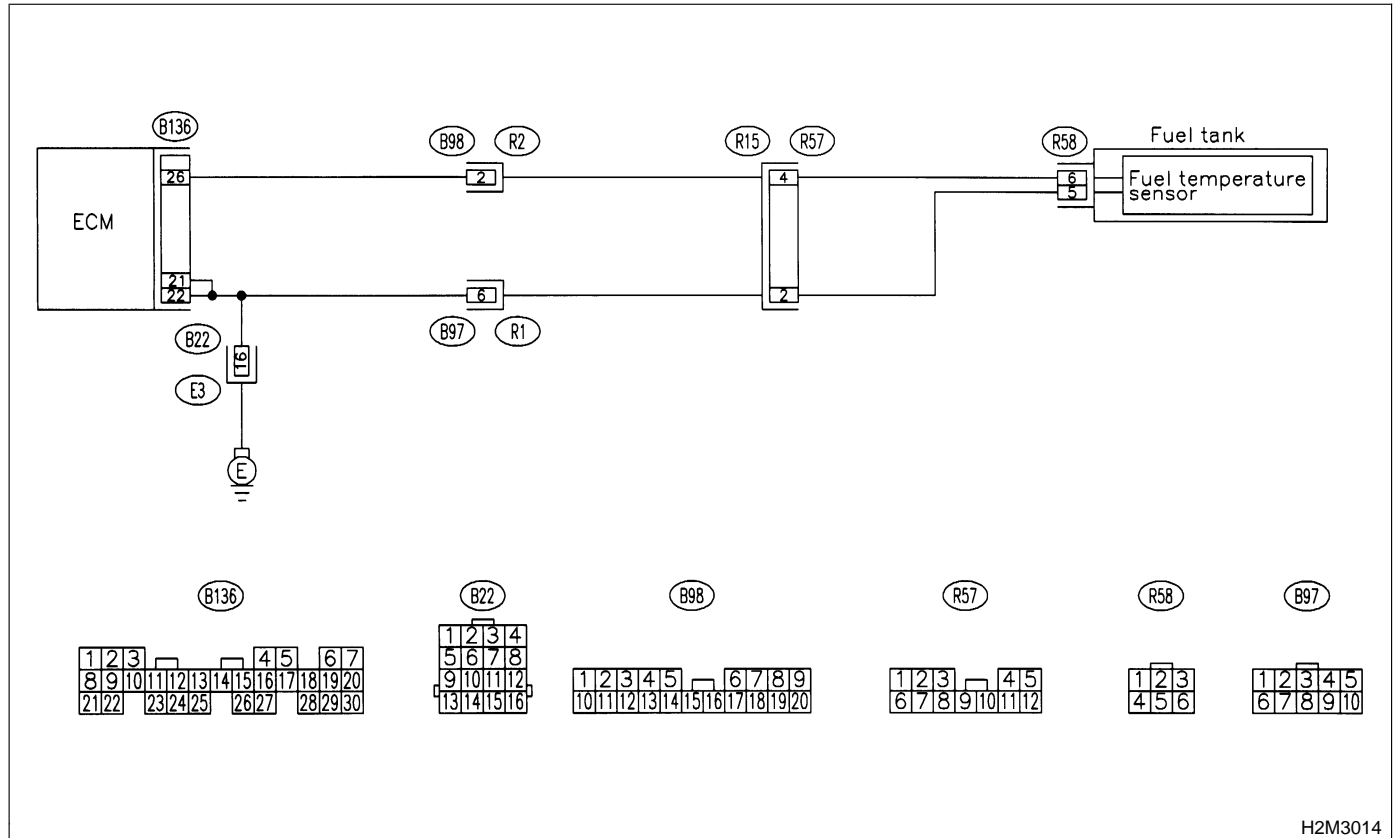

H2M3014

10V1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0182 or P0183?
- YES** : Inspect DTC P0182 or P0183 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:

In this case, it is not necessary to inspect DTC P0181.

- NO** : Replace fuel temperature sensor. <Ref. to 2-1 [W5A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10V1] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


W: DTC P0182 — FUEL TEMPERATURE SENSOR A CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

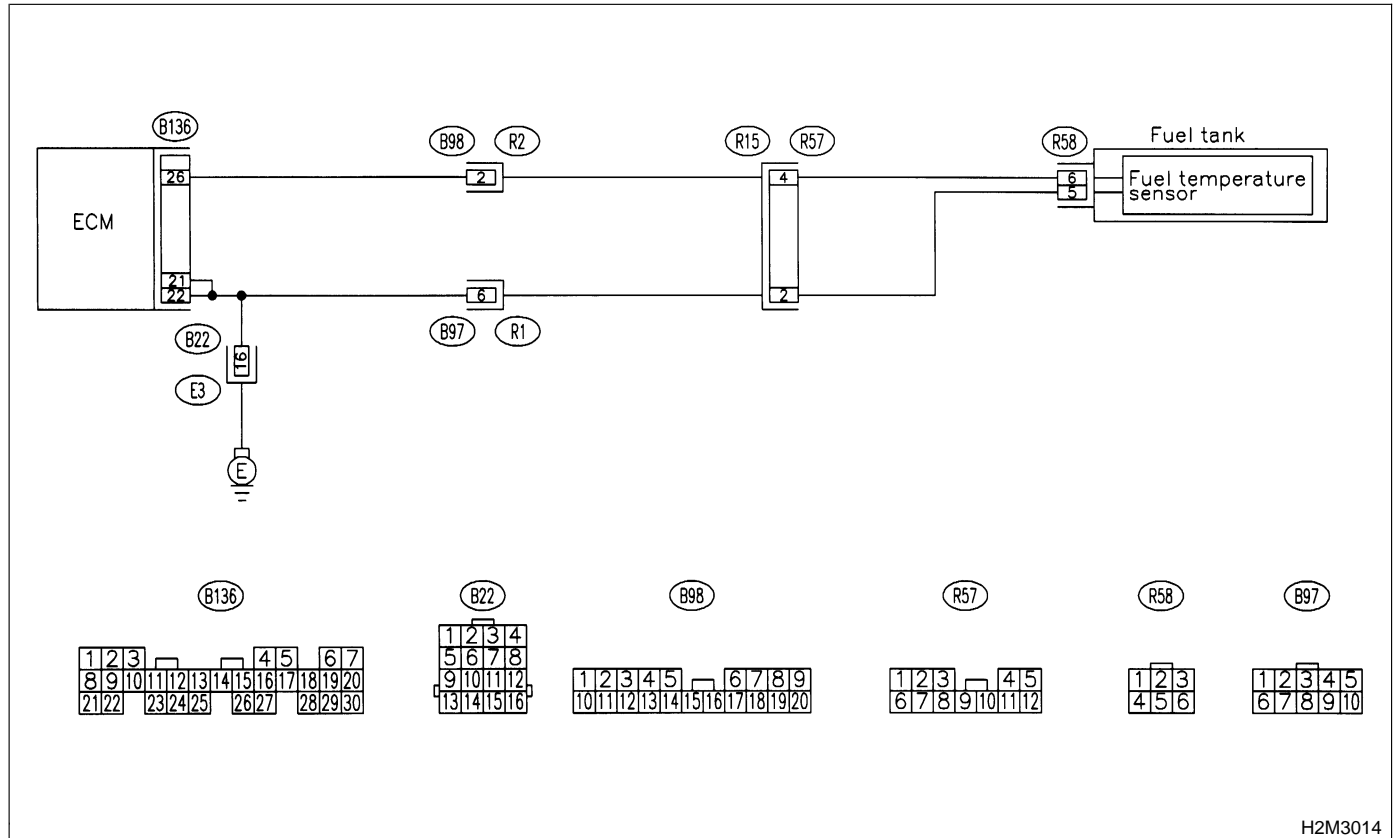

H2M3014


ON-BOARD DIAGNOSTICS II SYSTEM

[T10W2] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10W1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

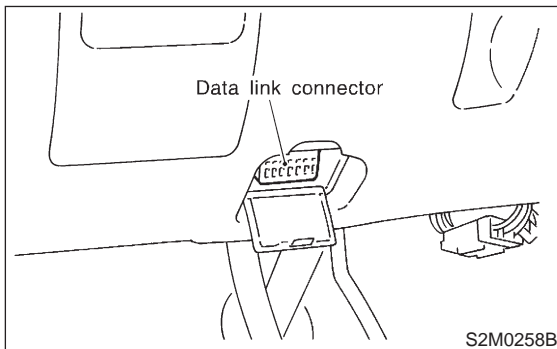

- 3) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read data of fuel temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.


CHECK : *Is the value greater than 150°C (300°F)?*

YES : Go to step 10W2.


NO : Even if MIL lights up, the circuit has returned to a normal condition at this time.

10W2 : CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Remove access hole lid.

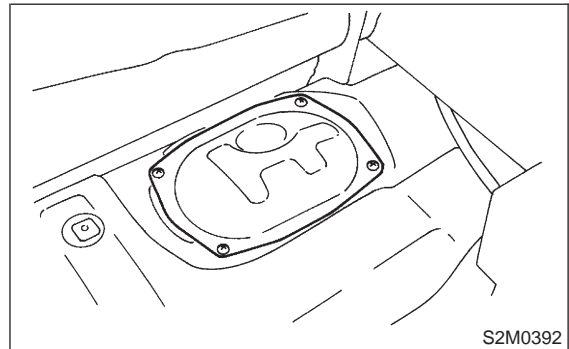

- 3) Disconnect connector from fuel pump.
- 4) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

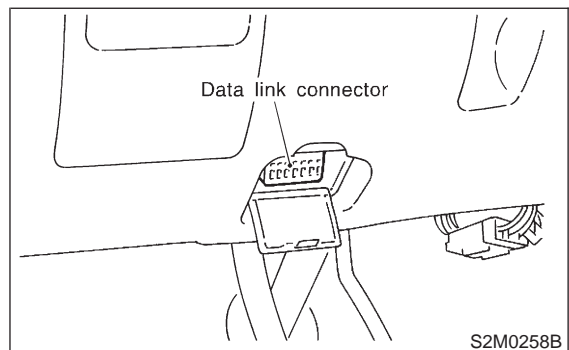

- 5) Turn ignition switch and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 6) Read data of fuel temperature sensor signal using Subaru Select Monitor or the OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : *Is the value less than -40°C (-40°F)?*

YES : Replace fuel temperature sensor. <Ref. to 2-1 [W5A0].>

NO : Repair ground short circuit in harness between fuel pump and ECM connector.


X: DTC P0183 — FUEL TEMPERATURE SENSOR A CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

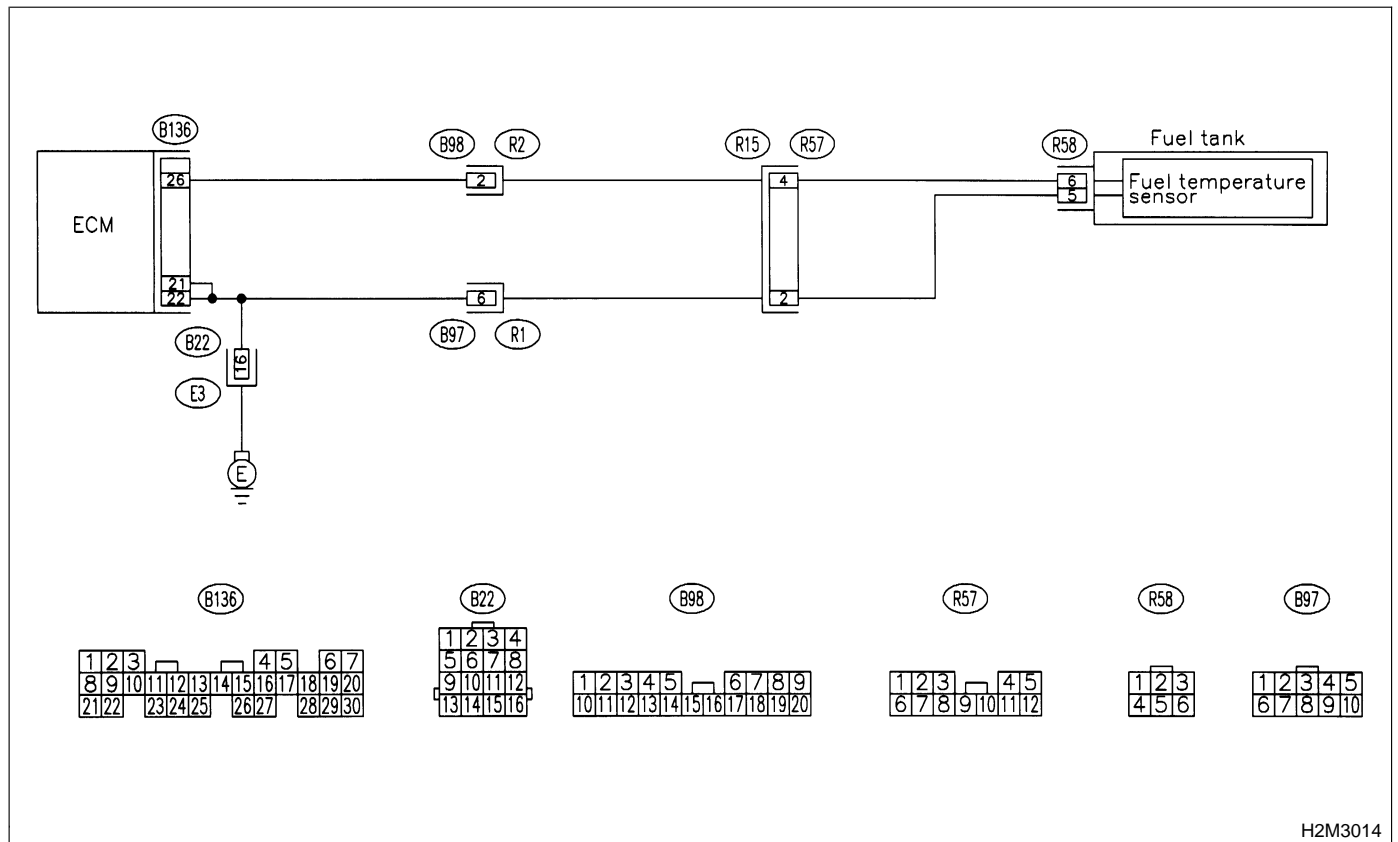

H2M3014

10X1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

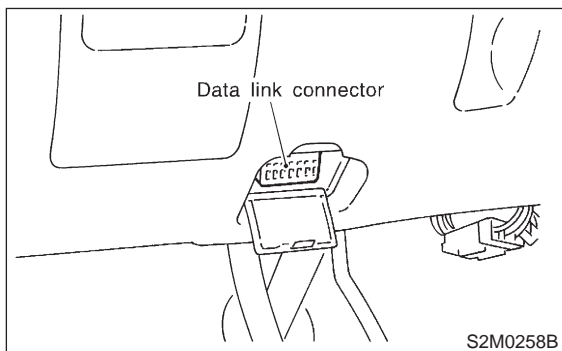

- 3) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read data of fuel temperature sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.


- CHECK** : *Is the value less than -40°C (-40°F)?*
- YES** : Go to step **10X2**.
- NO** : Repair poor contact.

NOTE:

- In this case, repair the following:
- Poor contact in fuel pump connector
 - Poor contact in ECM connector
 - Poor contact in coupling connectors (B22), (B98), (B97) and (R57)

10X2 : CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.


- 1) Turn ignition switch to OFF.
- 2) Remove access hole lid.

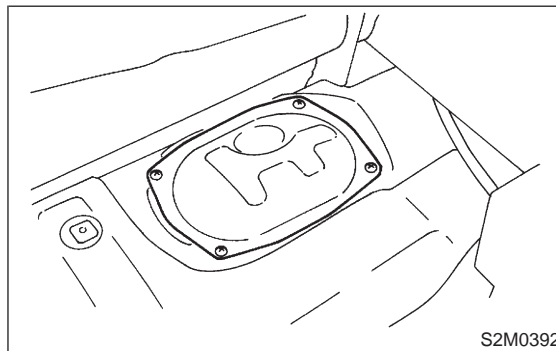

- 3) Disconnect connector from fuel pump.
- 4) Measure voltage between fuel pump connector and chassis ground.

Connector & terminal

(R58) No. 6 (+) — Chassis ground (-):

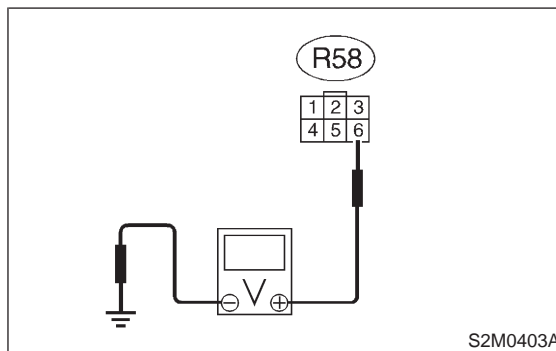

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Repair battery short circuit in harness between ECM and fuel pump connector.
- NO** : Go to step **10X3**.

2-7 [T10X3]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10X3 : CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between fuel pump connector and chassis ground.

Connector & terminal

(R58) No. 6 (+) — Chassis ground (-):

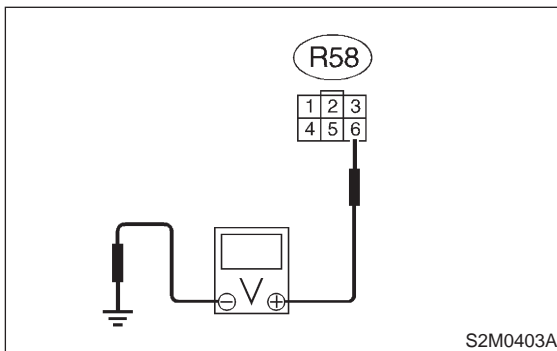


- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in harness between ECM and fuel pump connector.
- NO** : Go to step **10X4**.

10X4 : CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.

Measure voltage between fuel pump connector and chassis ground.

Connector & terminal

(R58) No. 6 (+) — Chassis ground (-):

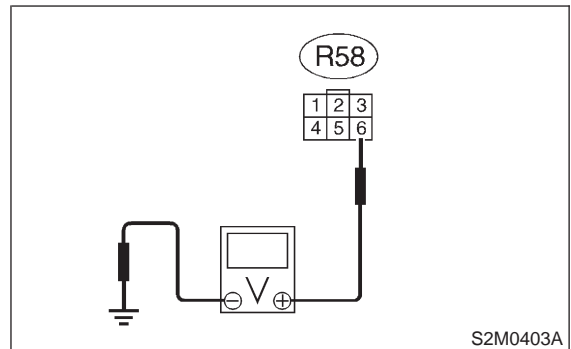

- CHECK** : **Is the voltage more than 4 V?**
- YES** : Go to step **10X5**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and fuel pump connector
- Poor contact in fuel pump connector
- Poor contact in ECM connector
- Poor contact in coupling connectors (B98) and (R57)

10X5 : CHECK HARNESS BETWEEN FUEL TEMPERATURE SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance of harness between fuel pump connector and chassis ground.

Connector & terminal

(R58) No. 5 — Chassis ground:

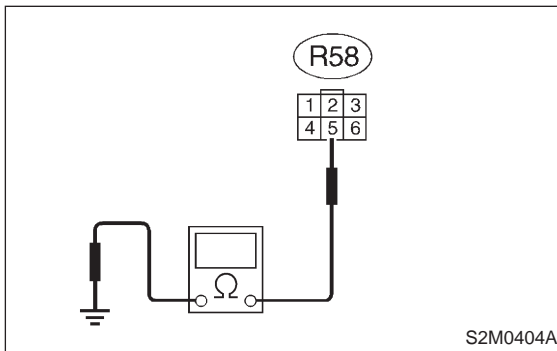

CHECK : **Is the resistance less than 5 Ω?**

YES : Replace fuel temperature sensor. <Ref. to 2-1 [W5A0].>

NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and fuel pump connector
- Poor contact in fuel pump connector
- Poor contact in ECM connector
- Poor contact in coupling connectors (B22), (B98), (B97) and (R57)

Y: DTC P0301 — CYLINDER 1 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to 2-7 [T10AB1]. <Ref. to 2-7 [T10AB1].>

Z: DTC P0302 — CYLINDER 2 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to 2-7 [T10AB1]. <Ref. to 2-7 [T10AB1].>

AA: DTC P0303 — CYLINDER 3 MISFIRE DETECTED —

NOTE:

For the diagnostic procedure, refer to 2-7 [T10AB1]. <Ref. to 2-7 [T10AB1].>

AB: DTC P0304 — CYLINDER 4 MISFIRE DETECTED —

• DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault
- Immediately at fault recognition (A misfire which could damage catalyst occurs.)


• TROUBLE SYMPTOM:

- Engine stalls.
- Erroneous idling
- Rough driving

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

• WIRING DIAGRAM:

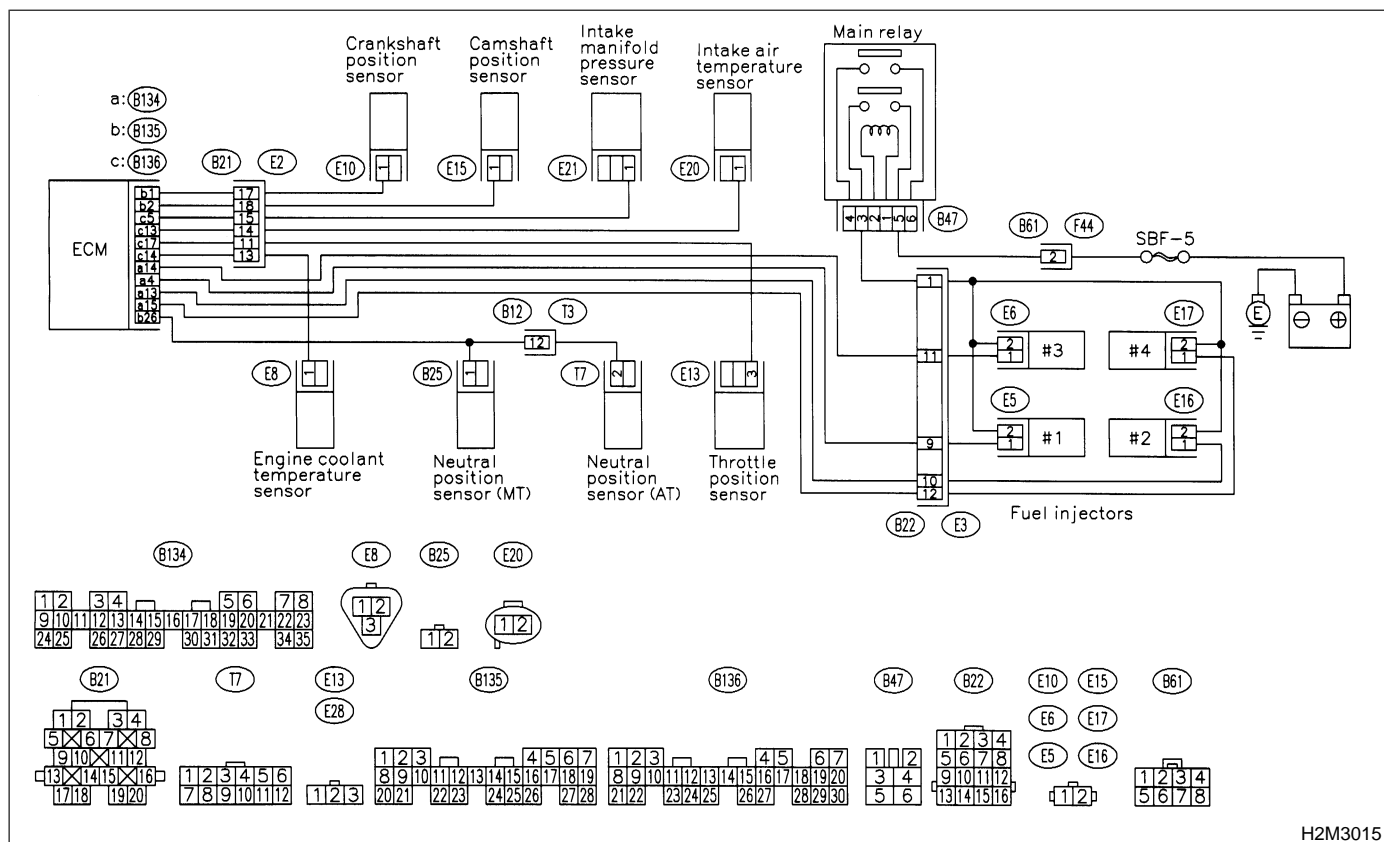

H2M3015

10AB1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0106, P0107, P0108, P0116, P0117 or P0125?

YES : Inspect DTC P0106, P0107, P0108, P0116, P0117 or P0125 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:

In this case, it is not necessary to inspect DTC P0301, P0302, P0303 and P0304.


NO : Go to step 10AB2.

10AB2 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM connector and chassis ground on faulty cylinders.

Connector & terminal

- #1 (B134) No. 4 (+) — Chassis ground (-):
- #2 (B134) No. 13 (+) — Chassis ground (-):
- #3 (B134) No. 14 (+) — Chassis ground (-):
- #4 (B134) No. 15 (+) — Chassis ground (-):

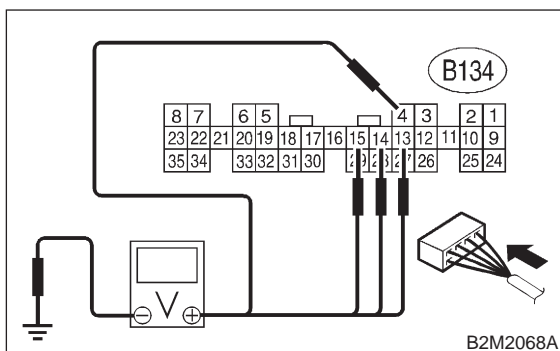


- CHECK** : Is the voltage more than 10 V?
- YES** : Go to step 10AB7.
- NO** : Go to step 10AB3.

10AB3 : CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from fuel injector on faulty cylinders.
- 3) Measure voltage between ECM connector and engine ground on faulty cylinders.

Connector & terminal

- #1 (E5) No. 1 — Engine ground:
- #2 (E16) No. 1 — Engine ground:
- #3 (E6) No. 1 — Engine ground:
- #4 (E17) No. 1 — Engine ground:

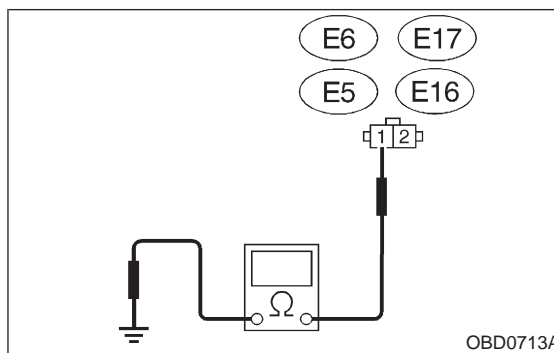


- CHECK** : Is the resistance less than 10 Ω?
- YES** : Repair ground short circuit in harness between fuel injector and ECM connector.
- NO** : Go to step 10AB4.

10AB4 : CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.

Measure resistance of harness connector between ECM connector and fuel injector on faulty cylinders.

Connector & terminal

- #1 (B134) No. 4 — (E5) No. 1:
- #2 (B134) No. 13 — (E16) No. 1:
- #3 (B134) No. 14 — (E6) No. 1:
- #4 (B134) No. 15 — (E17) No. 1:

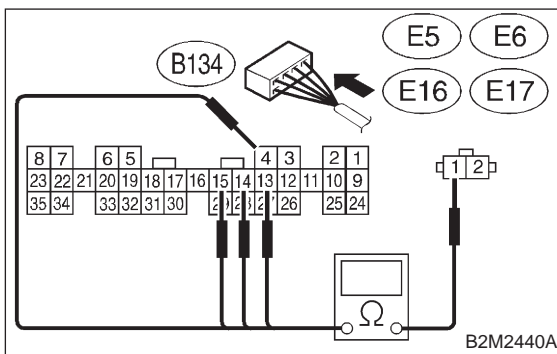

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AB5.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and fuel injector connector
- Poor contact in coupling connector (B22)

10AB5 : CHECK FUEL INJECTOR.

Measure resistance between fuel injector terminals on faulty cylinder.

Terminals

No. 1 — No. 2:

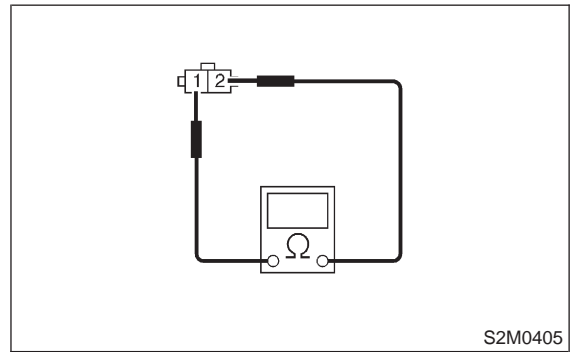


- CHECK** : Is the resistance between 5 and 20 Ω?
- YES** : Go to step 10AB6.
- NO** : Replace faulty fuel injector. <Ref. to 2-7 [W14A0].>

10AB6 : CHECK POWER SUPPLY LINE.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between fuel injector and engine ground on faulty cylinders.

Connector & terminal

- #1 (E5) No. 2 (+) — Engine ground (-):
- #2 (E16) No. 2 (+) — Engine ground (-):
- #3 (E6) No. 2 (+) — Engine ground (-):
- #4 (E17) No. 2 (+) — Engine ground (-):

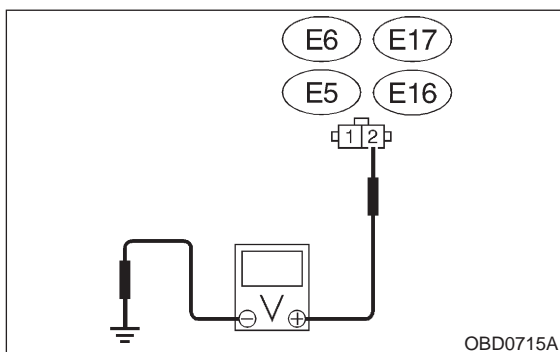

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Repair poor contact in all connectors in fuel injector circuit.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between main relay and fuel injector connector on faulty cylinders
- Poor contact in coupling connector (B22)
- Poor contact in main relay connector
- Poor contact in fuel injector connector on faulty cylinders

10AB7 : CHECK HARNESS BETWEEN FUEL INJECTOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from fuel injector on faulty cylinder.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM connector and chassis ground on faulty cylinders.

Connector & terminal

- #1 (B134) No. 4 (+) — Chassis ground (-):
- #2 (B134) No. 13 (+) — Chassis ground (-):
- #3 (B134) No. 14 (+) — Chassis ground (-):
- #4 (B134) No. 15 (+) — Chassis ground (-):

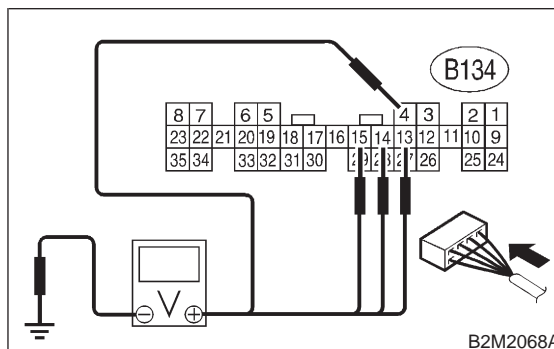

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Repair battery short circuit in harness between ECM and fuel injector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10AB8**.

2-7 [T10AB8]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AB8 : CHECK FUEL INJECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between fuel injector terminals on faulty cylinder.


Terminals

No. 1 — No. 2:

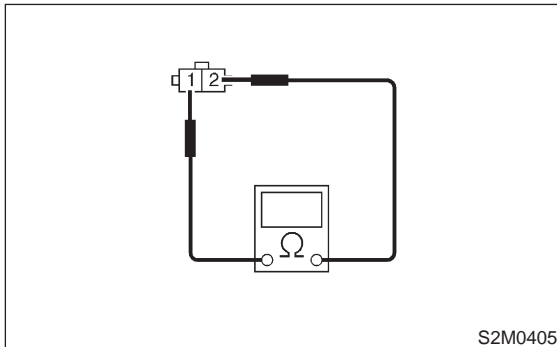

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Replace faulty fuel injector <Ref. to 2-7 [W14A1].> and ECM <Ref. to 2-7 [W15A0].>
- NO** : Go to step 10AB9.


10AB9 : CHECK FUEL LEVEL.

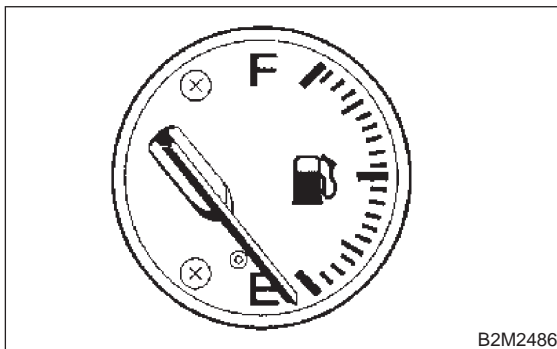


- CHECK** : Is the fuel meter indication higher than the "Lower" level?
- YES** : Go to step 10AB10.
- NO** : Replenish fuel so fuel meter indication is higher than the "Lower" level. After replenishing fuel, Go to step 10AB10. <Ref. to 2-7 [T10AB10].>

10AB10 : CHECK STATUS OF CHECK ENGINE MALFUNCTION INDICATOR LAMP (MIL).

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor to the data link connector.

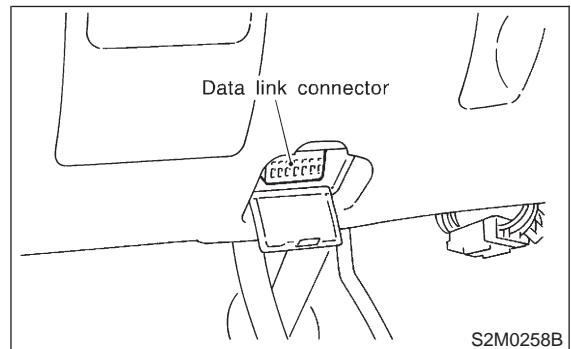

- 3) Clear memory using Subaru Select Monitor. <Ref. to 2-7 [T3D0].>
- 4) Start engine, and drive the vehicle more than 10 minutes.

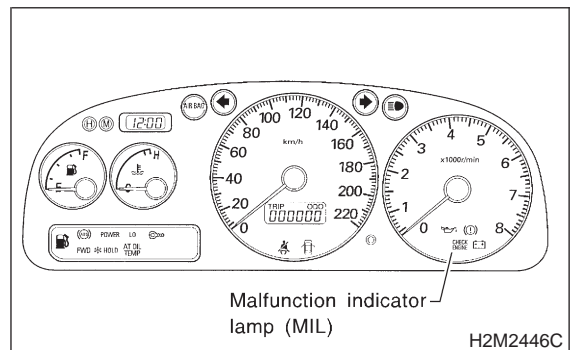

- CHECK** : Is the MIL coming on or blinking?
- YES** : Go to step 10AB12.
- NO** : Go to step 10AB11.

10AB11 : CHECK CAUSE OF MISFIRE DIAGNOSED.

CHECK : *Was the cause of misfire diagnosed when the engine is running?*

YES : Finish diagnostics operation, if the engine has no abnormality.

NOTE:

Ex. Remove spark plug cord, etc.

NO : Repair poor contact.

NOTE:

In this case, repair the following:

- Poor contact in ignitor connector
- Poor contact in ignition coil connector
- Poor contact in fuel injector connector on faulty cylinders
- Poor contact in ECM connector
- Poor contact in coupling connector (B22)

10AB12 : CHECK AIR INTAKE SYSTEM.

CHECK : *Is there a fault in air intake system?*

YES : Repair air intake system.

NOTE:


Check the following items:

- Are there air leaks or air suction caused by loose or dislocated nuts and bolts?
- Are there cracks or any disconnection of hoses?

NO : Go to step 10AB13.

10AB13 : CHECK MISFIRE SYMPTOM.

- 1) Turn ignition switch to OFF.
- 2) Connect the Subaru Select Monitor or the OBD-II general scan tool to data link connector.

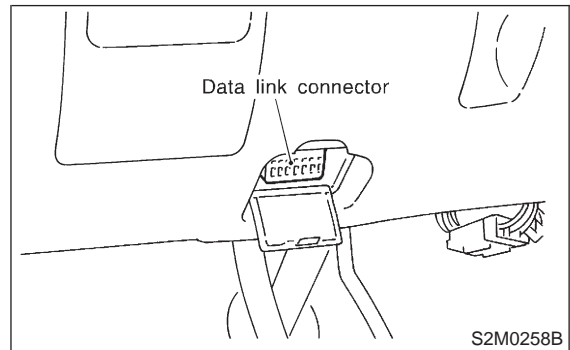

- 3) Turn ignition switch to ON, and turn Subaru Select Monitor or OBD-II general scan tool switch to ON.

- 4) Read diagnostic trouble code (DTC).

- Subaru Select Monitor

<Ref. to 2-7 [T3C2].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Operation Manual.

NOTE:

Perform diagnosis according to the items listed below.

CHECK : *Does the Subaru Select Monitor or OBD-II general scan tool indicate only one DTC?*

YES : Go to step 10AB18.

NO : Go to step 10AB14.

10AB14 : CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.

CHECK : *Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0301 and P0302?*

YES : Go to step 10AB19.

NO : Go to step 10AB15.

10AB15 : CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.

CHECK : *Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0303 and P0304?*

YES : Go to step 10AB20.

NO : Go to step 10AB16.

10AB16 : CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.

CHECK : *Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0301 and P0303?*

YES : Go to step 10AB21.

NO : Go to step 10AB17.

10AB17 : CHECK DIAGNOSTIC TROUBLE CODE (DTC) ON DISPLAY.

CHECK : *Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0302 and P0304?*

YES : Go to step 10AB22.

NO : Go to step 10AB23.

10AB18 : ONLY ONE CYLINDER

CHECK : *Is there a fault in that cylinder?*

YES : Repair or replace faulty parts.

NOTE:

Check the following items.

- Spark plug
- Spark plug cord
- Fuel injector
- Compression ratio

NO : Go to DTC P0171 <Ref. to 2-7 [T10T0].> and P0172. <Ref. to 2-7 [T10U0].>

10AB19 : GROUP OF #1 AND #2 CYLINDERS

CHECK : *Are there faults in #1 and #2 cylinders?*

YES : Repair or replace faulty parts.

NOTE:

● Check the following items.

- Spark plugs
- Fuel injectors
- Ignition coil
- Compression ratio

● If no abnormal is discovered, check for "9. D: IGNITION CONTROL SYSTEM" of #1 and #2 cylinders side. <Ref. to 2-7 [T8D0].>

NO : Go to DTC P0171 <Ref. to 2-7 [T10T0].> and P0172. <Ref. to 2-7 [T10U0].>

10AB20 : GROUP OF #3 AND #4 CYLINDERS

CHECK : *Are there faults in #3 and #4 cylinders?*

YES : Repair or replace faulty parts.

NOTE:

● Check the following items.

- Spark plugs
- Fuel injectors
- Ignition coil

● If no abnormal is discovered, check for "9. D: IGNITION CONTROL SYSTEM" of #3 and #4 cylinders side. <Ref. to 2-7 [T8D0].>

NO : Go to DTC P0171 <Ref. to 2-7 [T10T0].> and P0172. <Ref. to 2-7 [T10U0].>

10AB21 : GROUP OF #1 AND #3 CYLINDERS

CHECK : *Are there faults in #1 and #3 cylinders?*

YES : Repair or replace faulty parts.

NOTE:

Check the following items.

- Spark plugs
- Fuel injectors
- Skipping timing belt teeth

NO : Go to DTC P0171 <Ref. to 2-7 [T10T0].> and P0172. <Ref. to 2-7 [T10U0].>

10AB22 : GROUP OF #2 AND #4 CYLINDERS

CHECK : *Are there faults in #2 and #4 cylinders?*

YES : Repair or replace faulty parts.

NOTE:

Check the following items.

- Spark plugs
- Fuel injectors
- Compression ratio
- Skipping timing belt teeth

NO : Go to DTC P0171 <Ref. to 2-7 [T10T0].> and P0172. <Ref. to 2-7 [T10U0].>

10AB23 : CYLINDER AT RANDOM

CHECK : *Is the engine idle rough?*

YES : Go to DTC P0171 <Ref. to 2-7 [T10T0].> and P0172. <Ref. to 2-7 [T10U0].>

NO : Repair or replace faulty parts.

NOTE:

Check the following items.

- Spark plugs
- Fuel injectors
- Compression ratio


AC: DTC P0325 — KNOCK SENSOR CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Poor driving performance
 - Knocking occurs.

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

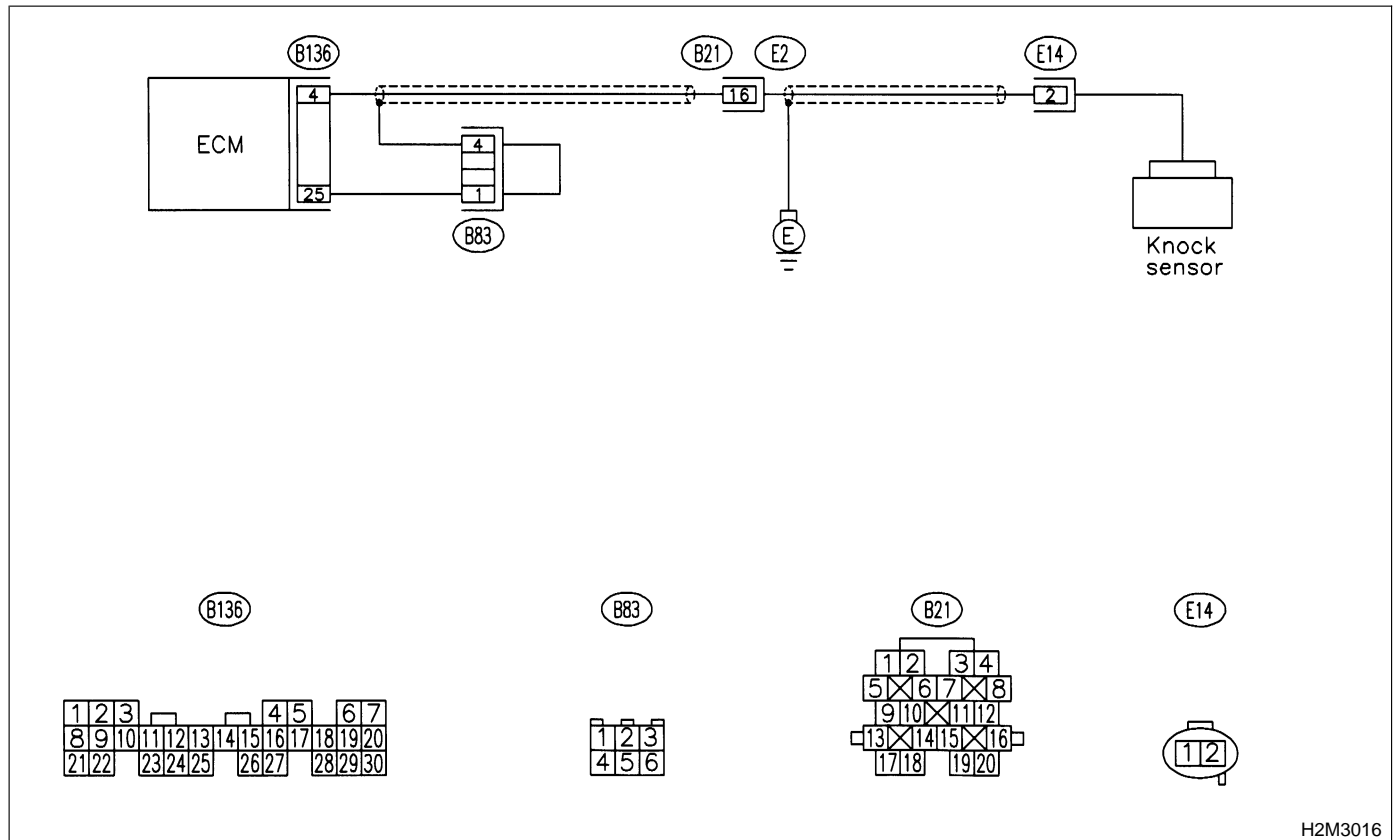

10AC1 : CHECK HARNESS BETWEEN KNOCK SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance between ECM harness connector and chassis ground.

Connector & terminal
(B136) No. 4 — Chassis ground:

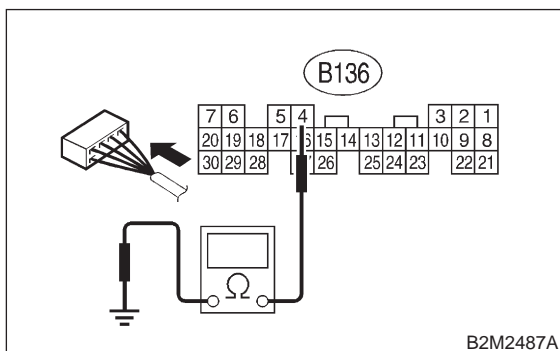


- CHECK** : Is the resistance more than 700 kΩ?
YES : Go to step 10AC3.
NO : Go to step 10AC2.

10AC2 : CHECK HARNESS BETWEEN KNOCK SENSOR AND ECM CONNECTOR.

Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal
(B136) No. 4 — Chassis ground:

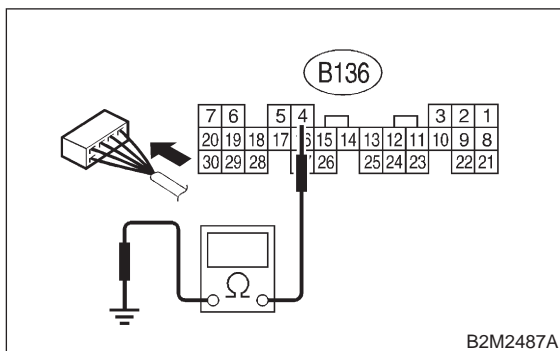


- CHECK** : Is the resistance less than 400 kΩ?
YES : Go to step 10AC5.
NO : Go to step 10AC6.

10AC3 : CHECK KNOCK SENSOR.

- 1) Disconnect connector from knock sensor.
- 2) Measure resistance between knock sensor connector terminal and engine ground.

Terminal
No. 2 — Engine ground:

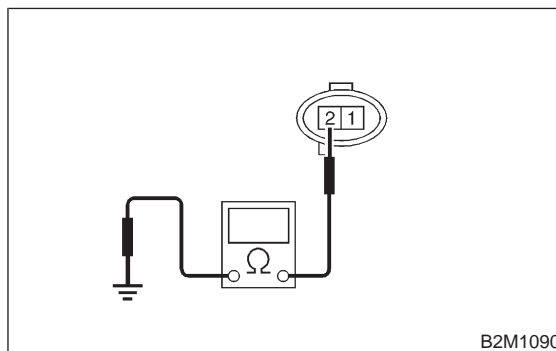

- CHECK** : Is the resistance more than 700 kΩ?
YES : Go to step 10AC4.
NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between knock sensor and ECM connector
- Poor contact in knock sensor connector
- Poor contact in coupling connector (B21) and (B83)

10AC4 : CHECK CONDITION OF KNOCK SENSOR INSTALLATION.


- CHECK** : Is the knock sensor installation bolt tightened securely?
YES : Replace knock sensor. <Ref. to 2-7 [W19A0].>
NO : Tighten knock sensor installation bolt securely.

10AC5 : CHECK KNOCK SENSOR.

- 1) Disconnect connector from knock sensor.
- 2) Measure resistance between knock sensor connector terminal and engine ground.

Terminal

No. 2 — Engine ground:

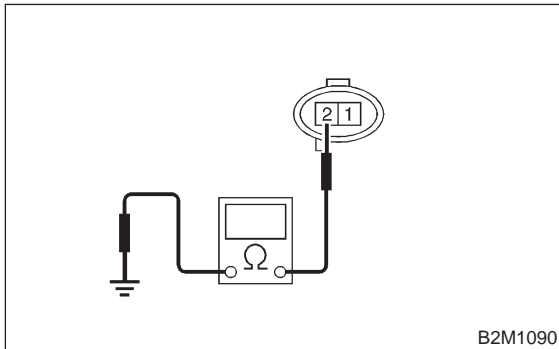

- CHECK** : *Is the resistance less than 400 kΩ?*
- YES** : Replace knock sensor. <Ref. to 2-7 [W19A0].>
- NO** : Repair ground short circuit in harness between knock sensor connector and ECM connector.

NOTE:


The harness between both connectors is shielded. Repair short circuit of harness together with shield.

10AC6 : CHECK INPUT SIGNAL FOR ECM.

- 1) Connect connectors to ECM and knock sensor.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between ECM and chassis ground.

Connector & terminal

(B136) No. 4 (+) — Chassis ground (-):

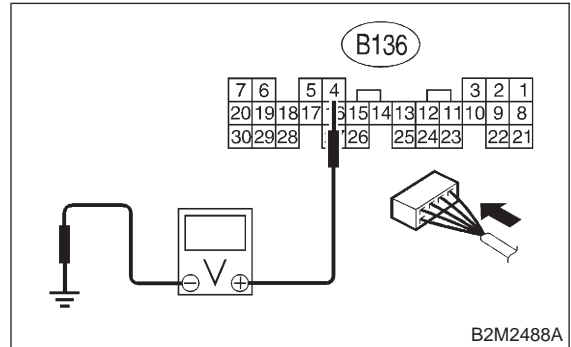

- CHECK** : *Is the voltage more than 2 V?*
- YES** : Even if MIL lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.)

NOTE:

In this case, repair the following:

- Poor contact in knock sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21) and (B83)

- NO** : Repair poor contact in ECM connector.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AC6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AD: DTC P0335 — CRANKSHAFT POSITION SENSOR CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

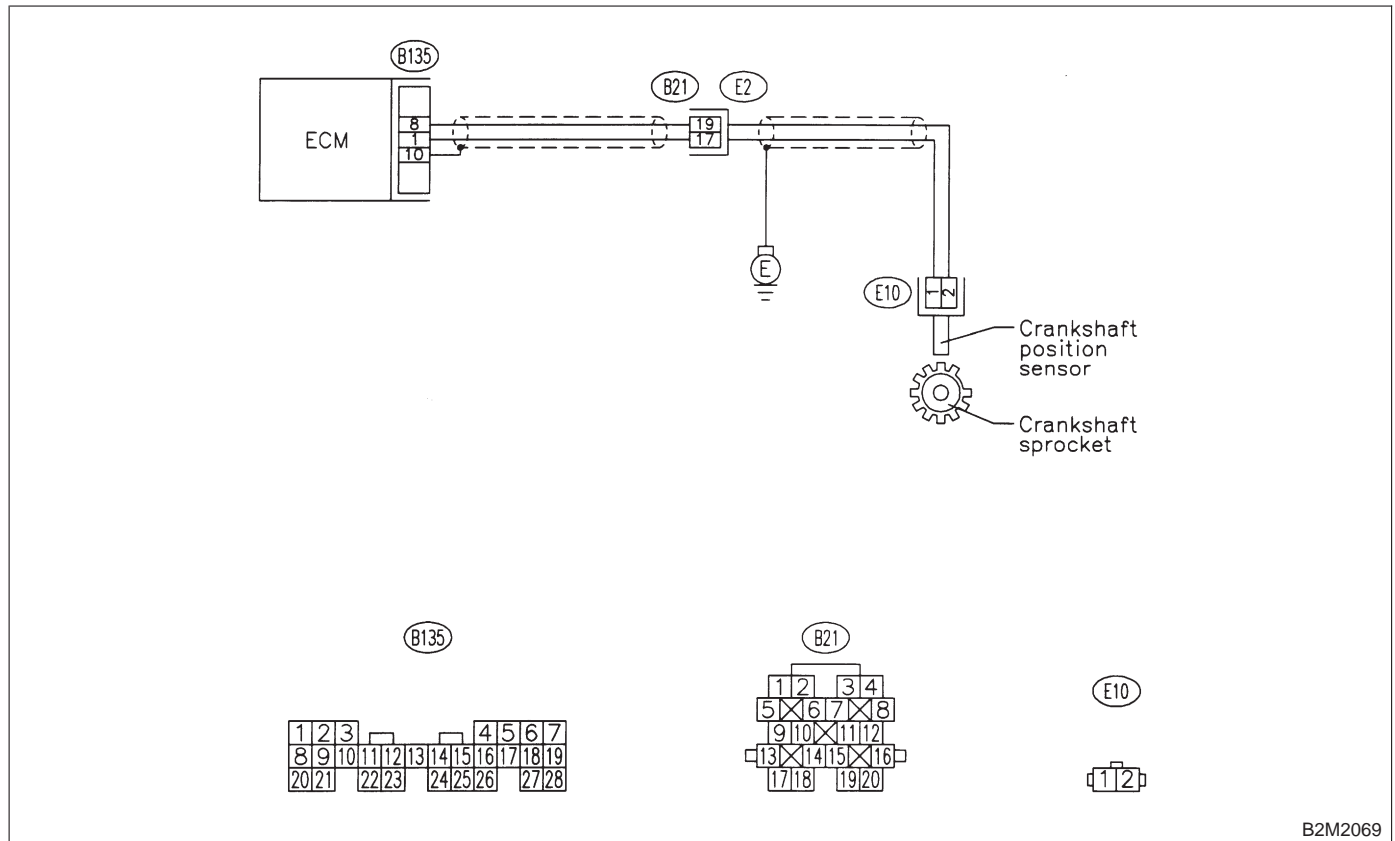


B2M2069

10AD1 : CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from crankshaft position sensor.
- 3) Measure resistance of harness between crankshaft position sensor connector and engine ground.

Connector & terminal
(E10) No. 1 — Engine ground:

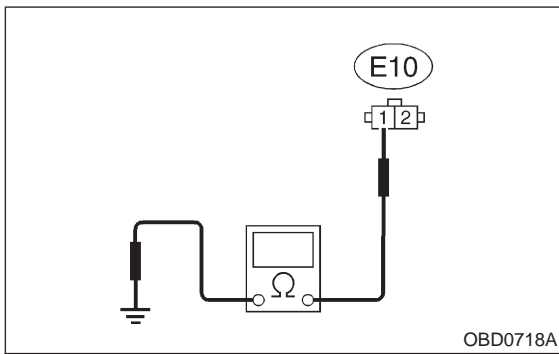

- CHECK** : *Is the resistance more than 100 kΩ?*
- YES** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between crankshaft position sensor and ECM connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)

- NO** : Go to step **10AD2**.

10AD2 : CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.

Measure resistance of harness between crankshaft position sensor connector and engine ground.

Connector & terminal
(E10) No. 1 — Engine ground:

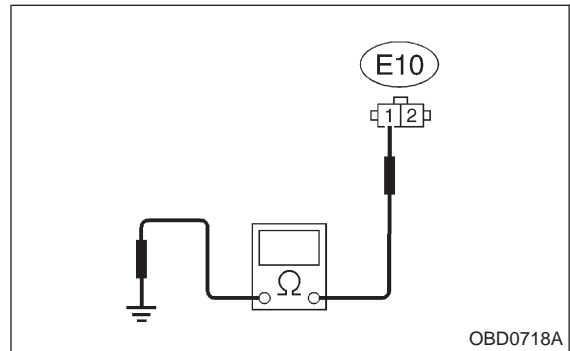

- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between crankshaft position sensor and ECM connector.

NOTE:


The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.

- NO** : Go to step **10AD3**.

10AD3 : CHECK HARNESS BETWEEN CRANKSHAFT POSITION SENSOR AND ECM CONNECTOR.

Measure resistance of harness between crankshaft position sensor connector and engine ground.

Connector & terminal (E10) No. 2 — Engine ground:

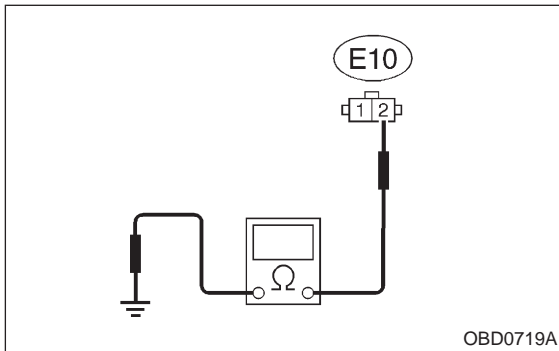

- CHECK** : Is the resistance less than 5 Ω?
- YES** : Go to step 10AD4.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between crankshaft position sensor and ECM connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)

10AD4 : CHECK CONDITION OF CRANKSHAFT POSITION SENSOR.


- CHECK** : Is the crankshaft position sensor installation bolt tightened securely?
- YES** : Go to step 10AD5.
- NO** : Tighten crankshaft position sensor installation bolt securely.

10AD5 : CHECK CRANKSHAFT POSITION SENSOR.

- 1) Remove crankshaft position sensor.
- 2) Measure resistance between connector terminals of crankshaft position sensor.

Terminals

No. 1 — No. 2:

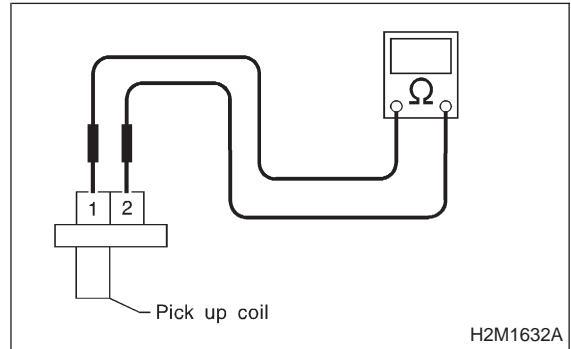

- CHECK** : Is the resistance between 1 and 4 kΩ?
- YES** : Repair poor contact in crankshaft position sensor connector.
- NO** : Replace crankshaft position sensor. <Ref. to 2-7 [W6A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AD5] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AE: DTC P0336 — CRANKSHAFT POSITION SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

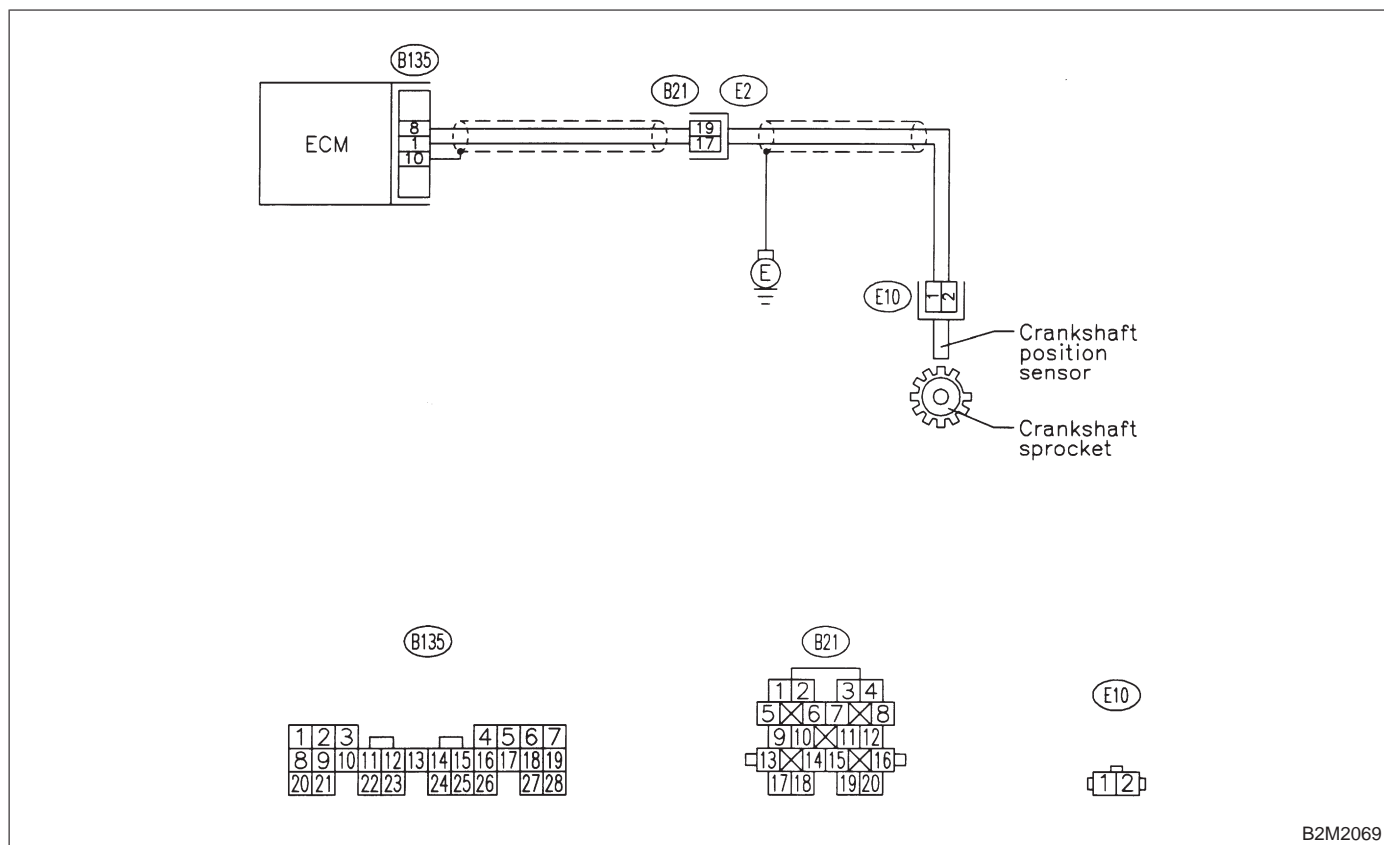

B2M2069

10AE1 : CHECK ANY OTHER DTC ON DISPLAY.

10AE2 : CHECK CONDITION OF CRANKSHAFT POSITION SENSOR.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0335?
- YES** : Inspect DTC P0335 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10AE2**.

- Turn ignition switch to OFF.
- CHECK** : Is the crankshaft position sensor installation bolt tightened securely?
 - YES** : Go to step **10AE3**.
 - NO** : Tighten crankshaft position sensor installation bolt securely.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AE4] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AE3 : CHECK CRANKSHAFT SPROCKET.



Remove front belt cover. <Ref. to 2-3 [W2A1].>

- CHECK** : **Are crankshaft sprocket teeth cracked or damaged?**
- YES** : Replace crankshaft sprocket. <Ref. to 2-3 [W2A0].>
- NO** : Go to step **10AE4**.

10AE4 : CHECK INSTALLATION CONDITION OF TIMING BELT.

Turn crankshaft using ST, and align alignment mark on crankshaft sprocket. Then, make sure left and right camshaft sprockets are matched with notches (alignment marks of belt cover and cylinder head).

ST 499987500 CRANKSHAFT SOCKET

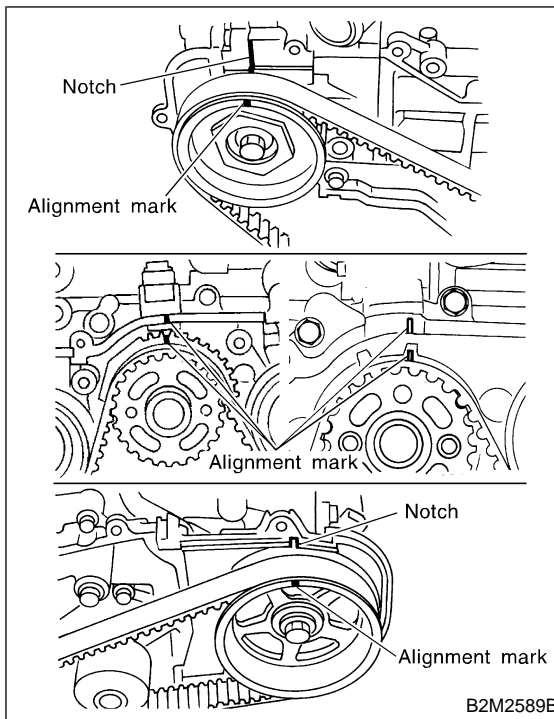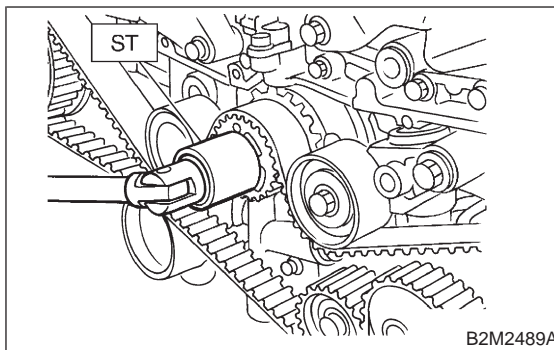

- CHECK** : **Is timing belt installed properly in accordance with the correct position of crankshaft and camshaft sprockets?**
- YES** : Repair installation condition of timing belt. <Ref. to 2-3 [W2A0].>
- NO** : Replace crankshaft position sensor. <Ref. to 2-7 [W6A0].>


AF: DTC P0340 — CAMSHAFT POSITION SENSOR CIRCUIT MALFUNCTION

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

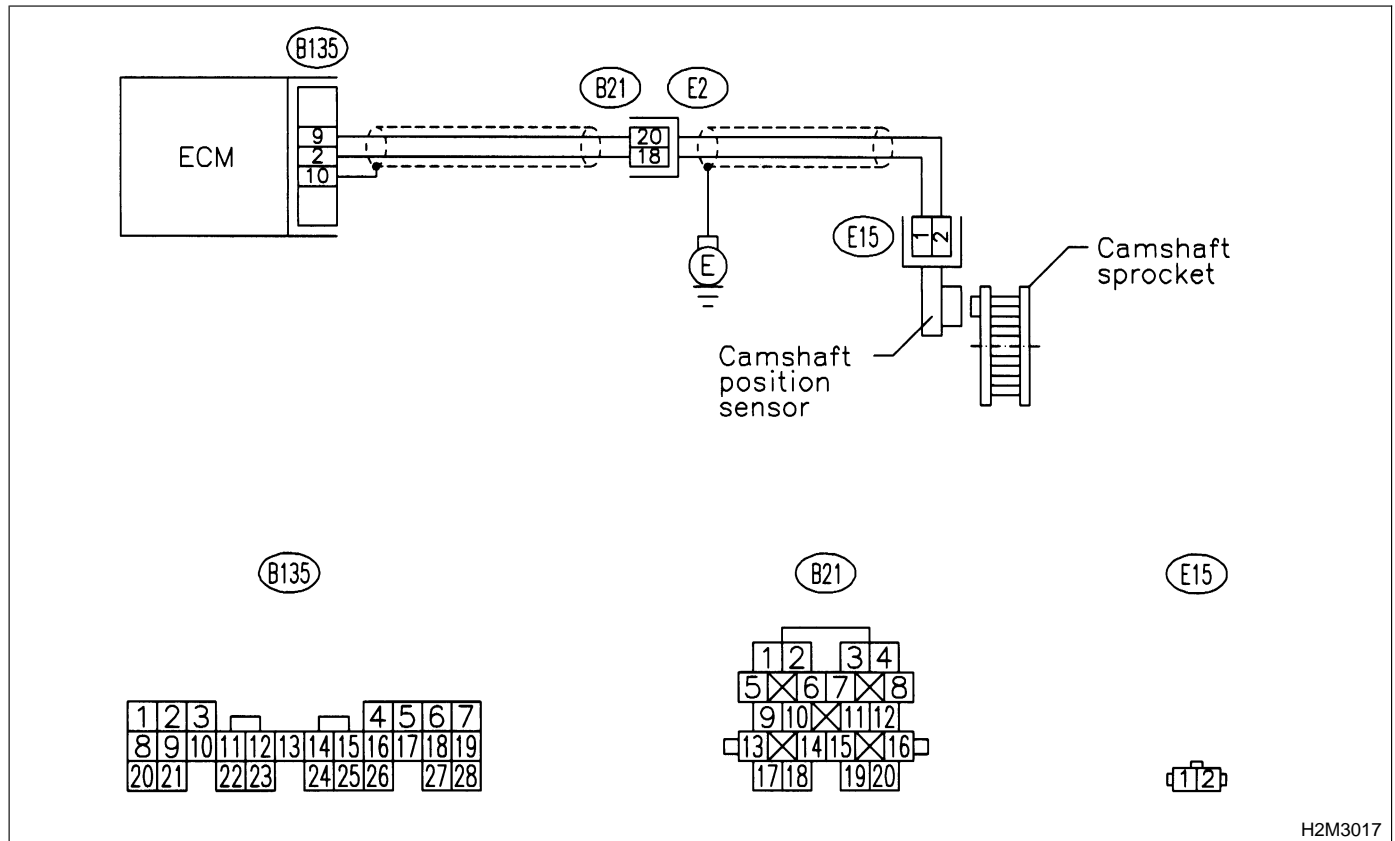


H2M3017

10AF1 : CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from camshaft position sensor.
- 3) Measure resistance of harness between camshaft position sensor connector and engine ground.

Connector & terminal

(E15) No. 1 — Engine ground:

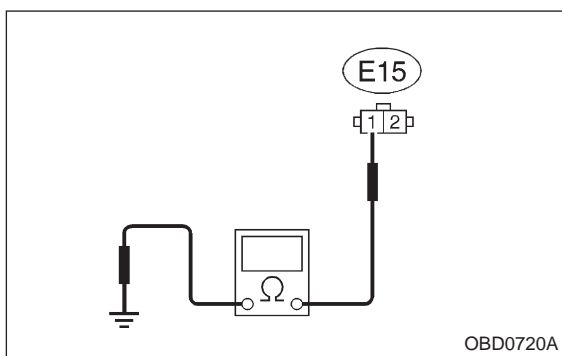

CHECK : *Is the resistance more than 100 kΩ?*

YES : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between camshaft position sensor and ECM connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)


NO : Go to step **10AF2**.

10AF2 : CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.

Measure resistance of harness between camshaft position sensor connector and engine ground.

Connector & terminal

(E15) No. 1 — Engine ground:

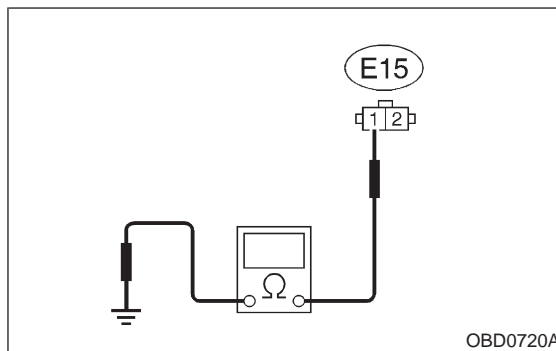

CHECK : *Is the resistance less than 10 Ω?*

YES : Repair ground short circuit in harness between camshaft position sensor and ECM connector.

NOTE:

The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.


NO : Go to step **10AF3**.

10AF3 : CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.

Measure resistance of harness between camshaft position sensor connector and engine ground.

Connector & terminal

(E15) No. 2 — Engine ground:

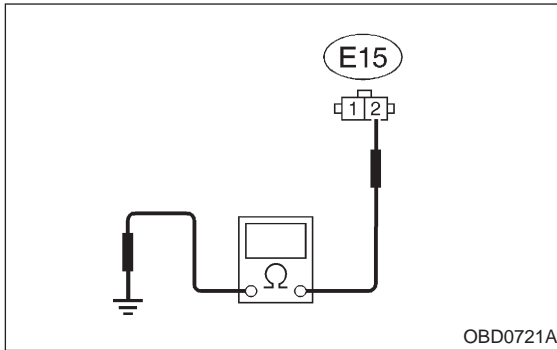

- CHECK** : Is the resistance less than 5 Ω?
- YES** : Go to step 10AF4.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between camshaft position sensor and ECM connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)

10AF4 : CHECK CONDITION OF CAMSHAFT POSITION SENSOR.


- CHECK** : Is the camshaft position sensor installation bolt tightened securely?
- YES** : Go to step 10AF5.
- NO** : Tighten camshaft position sensor installation bolt securely.

10AF5 : CHECK CAMSHAFT POSITION SENSOR.

- 1) Remove camshaft position sensor.
- 2) Measure resistance between connector terminals of camshaft position sensor.

Terminals

No. 1 — No. 2:

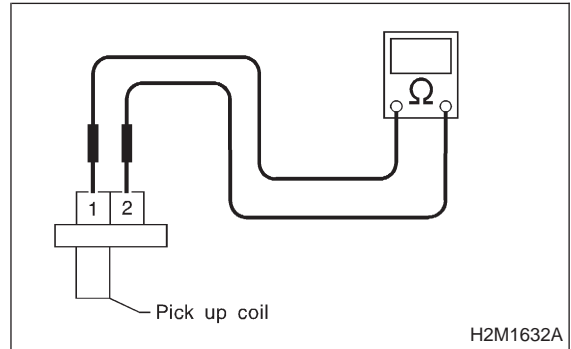

- CHECK** : Is the resistance between 1 and 4 kΩ?
- YES** : Repair poor contact in camshaft position sensor connector.
- NO** : Replace camshaft position sensor. <Ref. to 2-7 [W10A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AF5] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AG: DTC P0341 — CAMSHAFT POSITION SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

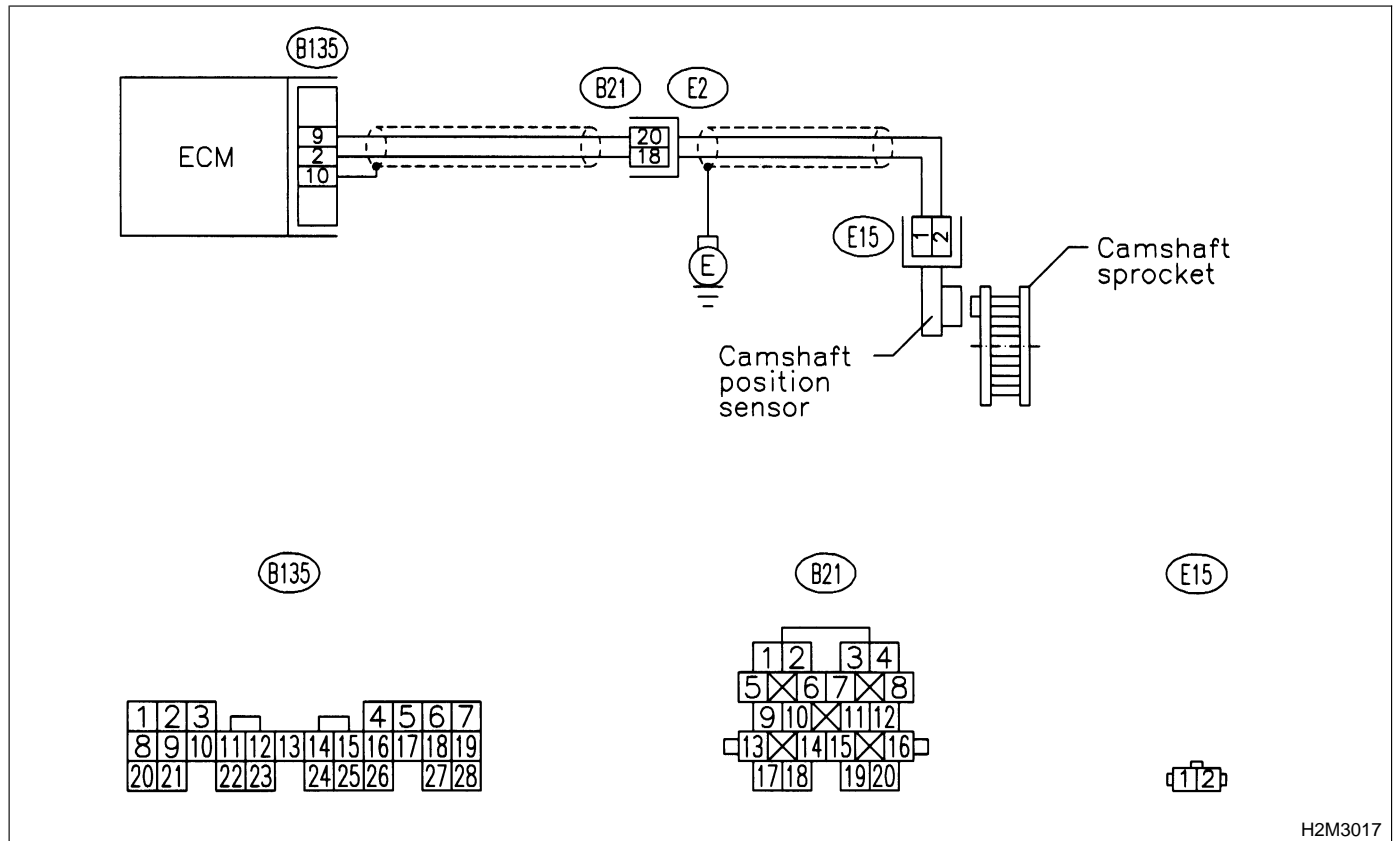

H2M3017


10AG1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0340?
- YES** : Inspect DTC P0340 using “10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles”. <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10AG2**.

10AG2 : CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from camshaft position sensor.
- 3) Measure resistance of harness between camshaft position sensor connector and engine ground.

Connector & terminal
(E15) No. 1 — Engine ground:

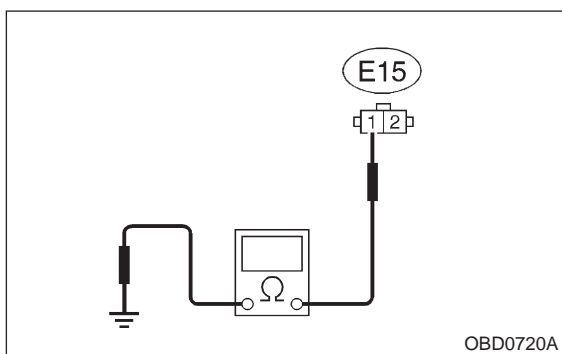

- CHECK** : *Is the resistance more than 100 kΩ?*
YES : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between camshaft position sensor and ECM connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)

- NO** : Go to step **10AG3**.

10AG3 : CHECK HARNESS BETWEEN CAMSHAFT POSITION SENSOR AND ECM CONNECTOR.

Measure resistance of harness between camshaft position sensor connector and engine ground.

Connector & terminal
(E15) No. 1 — Engine ground:

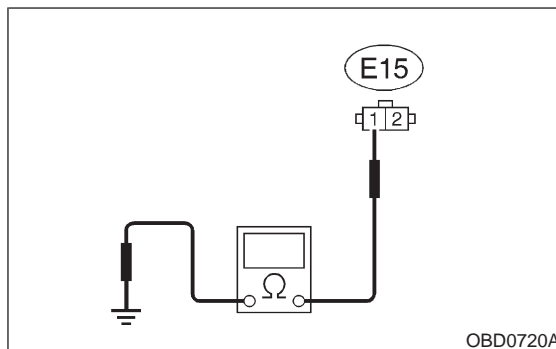

- CHECK** : *Is the resistance less than 10 Ω?*
YES : Repair ground short circuit in harness between camshaft position sensor and ECM connector.

NOTE:

The harness between both connectors are shielded. Repair ground short circuit in harness together with shield.

- NO** : Go to step **10AG4**.

2-7 [T10AG4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AG4 : CHECK HARNESS BETWEEN CAMSHFT POSITION SENSOR AND ECM CONNECTOR.

Measure resistance of harness between camshaft position sensor connector and engine ground.

Connector & terminal

(E15) No. 2 — Engine ground:

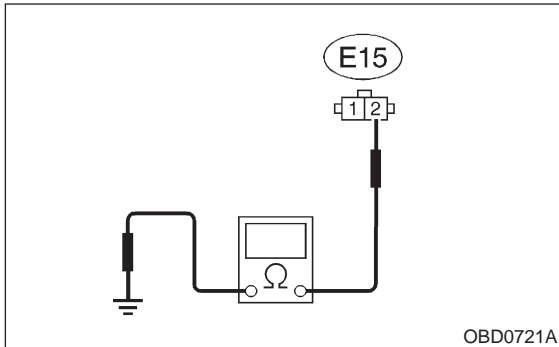

CHECK : *Is the resistance less than 5 Ω?*

YES : Go to step **10AG5**.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between camshaft position sensor and ECM connector
- Poor contact in ECM connector
- Poor contact in coupling connector (B21)

10AG5 : CHECK CAMSHAFT POSITION SENSOR.

- 1) Remove camshaft position sensor.
- 2) Measure resistance between connector terminals of camshaft position sensor.

Terminals

No. 1 — No. 2:

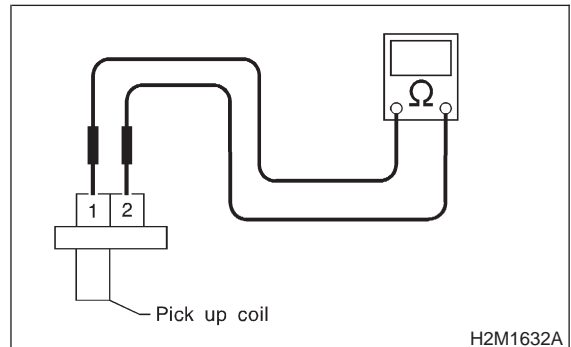

CHECK : *Is the resistance between 1 and 4 kΩ?*

YES : Go to step **10AG6**.

NO : Replace camshaft position sensor. <Ref. to 2-7 [W10A0].>

10AG6 : CHECK CONDITION OF CAMSHAFT POSITION SENSOR.

Turn ignition switch to OFF.

CHECK : *Is the camshaft position sensor installation bolt tightened securely?*

YES : Go to step **10AG7**.

NO : Tighten camshaft position sensor installation bolt securely.

10AG7 : CHECK CAMSHAFT SPROCKET.

Remove front belt cover. <Ref. to 2-3 [W2A1].>

CHECK : *Are camshaft sprocket teeth cracked or damaged?*



YES : Replace camshaft sprocket. <Ref. to 2-3 [W2A4].>

NO : Go to step **10AG8**.

**10AG8 : CHECK INSTALLATION CONDI-
TION OF TIMING BELT.**

Turn crankshaft using ST, and align alignment mark on crankshaft sprocket. Then, make sure left and right camshaft sprockets are matched with notches (alignment marks of belt cover and cylinder head).

ST 499987500 CRANKSHAFT SOCKET

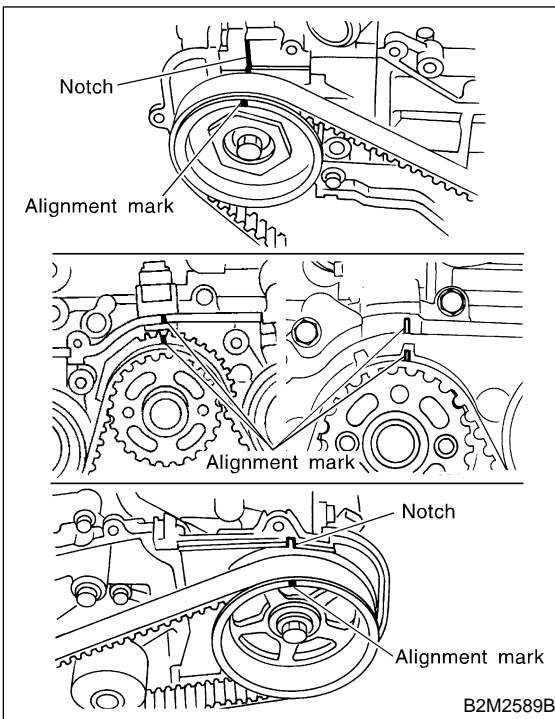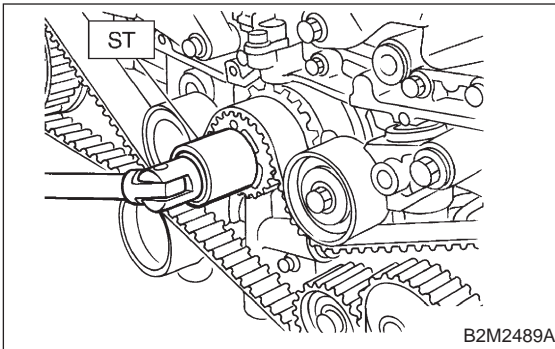

- CHECK** : *Is timing belt installed properly in accordance with the correct position of crankshaft and camshaft sprockets?*
- YES** : Repair installation condition of timing belt. <Ref. to 2-3 [W2A0].>
- NO** : Replace camshaft position sensor. <Ref. to 2-7 [W10A0].>


AH: DTC P0420 — CATALYST SYSTEM EFFICIENCY BELOW THRESHOLD

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine stalls.
 - Idle mixture is out of specifications.

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

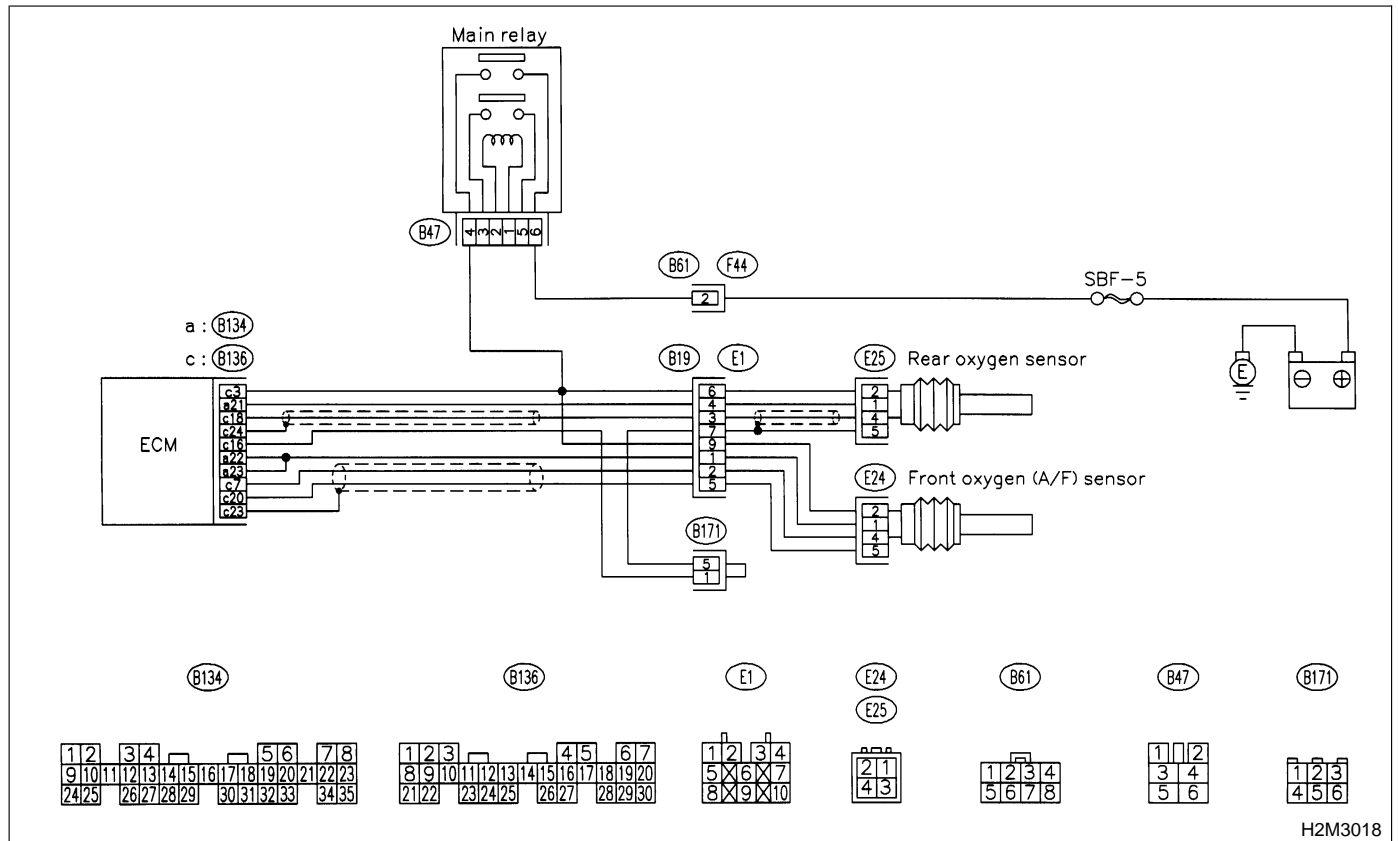

H2M3018

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AH4] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AH1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0131, P0132, P0133, P0135, P0136, P0139, P0141, P0301, P0302, P0303, P0304, P1130, P1131, P1134, P1139, P1150 and P1151?

YES : Inspect the relevant DTC using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:

In this case, it is not necessary to inspect DTC P0420.

NO : Go to step 10AH2.

10AH2 : CHECK EXHAUST SYSTEM.

Check for gas leaks or air suction caused by loose or dislocated nuts and bolts, and open hole at exhaust pipes.

NOTE:

Check the following positions.

- Between cylinder head and front exhaust pipe
- Between front exhaust pipe and front catalytic converter
- Between front catalytic converter and rear catalytic converter


CHECK : Is there a fault in exhaust system?

YES : Repair or replace exhaust system. <Ref. to 2-9 [W1A0].>

NO : Go to step 10AH3.

10AH3 : CHECK REAR CATALYTIC CONVERTER.

Separate rear catalytic converter from rear exhaust pipe.

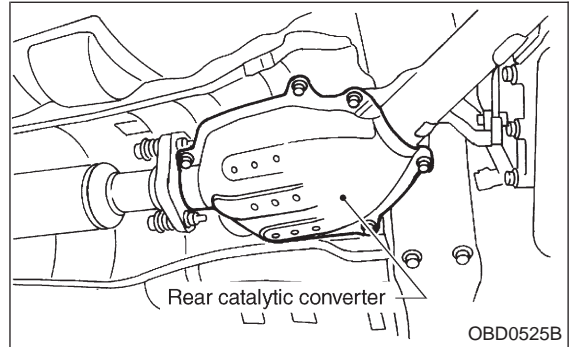


CHECK : Is there damage at rear face of rear catalyst?

YES : Replace front catalytic converter <Ref. to 2-1 [W1A0].> and rear catalytic converter <Ref. to 2-1 [W2A0].>

NO : Go to step 10AH4.

10AH4 : CHECK FRONT CATALYTIC CONVERTER.

Remove front catalytic converter.

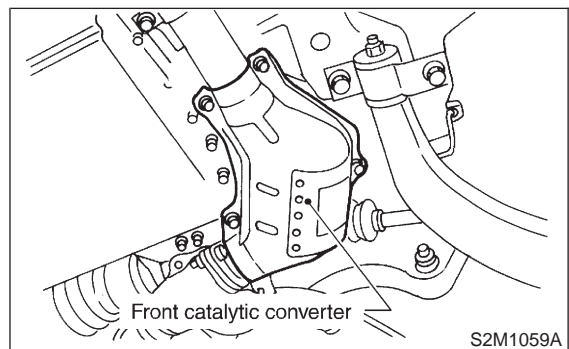

CHECK : Is there damage at rear face or front face of front catalyst?

YES : Replace front catalytic converter. <Ref. to 2-1 [W1A0].>

NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.


AI: DTC P0440 — EVAPORATIVE EMISSION CONTROL SYSTEM MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Gasoline smell

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

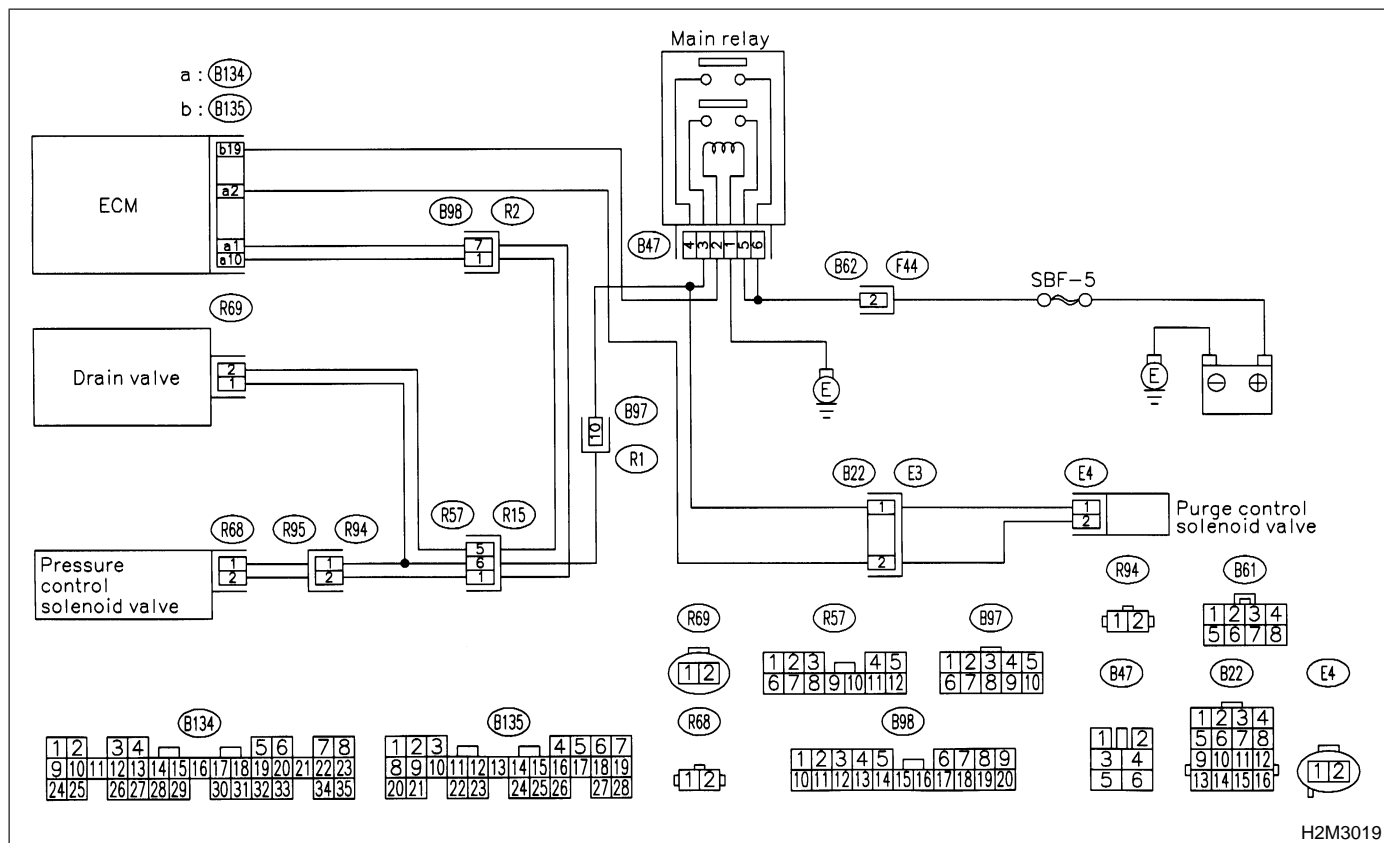

H2M3019

10AI1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : *Is there any other DTC on display?*
- YES** : Inspect the relevant DTC using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10AI2**.

10AI2 : CHECK FUEL FILLER CAP.


- 1) Turn ignition switch to OFF.
 - 2) Open the fuel flap.
- CHECK** : *Is the fuel filler cap tightened securely?*
 - YES** : Go to step **10AI3**.
 - NO** : Tighten fuel filler cap securely.

10A13 : CHECK FUEL FILLER PIPE PACKING.

- CHECK** : *Is there any damage to the seal between fuel filler cap and fuel filler pipe?*
- YES** : Repair or replace fuel filler cap and fuel filler pipe. <Ref. to 2-8 [W3A0].>
- NO** : Go to step **10A14**.

10A14 : CHECK DRAIN VALVE OR VENT CONTROL SOLENOID VALVE.


1) Connect test mode connector.

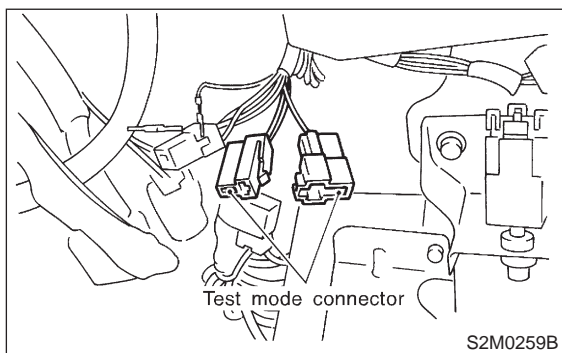

2) Turn ignition switch to ON.

NOTE:

Drain valve or vent control solenoid valve operation check can also be executed using Subaru Select Monitor. For the procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

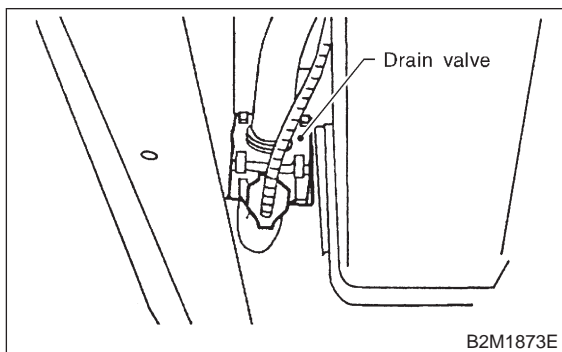


- CHECK** : *Does drain valve produce operating sound?*
- YES** : Go to step **10A15**.
- NO** : Replace drain valve. <Ref. to 2-1 [W13A0].>

10A15 : CHECK PURGE CONTROL SOLENOID VALVE.

NOTE:

Purge control solenoid valve operation check can also be executed using Subaru Select Monitor. For the procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

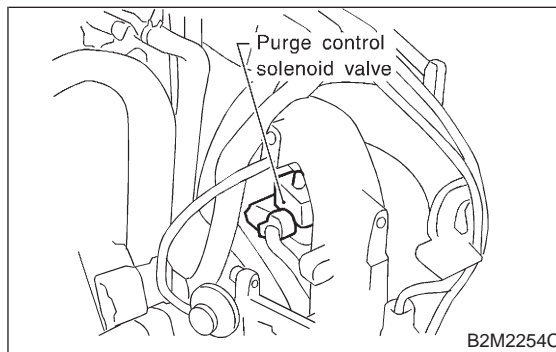


- CHECK** : *Does purge control solenoid valve produce operating sound?*
- YES** : Go to step **10A16**.
- NO** : Replace purge control solenoid valve. <Ref. to 2-1 [W4A0].>

10A16 : CHECK PRESSURE CONTROL SOLENOID VALVE.

NOTE:

Pressure control solenoid valve operation check can also be executed using Subaru Select Monitor. For the procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

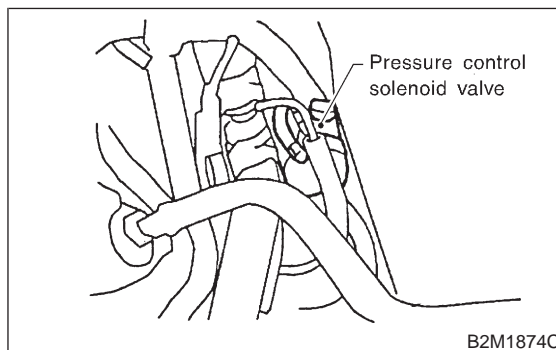

- CHECK** : *Does pressure control solenoid valve produce operating sound?*
- YES** : Go to step **10A17**.
- NO** : Replace pressure control solenoid valve. <Ref. to 2-1 [W7A0].>

10A17 : CHECK EVAPORATIVE EMISSION CONTROL SYSTEM LINE.

Turn ignition switch to OFF.

- CHECK** : *Does fuel leak in fuel line?*
YES : Repair or replace fuel line. <Ref. to 2-8 [W7A0].>
NO : Go to step **10A18**.

10A18 : CHECK CANISTER.

- CHECK** : *Is there any damage at canister?*
YES : Repair or replace canister. <Ref. to 2-1 [W3A0].>
NO : Go to step **10A19**.

10A19 : CHECK FUEL TANK.

- CHECK** : *Is there any damage at fuel tank?*
YES : Repair or replace fuel tank. <Ref. to 2-8 [W2A0].>
NO : Go to step **10A110**.

10A110 : CHECK ANY OTHER MECHANICAL TROUBLE IN EVAPORATIVE EMISSION CONTROL SYSTEM.

- CHECK** : *Are there holes, cracks, clogging or disconnections of hoses or pipes in evaporative emission control system?*
YES : Repair or replace hoses or pipes.
NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10A110] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AJ: DTC P0443 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

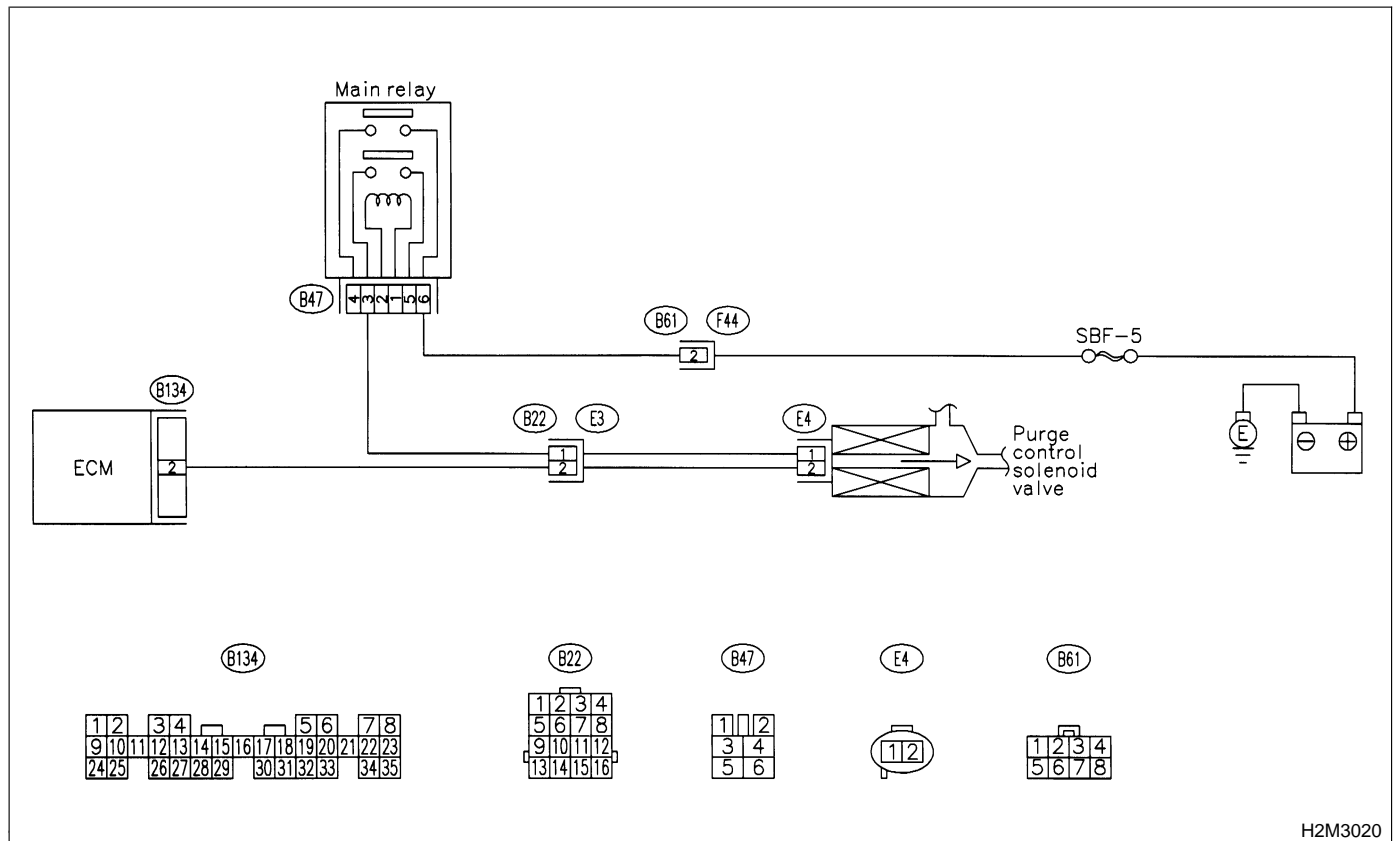


H2M3020

10AJ1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B134) No. 2 (+) — Chassis ground (-):

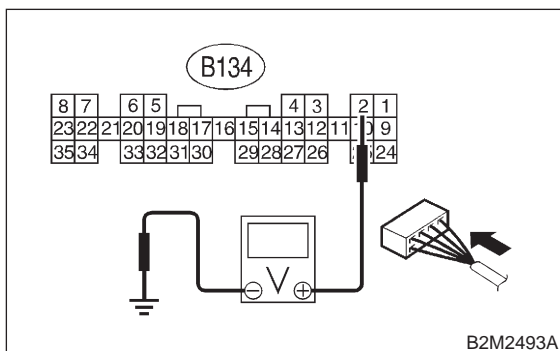

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Even if MIL lights up, the circuit has returned to a normal condition at this time. Contact with SOA service.


NOTE:
 Inspection by DTM is required, because probable cause is deterioration of multiple parts.

- NO** : Go to step **10AJ2**.

10AJ2 : CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from purge control solenoid valve and ECM.
- 3) Measure resistance of harness between purge control solenoid valve connector and engine ground.

Connector & terminal
(E4) No. 2 — Engine ground:

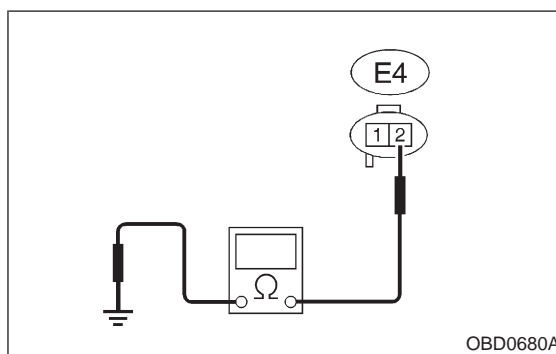


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between ECM and purge control solenoid valve connector.
- NO** : Go to step **10AJ3**.

10AJ3 : CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.

Measure resistance of harness between ECM and purge control solenoid valve of harness connector.

Connector & terminal

(B134) No. 2 — (E4) No. 2:

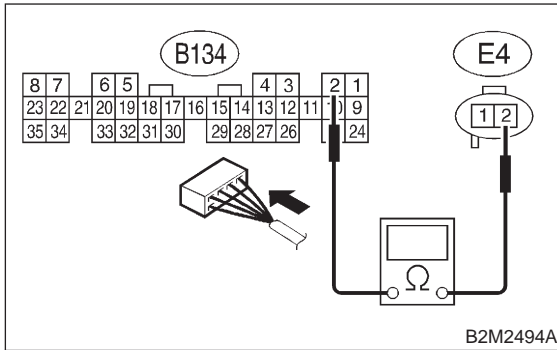

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AJ4.
- NO** : Repair open circuit in harness between ECM and purge control solenoid valve connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and purge control solenoid valve connector
- Poor contact in coupling connector (B22)

10AJ4 : CHECK PURGE CONTROL SOLENOID VALVE.

- 1) Remove purge control solenoid valve.
- 2) Measure resistance between purge control solenoid valve terminals.

Terminals

No. 1 — No. 2:

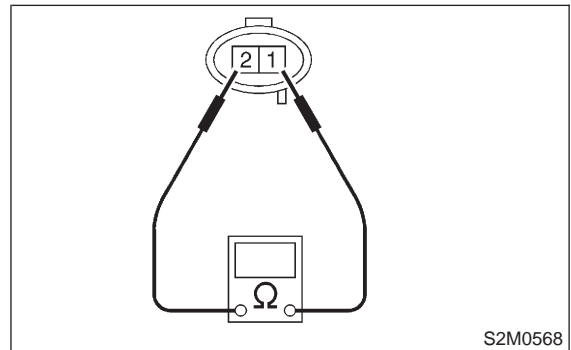


- CHECK** : Is the resistance between 10 and 100 Ω?
- YES** : Go to step 10AJ5.
- NO** : Replace purge control solenoid valve. <Ref. to 2-1 [W4A0].>

10AJ5 : CHECK POWER SUPPLY TO PURGE CONTROL SOLENOID VALVE.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between purge control solenoid valve and engine ground.

Connector & terminal

(E4) No. 1 (+) — Engine ground (-):

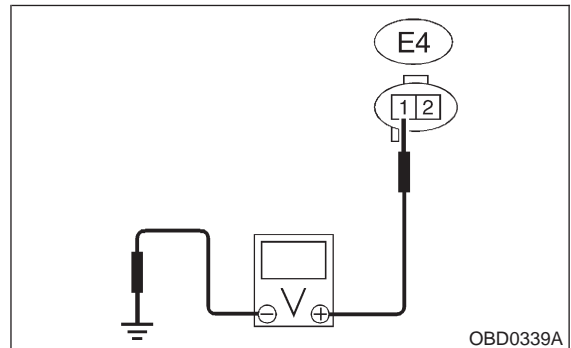

- CHECK** : Is the voltage more than 10 V?
- YES** : Go to step 10AJ6.
- NO** : Repair open circuit in harness between main relay and purge control solenoid valve connector.

10AJ6 : CHECK POOR CONTACT.

Check poor contact in purge control solenoid valve connector. <Ref. to FOREWORD [T3C1].>

CHECK : *Is there poor contact in purge control solenoid valve connector?*

YES : Repair poor contact in purge control solenoid valve connector.

NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.


AK: DTC P0446 — EVAPORATIVE EMISSION CONTROL SYSTEM VENT CONTROL LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

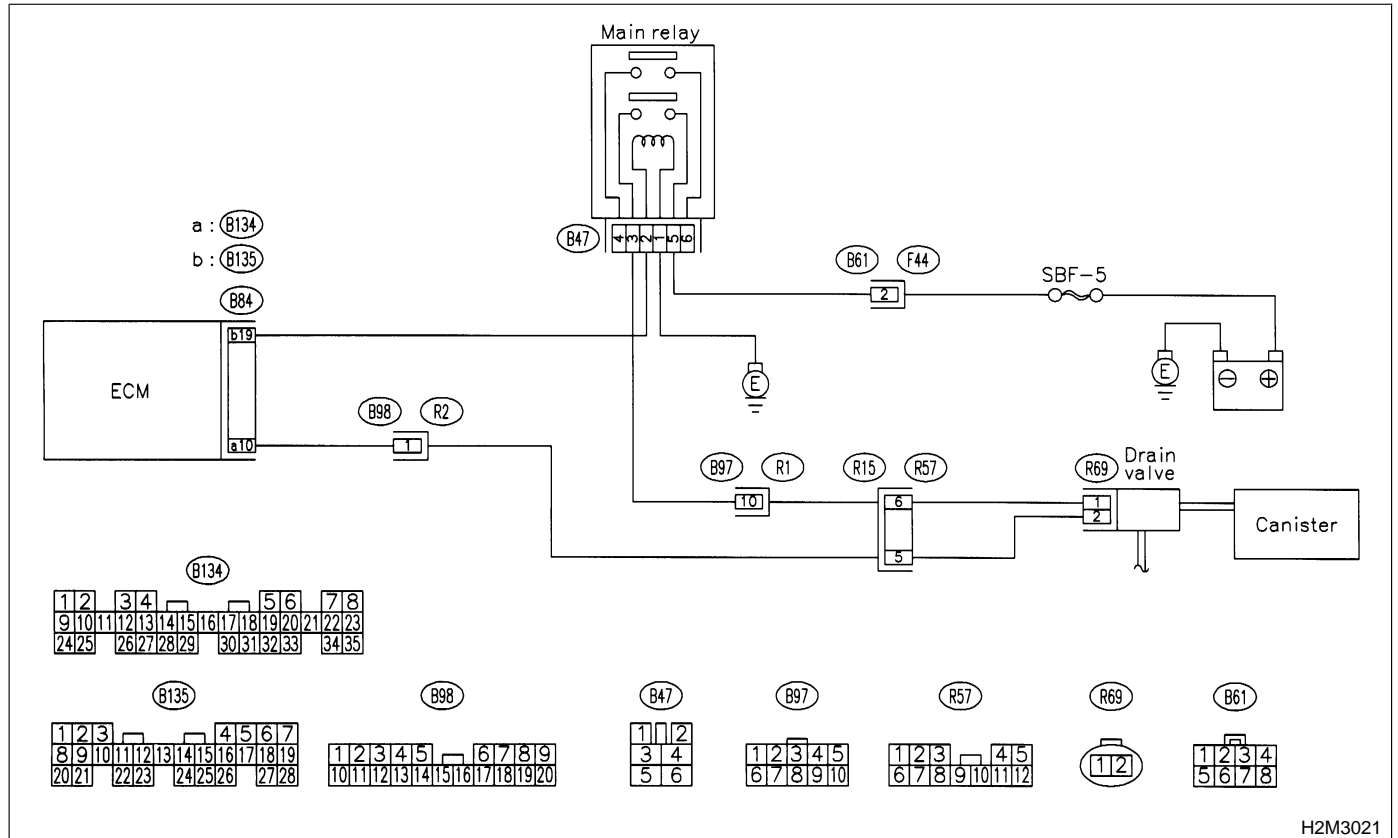


H2M3021

10AK1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B134) No. 10 (+) — Chassis ground (-):

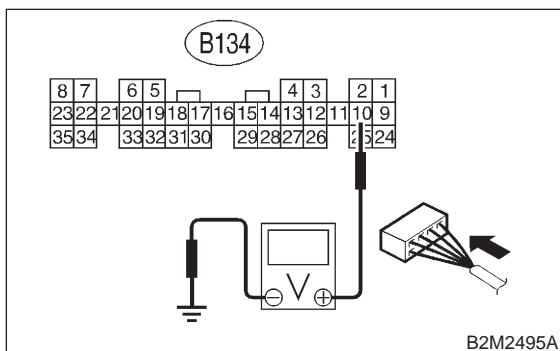

- CHECK** : Is the voltage more than 10 V?
- YES** : Go to step 10AK2.
- NO** : Go to step 10AK3.

10AK2 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : Is there poor contact in ECM connector?
- YES** : Repair poor contact in ECM connector.
- NO** : Even if MIL lights up, the circuit has returned to a normal condition at this time. (However, the possibility of poor contact still remains.)

NOTE:


In this case, repair the following:

- Poor contact in drain valve connector
- Poor contact in ECM connector
- Poor contact in coupling connectors (B98) and (R57)

10AK3 : CHECK HARNESS BETWEEN DRAIN VALVE AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from drain valve and ECM.
- 3) Measure resistance of harness between drain valve connector and chassis ground.

Connector & terminal
(R69) No. 2 — Chassis ground:

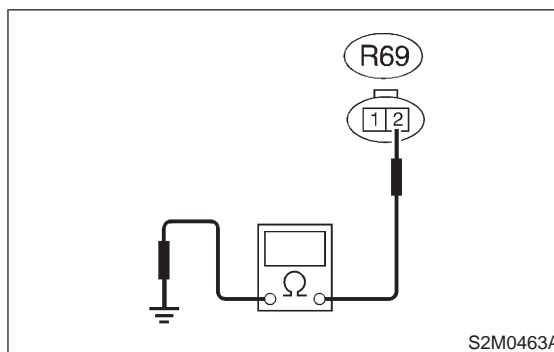

- CHECK** : Is the resistance less than 10 Ω?
- YES** : Repair ground short circuit in harness between ECM and drain valve connector.
- NO** : Go to step 10AK4.

2-7 [T10AK4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AK4 : CHECK HARNESS BETWEEN DRAIN VALVE AND ECM CONNECTOR.

Measure resistance of harness between ECM and drain valve connector.

Connector & terminal

(B134) No. 10 — (R69) No. 2:

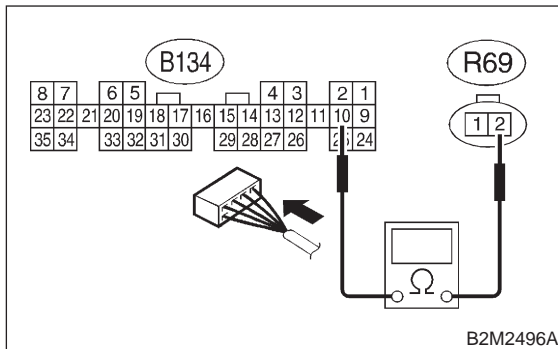

CHECK : Is the resistance less than 1 Ω?

YES : Go to step 10AK5.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and drain valve connector
- Poor contact in coupling connectors (B98) and (R57)

10AK5 : CHECK DRAIN VALVE.

Measure resistance between drain valve terminals.

Terminals

No. 1 — No. 2:

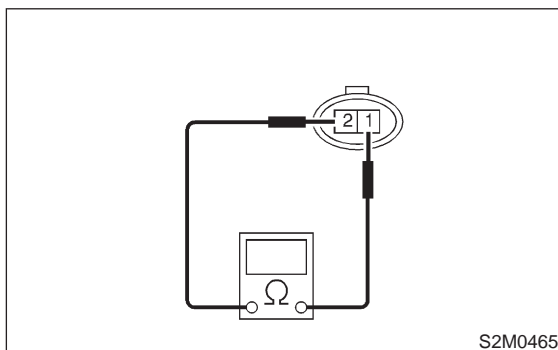

CHECK : Is the resistance between 10 and 100 Ω?

YES : Go to step 10AK6.

NO : Replace drain valve. <Ref. to 2-1 [W13A0].>


10AK6 : CHECK POWER SUPPLY TO DRAIN VALVE.

1) Turn ignition switch to ON.

2) Measure voltage between drain valve and chassis ground.

Connector & terminal

(R69) No. 1 (+) — Chassis ground (-):

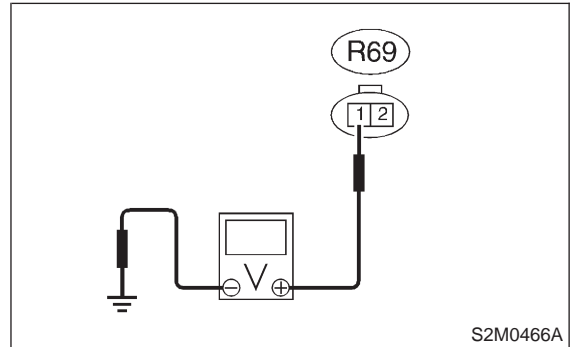

CHECK : Is the voltage more than 10 V?

YES : Go to step 10AK7.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between main relay and drain valve
- Poor contact in coupling connectors (B97) and (R57)
- Poor contact in main relay connector

10AK7 : CHECK POOR CONTACT.

Check poor contact in drain valve connector. <Ref. to FOREWORD [T3C1].>

CHECK : Is there poor contact in drain valve connector?

YES : Repair poor contact in drain valve connector.

NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AK7] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AL: DTC P0451 — EVAPORATIVE EMISSION CONTROL SYSTEM PRESSURE SENSOR RANGE/PERFORMANCE PROBLEM —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

- **WIRING DIAGRAM:**

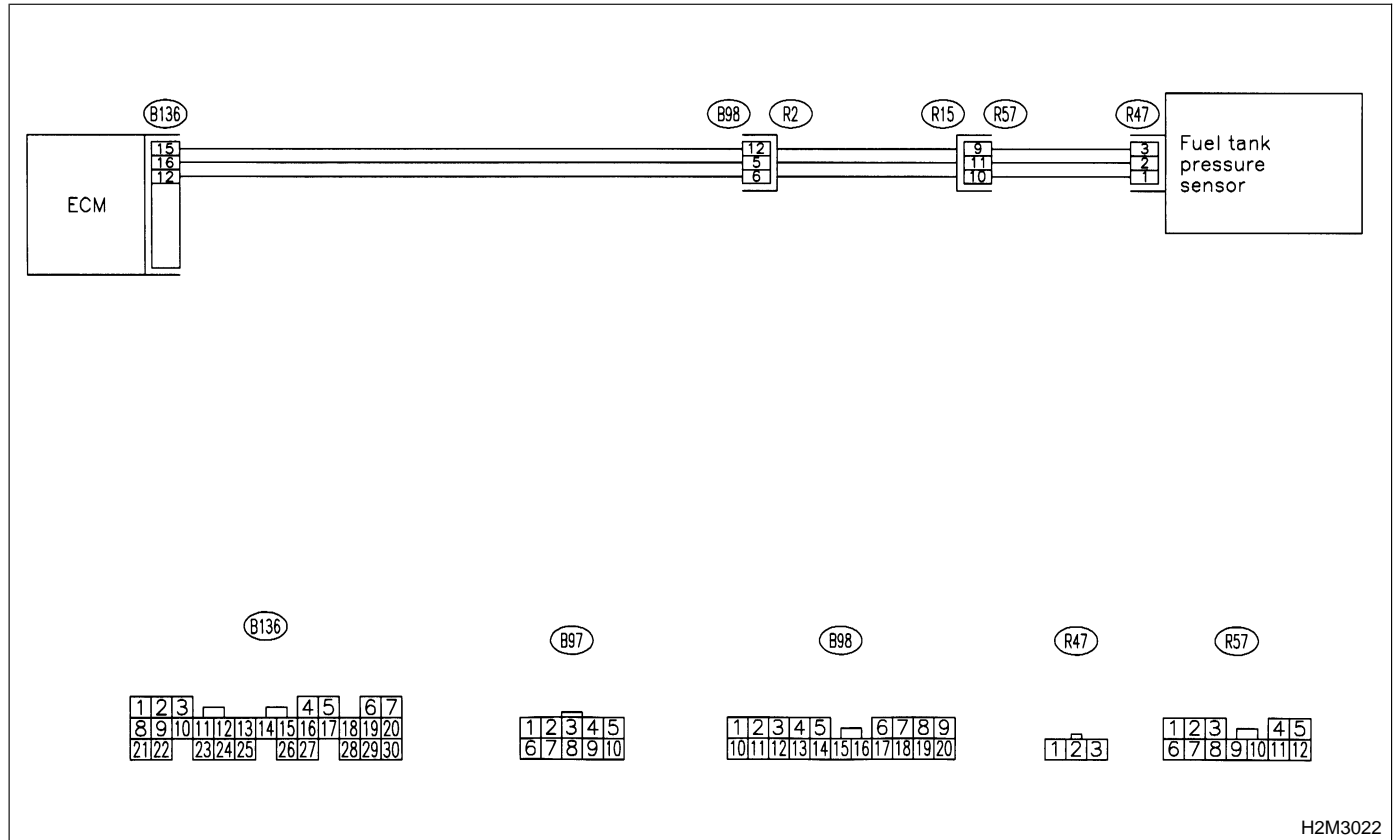

H2M3022

10AL1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : *Is there any DTC on display?*
- YES** : Inspect the relevant DTC using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10AL2**.

10AL2 : CHECK FUEL FILLER CAP.

- 1) Turn ignition switch to OFF.
 - 2) Open the fuel flap.
- CHECK** : *Is the fuel filler cap tightened securely?*
 - YES** : Go to step **10AL3**.
 - NO** : Tighten fuel filler cap securely.

**10AL3 : CHECK PRESSURE/VACUUM
LINE.****NOTE:**

Check the following items.

- Disconnection, leakage and clogging of the vacuum hoses and pipes between fuel tank pressure sensor and fuel tank
- Disconnection, leakage and clogging of air ventilation hoses and pipes between fuel filler pipe and fuel tank

CHECK : *Is there a fault in pressure/vacuum line?*

YES : Repair or replace hoses and pipes.

NO : Replace fuel tank pressure sensor.
<Ref. to 2-1 [W6A0].>


AM: DTC P0452 — EVAPORATIVE EMISSION CONTROL SYSTEM PRESSURE SENSOR LOW INPUT —

- DTC DETECTING CONDITION:
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


- WIRING DIAGRAM:

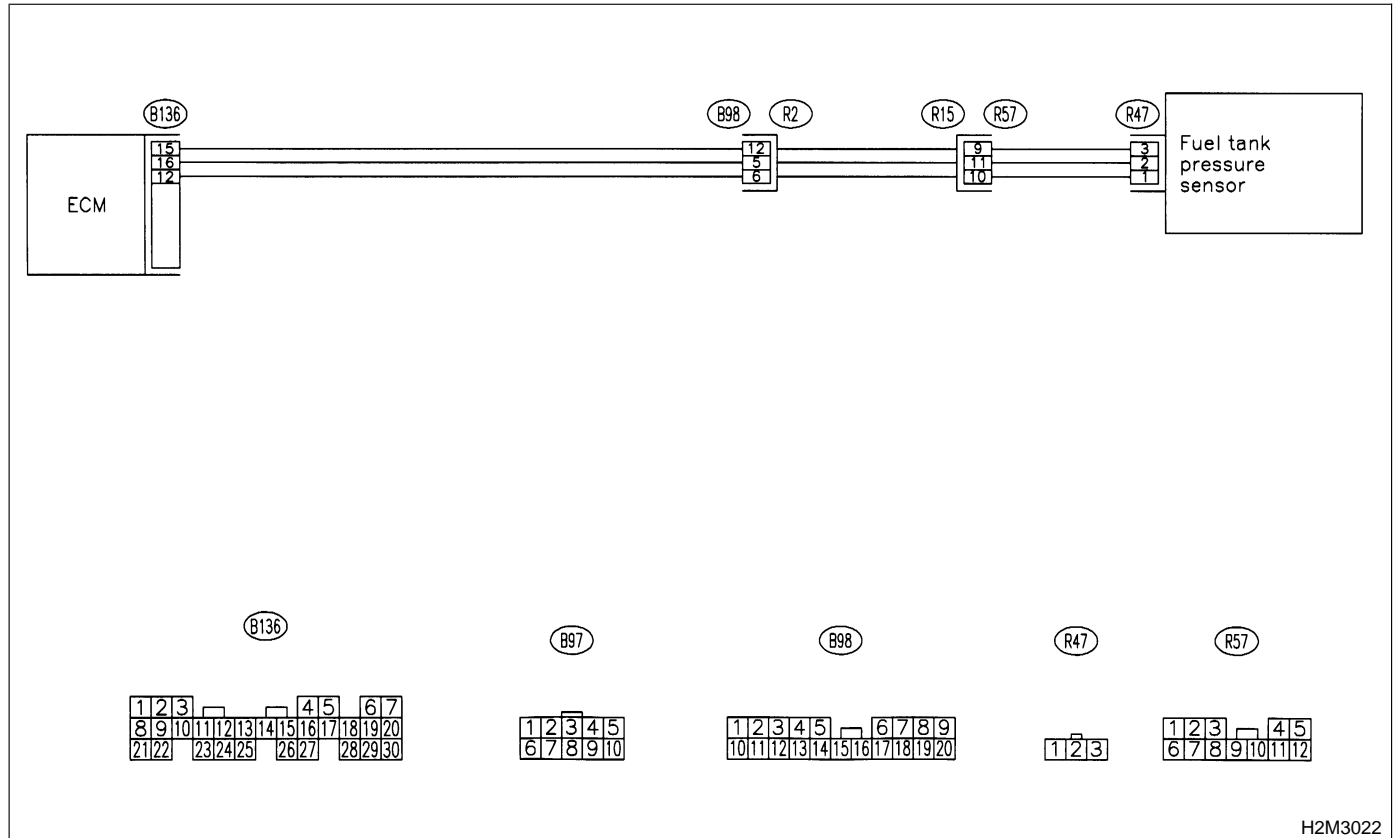

H2M3022

10AM1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Remove fuel filler cap.
- 3) Install fuel filler cap.
- 4) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

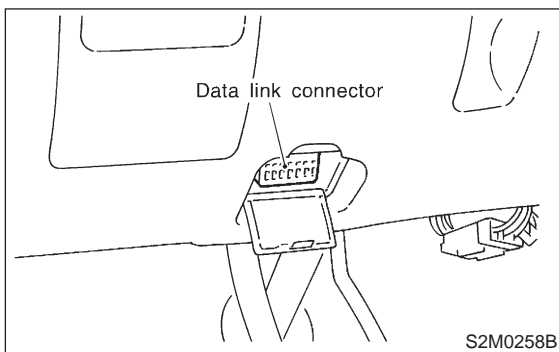

- 5) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 6) Read the data of fuel tank pressure sensor signal using Subaru Select Monitor or the OBD-II general scan tool.

NOTE:


- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value less than -2.8 kPa (-21.0 mmHg, -0.827 inHg)?*
- YES** : Go to step 10AM2.
- NO** : Even if MIL lights up, the circuit has returned to a normal condition at this time.

10AM2 : CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B136) No. 15 (+) — Chassis ground (-):

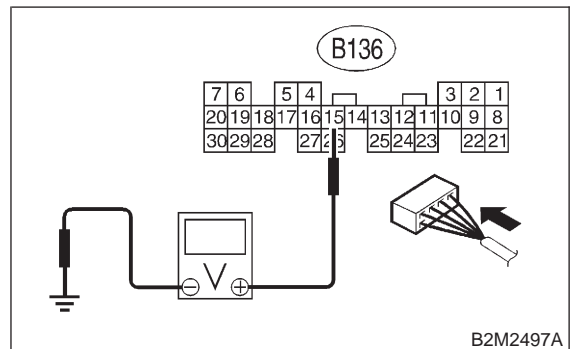


- CHECK** : *Is the voltage more than 4.5 V?*
- YES** : Go to step 10AM4.
- NO** : Go to step 10AM3.

10AM3 : CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B136) No. 15 (+) — Chassis ground (-):

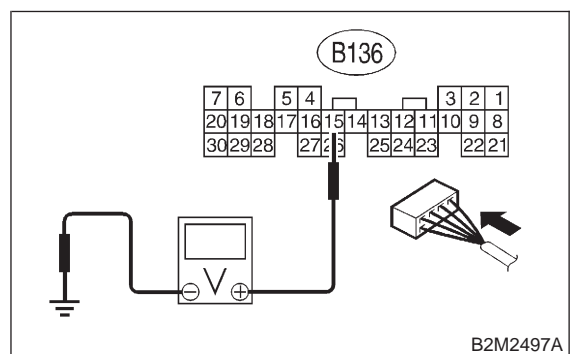

- CHECK** : *Does the voltage change more than 4.5 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*
- YES** : Repair poor contact in ECM connector.
- NO** : Contact with SOA service.


NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10AM4 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal
(B136) No. 12 (+) — Chassis ground (-):

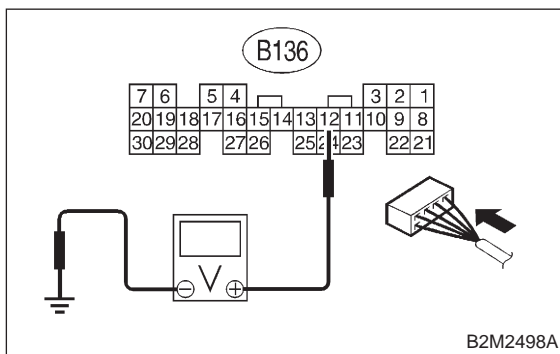

- CHECK** : *Is the voltage less than 0.2 V?*
- YES** : Go to step **10AM6**.
- NO** : Go to step **10AM5**.

10AM5 : CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)

Read data of fuel tank pressure sensor signal using Subaru Select Monitor.

NOTE:


- Subaru Select Monitor
- For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- CHECK** : *Does the value change more than -2.8 kPa (-21.0 mmHg, -0.827 inHg) by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?*
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step **10AM6**.

10AM6 : CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.

- 1) Turn ignition switch to OFF.
- 2) Remove rear seat cushion (Sedan) or move rear seat cushion (Wagon).
- 3) Separate rear wiring harness and fuel tank cord.
- 4) Turn ignition switch to ON.
- 5) Measure voltage between rear wiring harness connector and chassis ground.

Connector & terminal
(R15) No. 9 (+) — Chassis ground (-):

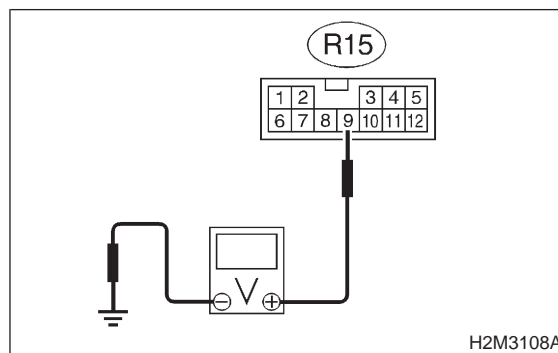

- CHECK** : *Is the voltage more than 4.5 V?*
- YES** : Go to step **10AM7**.
- NO** : Repair harness and connector.

NOTE:


- In this case, repair the following:
- Open circuit in harness between ECM and rear wiring harness connector (R15)
 - Poor contact in coupling connector (B98)

10AM7 : CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM and rear wiring harness connector.

Connector & terminal

(B136) No. 16 — (R15) No. 11:

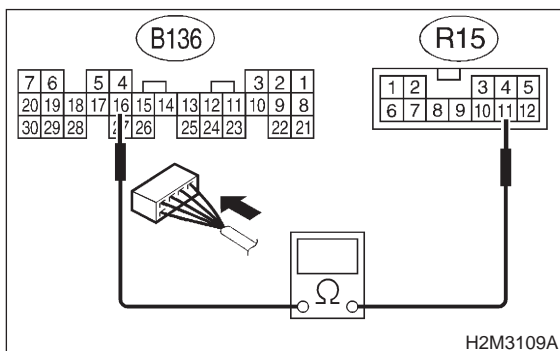

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AM8.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and rear wiring harness connector (R15)
- Poor contact in coupling connector (B98)

10AM8 : CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.

Measure resistance of harness between rear wiring harness connector and chassis ground.

Connector & terminal

(R15) No. 11 — Chassis ground:

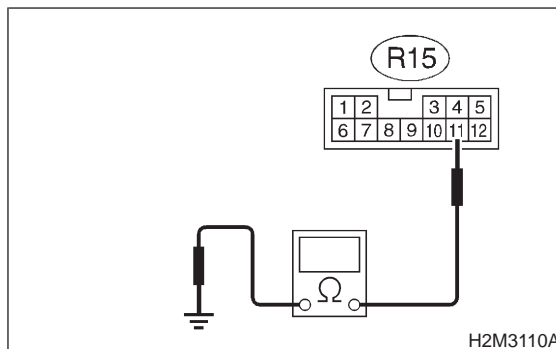


- CHECK** : Is the resistance more than 500 kΩ?
- YES** : Go to step 10AM9.
- NO** : Repair ground short circuit in harness between ECM and rear wiring harness connector (R15).

10AM9 : CHECK FUEL TANK CORD.

- 1) Remove fuel tank. <Ref. to 2-8 [W2A0].>
- 2) Disconnect connector from fuel tank pressure sensor.
- 3) Measure resistance of fuel tank cord.

Connector & terminal

(R57) No. 9 — (R47) No. 3:

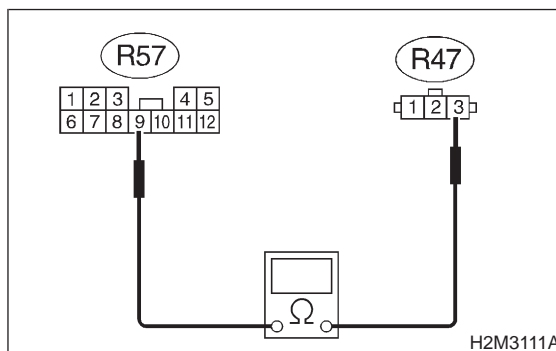


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AM10.
- NO** : Repair open circuit in fuel tank cord.

10AM10 : CHECK FUEL TANK CORD.

Measure resistance of fuel tank cord.

Connector & terminal

(R57) No. 10 — (R47) No. 1:

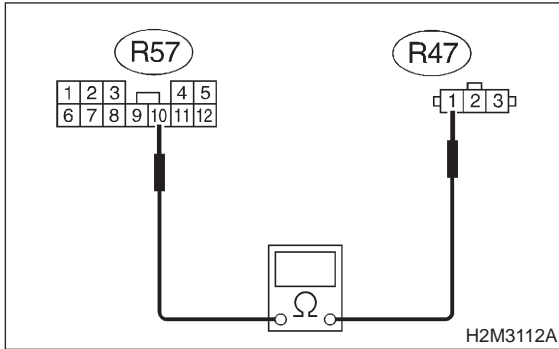


- CHECK** : **Is the resistance less than 1 Ω?**
- YES** : Go to step **10AM11**.
- NO** : Repair open circuit in fuel tank cord.

10AM11 : CHECK FUEL TANK CORD.

Measure resistance of harness between fuel tank pressure sensor connector and chassis ground.

Connector & terminal

(R47) No. 2 — Chassis ground:

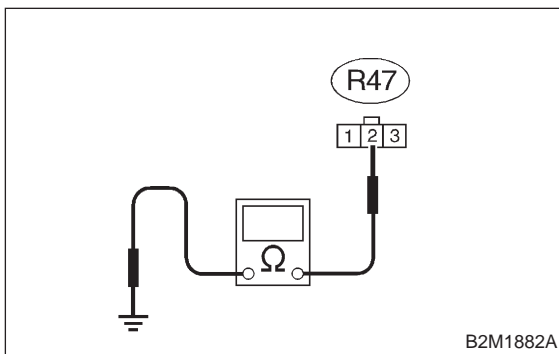

- CHECK** : **Is the resistance more than 500 kΩ?**
- YES** : Go to step **10AM12**.
- NO** : Repair ground short circuit in fuel tank cord.

10AM12 : CHECK POOR CONTACT.

Check poor contact in fuel tank pressure sensor connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : **Is there poor contact in fuel tank pressure sensor connector?**
- YES** : Repair poor contact in fuel tank pressure sensor connector.
- NO** : Replace fuel tank pressure sensor. <Ref. to 2-1 [W6A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AM12] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AN: DTC P0453 — EVAPORATIVE EMISSION CONTROL SYSTEM PRESSURE SENSOR HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


- **WIRING DIAGRAM:**

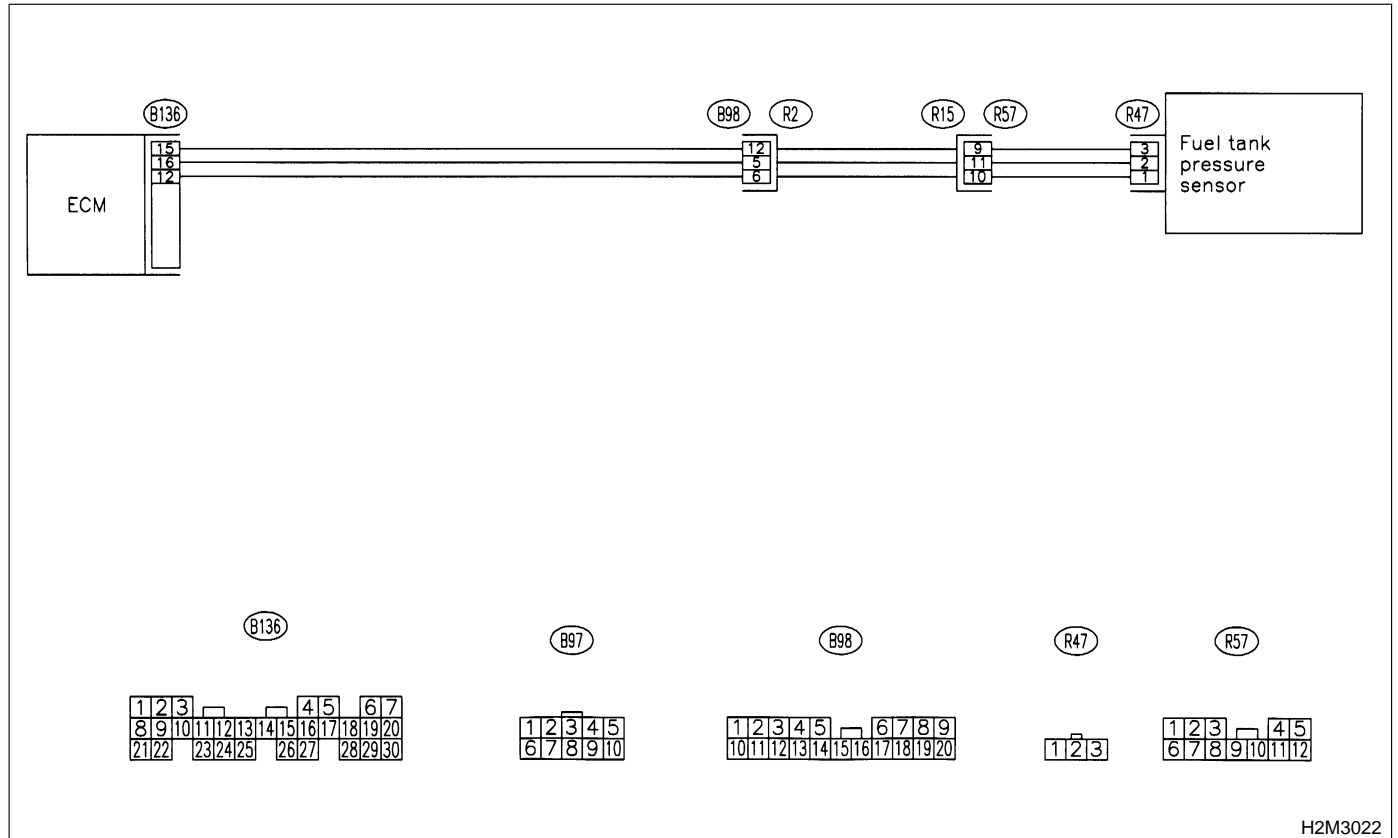

H2M3022

10AN1 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Remove fuel filler cap.
- 3) Install fuel filler cap.
- 4) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

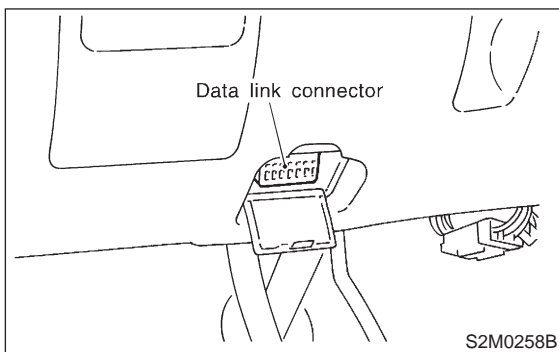

- 5) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 6) Read data of fuel tank pressure sensor signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:


- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value more than 2.8 kPa (21.0 mmHg, 0.827 inHg)?*
- YES** : Go to step 10AN12.
- NO** : Go to step 10AN2.

10AN2 : CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B136) No. 15 (+) — Chassis ground (-):

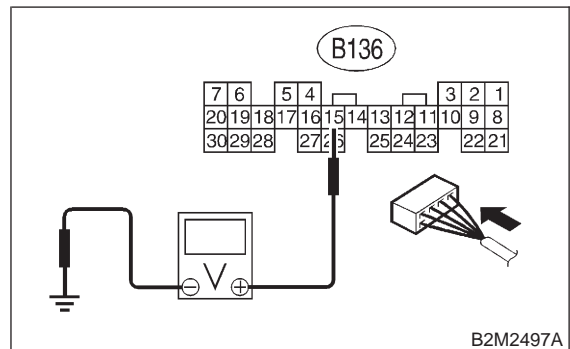


- CHECK** : *Is the voltage more than 4.5 V?*
- YES** : Go to step 10AN4.
- NO** : Go to step 10AN3.

10AN3 : CHECK POWER SUPPLY TO FUEL TANK PRESSURE SENSOR.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B136) No. 15 (+) — Chassis ground (-):

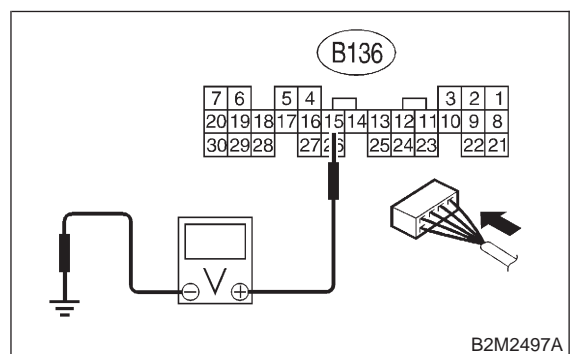

- CHECK** : *Does the voltage change more than 4.5 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

2-7 [T10AN4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AN4 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal

(B136) No. 12 (+) — Chassis ground (-):

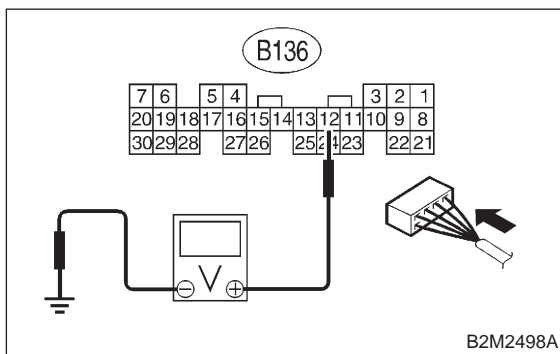

- CHECK** : Is the voltage less than 0.2 V?
YES : Go to step 10AN6.
NO : Go to step 10AN5.

10AN5 : CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)

Read data of fuel tank pressure sensor signal using Subaru Select Monitor.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>


- CHECK** : Does the value change more than -2.8 kPa (-21.0 mmHg, -0.827 inHg) by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?
YES : Repair poor contact in ECM connector.
NO : Go to step 10AN6.

10AN6 : CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.

- Turn ignition switch to OFF.
- Remove rear seat cushion (Sedan) or move rear seat cushion (Wagon).
- Separate rear wiring harness and fuel tank cord.
- Turn ignition switch to ON.
- Measure voltage between rear wiring harness connector and chassis ground.

Connector & terminal

(R15) No. 9 (+) — Chassis ground (-):

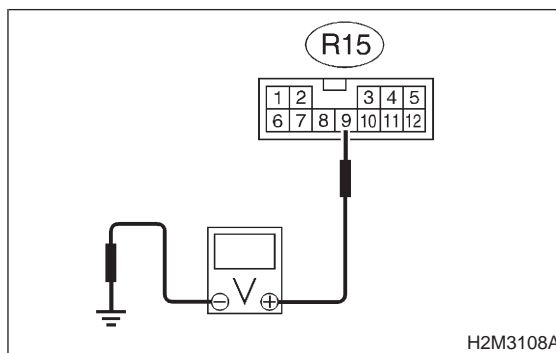

- CHECK** : Is the voltage more than 4.5 V?
YES : Go to step 10AN7.
NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and rear wiring harness connector (R15)
- Poor contact in coupling connector (B98)

10AN7 : CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM and rear wiring harness connector.

Connector & terminal

(B136) No. 12 — (R15) No. 10:

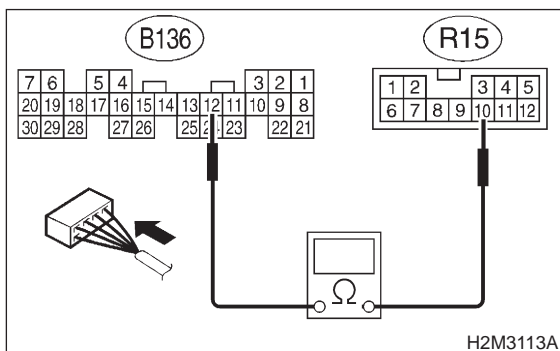

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AN8.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and rear wiring harness connector (R15)
- Poor contact in coupling connector (B98)

10AN8 : CHECK HARNESS BETWEEN ECM AND COUPLING CONNECTOR IN REAR WIRING HARNESS.

Measure resistance of harness between rear wiring harness connector and chassis ground.

Connector & terminal

(B136) No. 16 — (R15) No. 11:

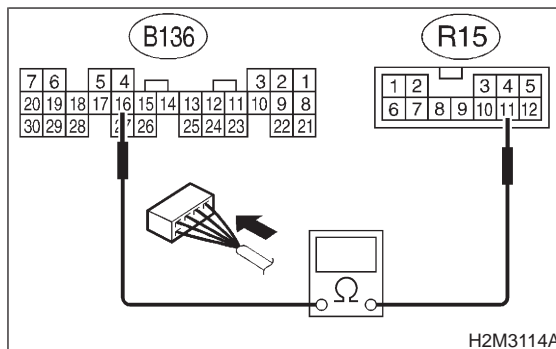


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AN9.
- NO** : Repair ground short circuit in harness between ECM and rear wiring harness connector (R15).

10AN9 : CHECK FUEL TANK CORD.

- 1) Remove fuel tank. <Ref. to 2-8 [W2A0].>
- 2) Disconnect connector from fuel tank pressure sensor.
- 3) Measure resistance of fuel tank cord.

Connector & terminal

(R57) No. 11 — (R47) No. 2:

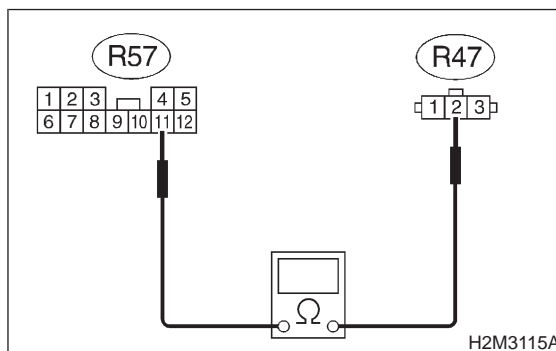


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AN10.
- NO** : Repair open circuit in fuel tank cord.

10AN10 : CHECK FUEL TANK CORD.

Measure resistance of fuel tank cord.

Connector & terminal

(R57) No. 10 — (R47) No. 1:

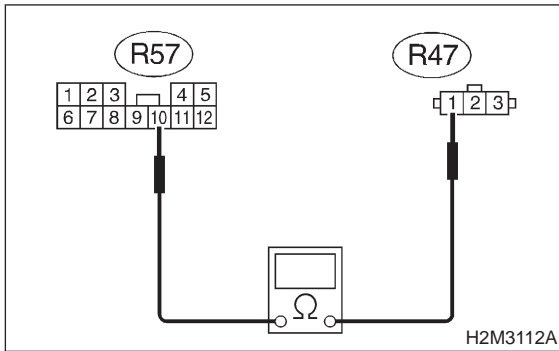

- CHECK** : *Is the resistance less than 1 Ω?*
YES : Go to step **10AN11**.
NO : Repair open circuit in fuel tank cord.

10AN11 : CHECK POOR CONTACT.

Check poor contact in fuel tank pressure sensor connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in fuel tank pressure sensor connector?*
YES : Repair poor contact in fuel tank pressure sensor connector.
NO : Replace fuel tank pressure sensor. <Ref. to 2-1 [W6A0].>

10AN12 : CHECK HARNESS BETWEEN ECM AND FUEL TANK PRESSURE SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF and Subaru Select Monitor or the OBD-II general scan tool switch to OFF.
- 2) Remove fuel tank. <Ref. to 2-8 [W2A0].>
- 3) Remove fuel tank cord from fuel tank.
- 4) Connect fuel tank cord to rear wiring harness.
- 5) Remove fuel filler cap.
- 6) Install fuel filler cap.
- 7) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 8) Read data of fuel tank pressure sensor signal using Subaru Select Monitor or the OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value more than 2.8 kPa (21.0 mmHg, 0.827 inHg)?*
YES : Repair battery short circuit in harness between ECM and fuel tank pressure sensor connector.
NO : Replace fuel tank pressure sensor. <Ref. to 2-1 [W6A0].>


AO: DTC P0461 — FUEL LEVEL SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

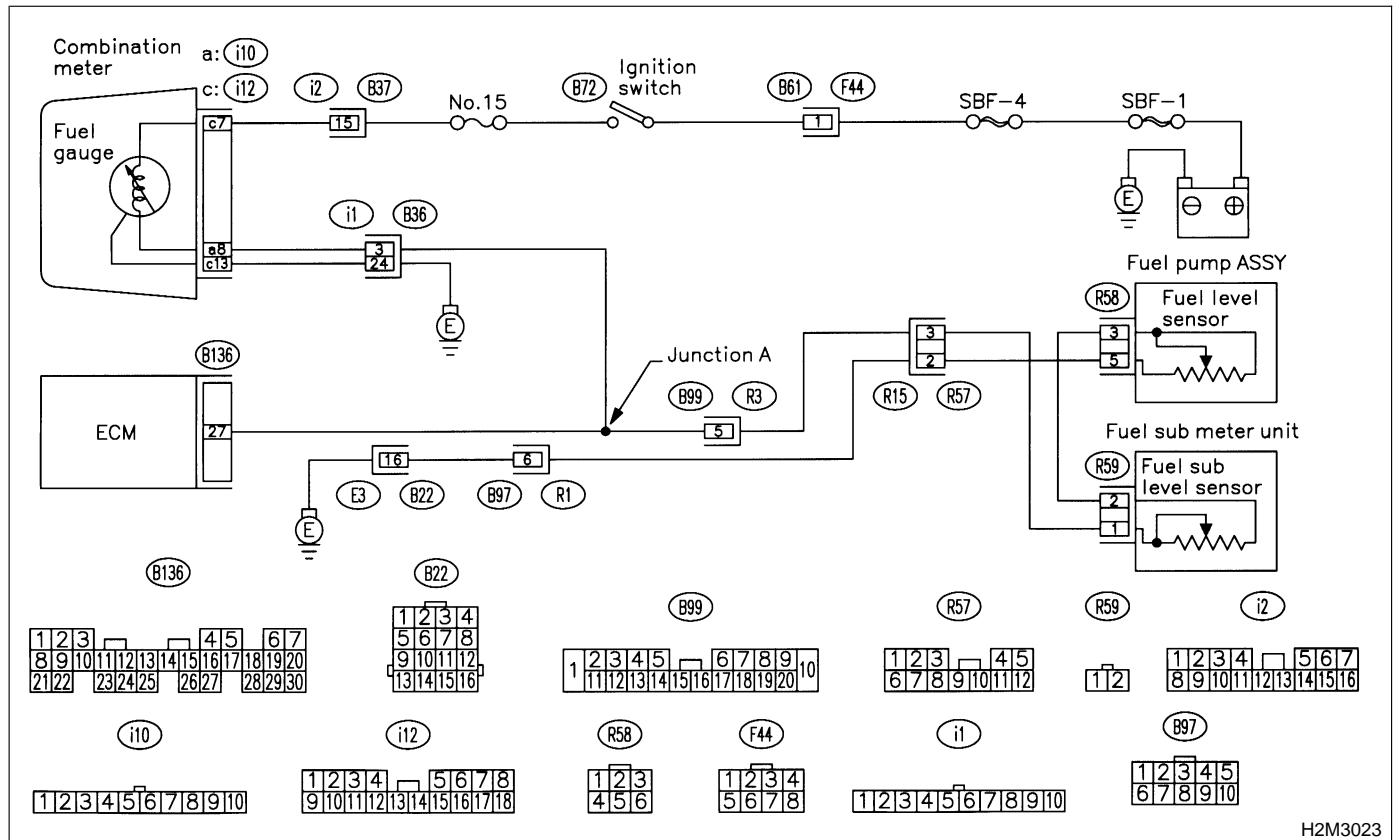

H2M3023

10A01 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0462 or P0463?
- YES** : Inspect DTC P0462 or P0463 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:

In this case, it is not necessary to inspect this trouble.

- NO** : Replace fuel sending unit <Ref. to 2-1 [W8A0].> and fuel sub meter unit <Ref. to 2-1 [W10A0].>


AP: DTC P0462 — FUEL LEVEL SENSOR CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

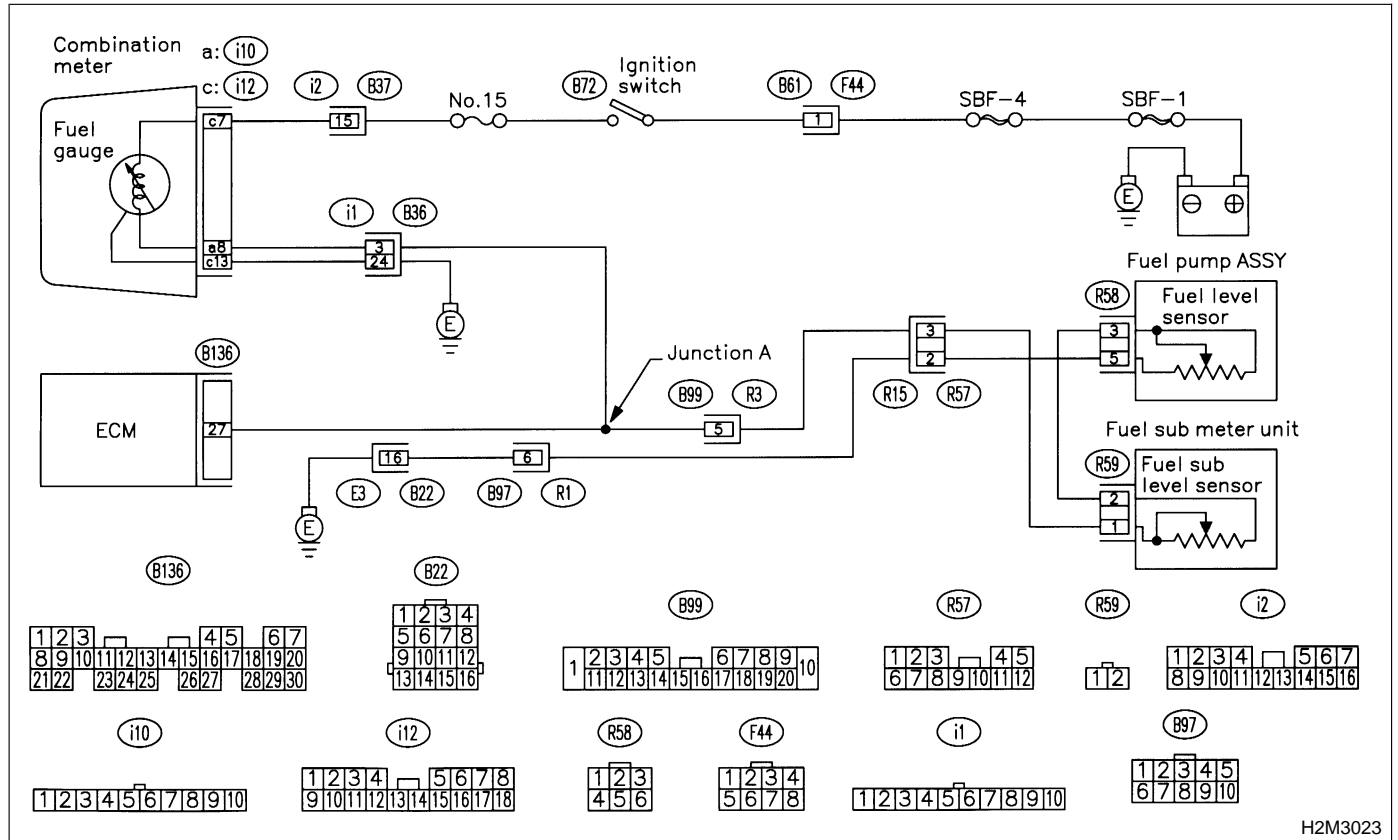


H2M3023

10AP1 : CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER.

- CHECK** : Does speedometer and tachometer operate normally?
- YES** : Go to step 10AP3.
- NO** : Go to step 10AP2.

10AP2 : CHECK GROUND CIRCUIT OF COMBINATION METER.


- 1) Turn ignition switch to OFF.
- 2) Pull out combination meter from instrument panel. <Ref. to 6-2 [W8A0].>

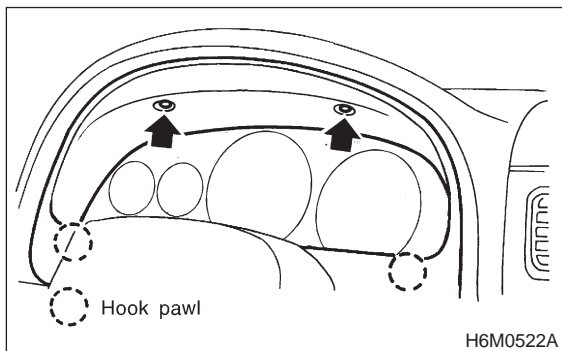

- 3) Disconnect connector from combination meter.
- 4) Measure resistance of harness between combination meter connector and chassis ground.

Connector & terminal

(i12) No. 1 — Chassis ground:

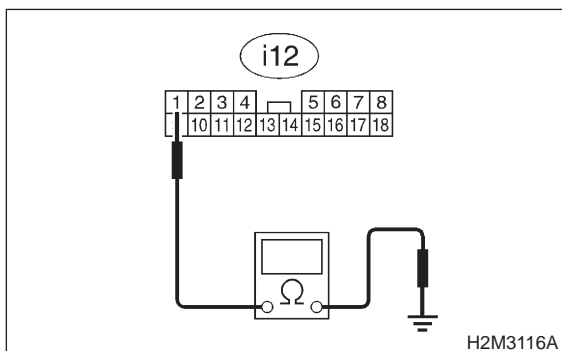

- CHECK** : Is resistance less than 5 Ω?
- YES** : Repair or replace combination meter. <Ref. to 6-2 [W8A0].>
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between combination meter connector and grounding terminal
- Poor contact in combination meter connector
- Poor contact in grounding terminal

10AP3 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON. (Engine OFF)
- 2) Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 27 (+) — Chassis ground (-):

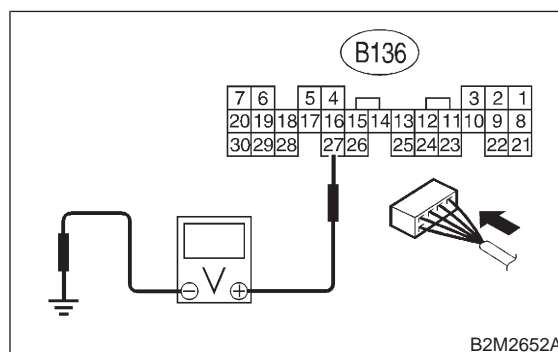

- CHECK** : Is the voltage less than 0.12 V?
- YES** : Go to step 10AP5.
- NO** : Go to step 10AP4.

10AP4 : CHECK INPUT SIGNAL FOR ECM. (USING SUBARU SELECT MONITOR.)

Read data of fuel level sensor signal using Subaru Select Monitor.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- CHECK** : Does the value change less than 0.12 V by shaking harness and connector of ECM while monitoring the value with Subaru Select Monitor?

- YES** : Repair poor contact in ECM connector.
- NO** : Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause.

NOTE:

In this case, repair the following:

- Poor contact in fuel pump connector
- Poor contact in combination meter connector
- Poor contact in ECM connector
- Poor contact in coupling connectors (i1), (B22), (B99), (B97) and (R57)


2-7 [T10AP5]

ON-BOARD DIAGNOSTICS II SYSTEM

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AP5 : CHECK HARNESS BETWEEN ECM, COMBINATION METER AND FUEL PUMP CONNECTOR.


- 1) Turn ignition switch to OFF.
- 2) Remove fuel pump access hole lid located on the right rear of trunk compartment floor (Sedan) or luggage compartment floor (Wagon).

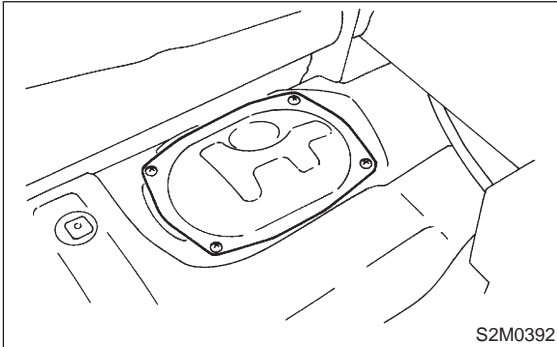

- 3) Disconnect connector from fuel pump.
- 4) Measure resistance of harness between fuel pump connector and chassis ground.

Connector & terminal


(R58) No. 3 — Chassis ground:

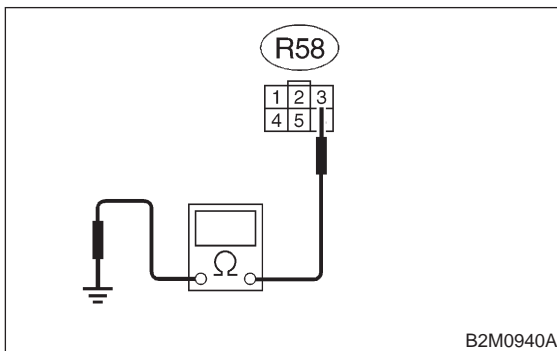

- CHECK** : Is the resistance less than 10 Ω?
YES : Go to step 10AP6.
NO : Go to step 10AP11.

10AP6 : CHECK FUEL TANK CORD.


- 1) Remove service hole cover located on the left rear of trunk compartment floor (Sedan) or luggage compartment floor (Wagon).

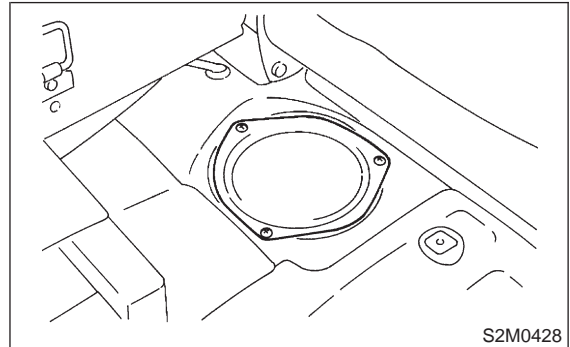

- 2) Disconnect connector from fuel sub meter unit.
- 3) Measure resistance of harness between fuel pump connector and chassis ground.

Connector & terminal

(R58) No. 3 — Chassis ground:

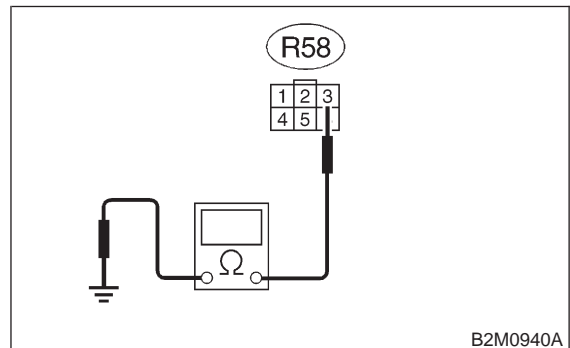


- CHECK** : Is the resistance less than 10 Ω?
YES : Repair ground short circuit in harness between fuel pump and fuel sub meter unit connector.
NO : Go to step 10AP7.

10AP7 : CHECK REAR WIRING HARNESS.

- 1) Separate fuel tank cord connector (R57) and rear wiring harness connector (R15).
- 2) Measure resistance of harness between fuel sub meter unit connector and chassis ground.

Connector & terminal
(R59) No. 1 — Chassis ground:

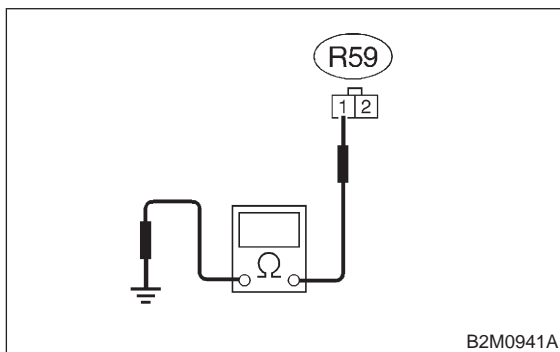


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Repair ground short circuit in fuel tank cord.
- NO** : Go to step **10AP8**.

10AP8 : CHECK REAR, BULKHEAD AND INSTRUMENT PANEL WIRING HARNESS.

- 1) Separate rear wiring harness connector (R1) and bulkhead wiring harness connector (B97).
- 2) Measure resistance of harness between rear wiring harness connector and chassis ground.

Connector & terminal
(R15) No. 3 — Chassis ground:

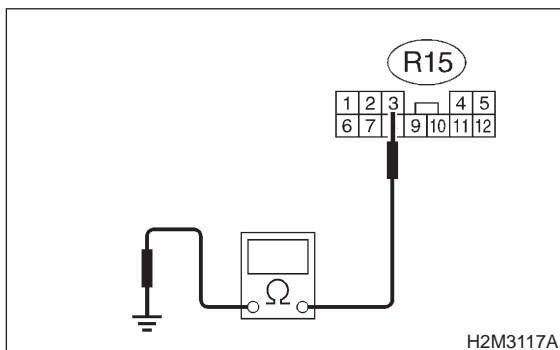


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Go to step **10AP9**.
- NO** : Repair ground short circuit in bulkhead wiring harness.

10AP9 : CHECK REAR WIRING HARNESS.

- 1) Separate rear wiring harness connector (R3) and bulkhead wiring harness connector (B99).
- 2) Measure resistance of harness between rear wiring harness connector and chassis ground.

Connector & terminal
(R3) No. 5 — Chassis ground:

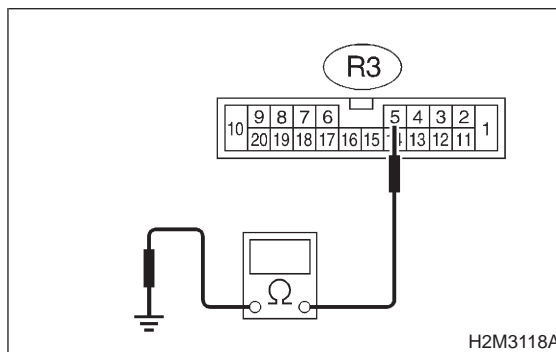


- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Repair ground short circuit in rear wiring harness.
- NO** : Go to step **10AP10**.

10AP10 : CHECK BULKHEAD WIRING HARNESS.

- 1) Separate bulkhead wiring harness connector (B36) and instrument panel wiring harness connector (i1).
- 2) Measure resistance of harness between bulkhead wiring harness connector and chassis ground.

Connector & terminal
(B99) No. 5 — Chassis ground:

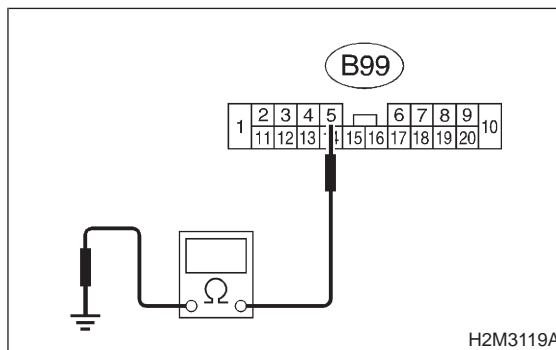

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Repair ground short circuit in bulkhead wiring harness.
- NO** : Repair ground short circuit in instrument panel wiring harness.


2-7 [T10AP11]

ON-BOARD DIAGNOSTICS II SYSTEM

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AP11 : CHECK HARNESS BETWEEN COMBINATION METER AND FUEL PUMP CONNECTOR.


- 1) Connect connector to fuel pump.
- 2) Pull out combination meter from instrument panel. <Ref. to 6-2 [W8A0].>

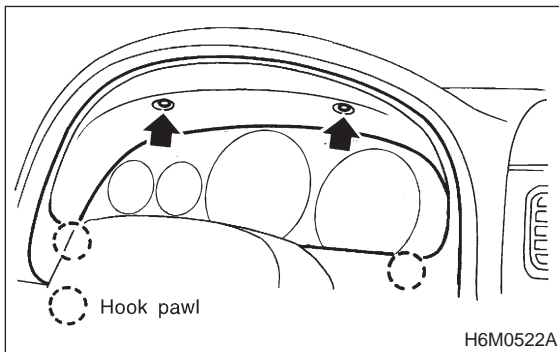

- 3) Disconnect connector from combination meter.
- 4) Measure resistance of harness between combination meter connector and chassis ground.

Connector & terminal

(i10) No. 8 — Chassis ground:

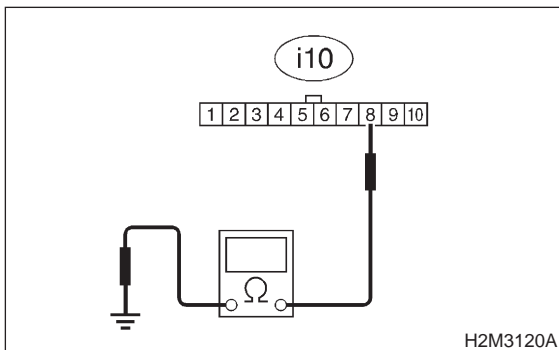

- CHECK** : *Is the resistance less than 200 Ω?*
- YES** : Go to step **10AP12**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between combination meter connector and junction A on rear wiring harness
- Poor contact in coupling connectors (i1) and (B99)

10AP12 : CHECK COMBINATION METER.

Disconnect connector from combination meter and remove combination meter.

- CHECK** : *Is the fuel meter installation screw tightened securely?*
- YES** : Go to step **10AP13**.
- NO** : Tighten fuel meter installation screw securely.

10AP13 : CHECK COMBINATION METER PRINTED CIRCUIT PLATE.

Remove printed circuit plate assembly from combination meter assembly.

- CHECK** : *Is there flaw or burning on printed circuit plate assembly?*
- YES** : Replace printed circuit plate assembly.
- NO** : Replace fuel meter assembly. <Ref. to 6-2 [W8A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AP13] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AQ: DTC P0463 — FUEL LEVEL SENSOR CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

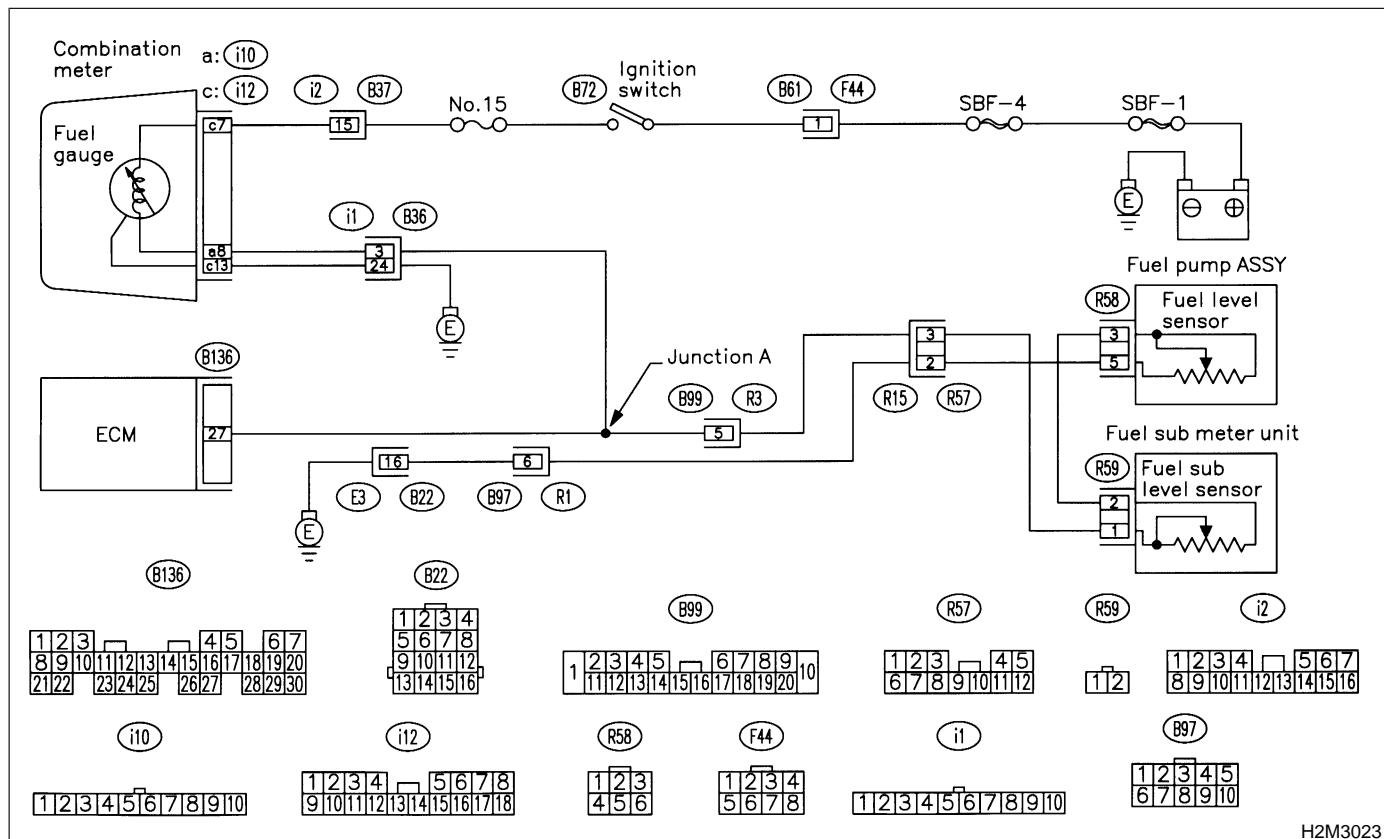


H2M3023

10AQ1 : CHECK SPEEDOMETER AND TACHOMETER OPERATION IN COMBINATION METER.

- CHECK** : Does speedometer and tachometer operate normally?
- YES** : Go to step 10AQ3.
- NO** : Go to step 10AQ2.


10AQ2 : CHECK GROUND CIRCUIT OF COMBINATION METER.

- 1) Turn ignition switch to OFF.
- 2) Pull out combination meter from instrument panel. <Ref. to 6-2 [W8A0].>

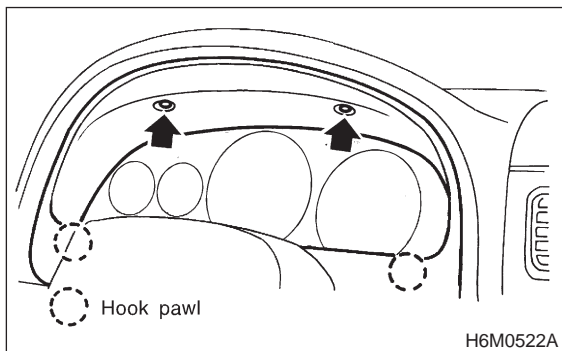

- 3) Disconnect connector from combination meter.
- 4) Measure resistance of harness between combination meter connector and chassis ground.

Connector & terminal
(i12) No. 1 — Chassis ground (-):

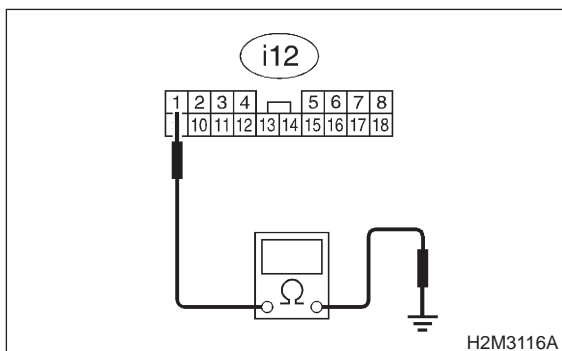

- CHECK** : **Is resistance less than 5 Ω?**
- YES** : Repair or replace combination meter. <Ref. to 6-2 [W8A0].>
- NO** : Repair harness and connector.

NOTE:


In this case, repair the following:

- Open circuit in harness between combination meter connector and grounding terminal
- Poor contact in combination meter connector
- Poor contact in grounding terminal

10AQ3 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON. (Engine OFF)
- 2) Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B136) No. 27 (+) — Chassis ground (-):

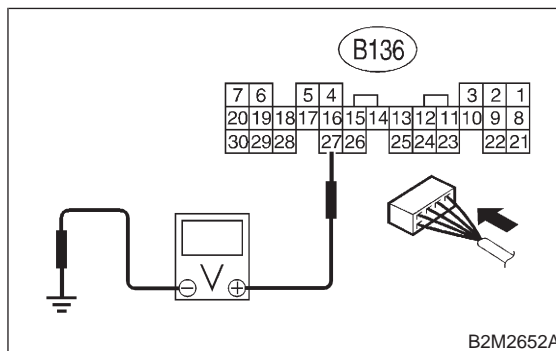

- CHECK** : **Is the voltage more than 4.75 V?**
- YES** : Go to step 10AQ4.
- NO** : Even if MIL lights up, the circuit has returned to a normal condition at this time. A temporary poor contact of the connector may be the cause.

NOTE:

In this case, repair the following:

- Poor contact in fuel pump connector
- Poor contact in combination meter connector
- Poor contact in ECM connector
- Poor contact in coupling connector (i1), (B99), (B22), (B97) and (R57)


2-7 [T10AQ4]

ON-BOARD DIAGNOSTICS II SYSTEM

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AQ4 : CHECK FUEL LEVEL SENSOR.


- 1) Turn ignition switch to OFF.
- 2) Remove fuel pump access hole lid located on the right rear of trunk compartment floor (Sedan) or luggage compartment floor (Wagon).

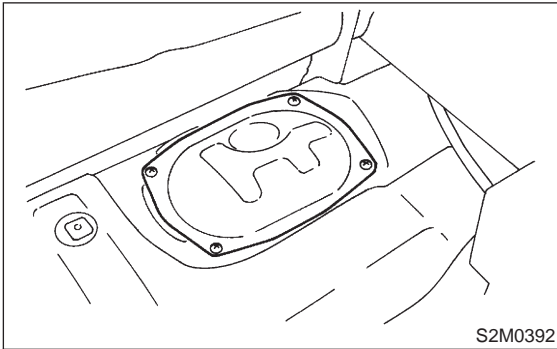

- 3) Disconnect connector from fuel pump.
- 4) Measure resistance between connector terminals of fuel pump.

Terminals


No. 3 — No. 5:

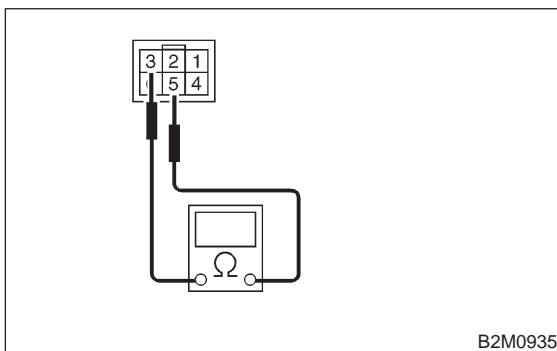

- CHECK** : Is the resistance less than 100 Ω ?
- YES** : Go to step 10AQ5.
- NO** : Replace fuel sending unit. <Ref. to 2-1 [W8A0].>

10AQ5 : CHECK FUEL SUB LEVEL SENSOR.


- 1) Remove service hole cover located on the left rear of trunk compartment floor (Sedan) or luggage compartment floor (Wagon).

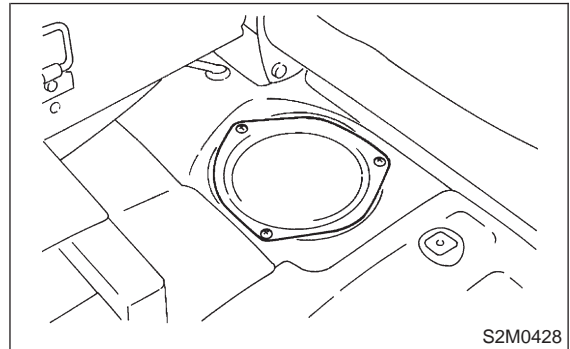

- 2) Disconnect connector from fuel sub meter unit.
- 3) Measure resistance between connector terminals of fuel sub meter unit.

Terminals

No. 1 — No. 2:

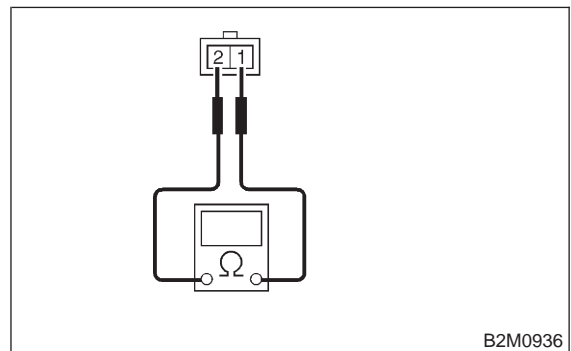


- CHECK** : Is the resistance less than 100 Ω ?
- YES** : Go to step 10AQ6.
- NO** : Replace fuel sub meter unit. <Ref. to 2-1 [W10A0].>

10AQ6 : CHECK HARNESS BETWEEN FUEL PUMP AND FUEL SUB METER UNIT CONNECTOR.

Measure resistance of harness between fuel pump and fuel sub meter unit connector.

Connector & terminal
(R58) No. 3 — (R59) No. 2:

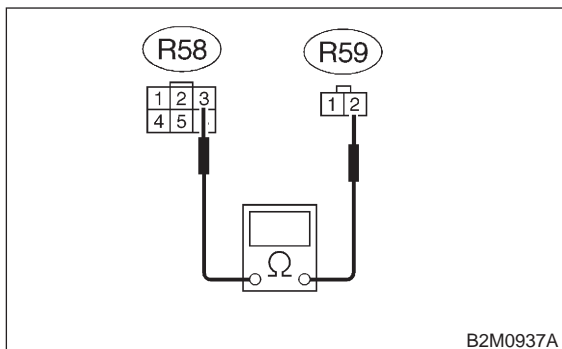


- CHECK** : **Is the resistance less than 1 Ω?**
- YES** : Go to step **10AQ7**.
- NO** : Repair open circuit in harness between fuel pump and fuel sub meter unit connector.

10AQ7 : CHECK GROUND CIRCUIT OF FUEL LEVEL SENSOR.

Measure resistance of harness between fuel pump connector and chassis ground.

Connector & terminal
(R58) No. 5 — Chassis ground:

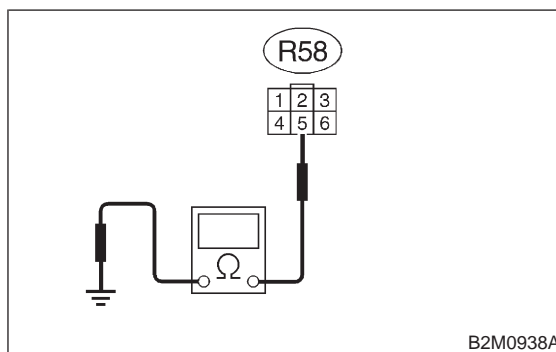

- CHECK** : **Is the resistance less than 5 Ω?**
- YES** : Go to step **10AQ8**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between fuel pump connector and chassis grounding terminal
- Poor contact in fuel pump connector
- Poor contact in coupling connectors (R57), (B97) and (B22)

2-7 [T10AQ8]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AQ8 : CHECK HARNESS BETWEEN ECM AND FUEL PUMP CONNECTOR.

- 1) Connect connector to fuel sub meter unit.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between fuel pump connector and chassis ground.

Connector & terminal

(R58) No. 3 (+) — Chassis ground (-):

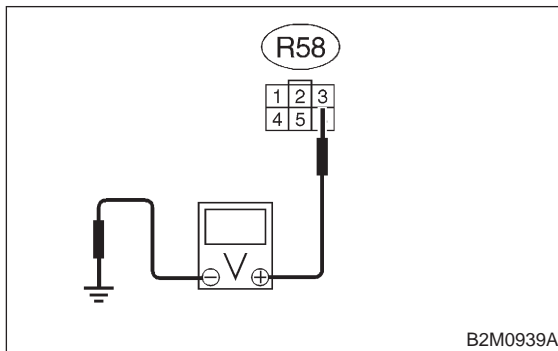

CHECK : Is the voltage less than 1 V?

YES : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between fuel pump connector and junction A on rear wiring harness
- Poor contact in fuel sub meter unit connector
- Poor contact in fuel pump connector
- Poor contact in coupling connector (R57) and (R59)


NO : Go to step **10AQ9**.

10AQ9 : CHECK HARNESS BETWEEN ECM AND FUEL PUMP CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 27 (+) — Chassis ground (-):

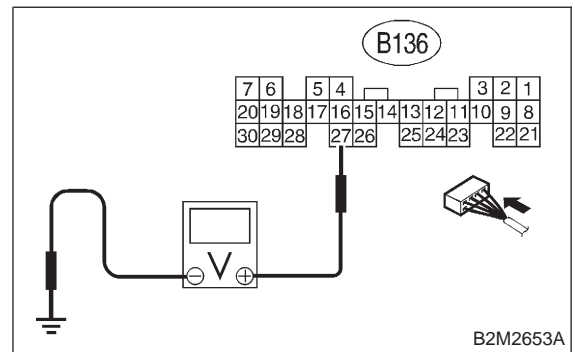

CHECK : Is the voltage less than 1 V?

YES : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM connector and junction A on rear wiring harness
- Poor contact in coupling connector (B97)

NO : Repair connector.

NOTE:

In this case, repair the following:

- Poor contact in fuel pump connector
- Poor contact in fuel sub meter unit
- Poor contact in ECM connector

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AQ9] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AR: DTC P0480 — COOLING FAN RELAY 1 CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Radiator fan does not operate properly.
 - Overheating

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

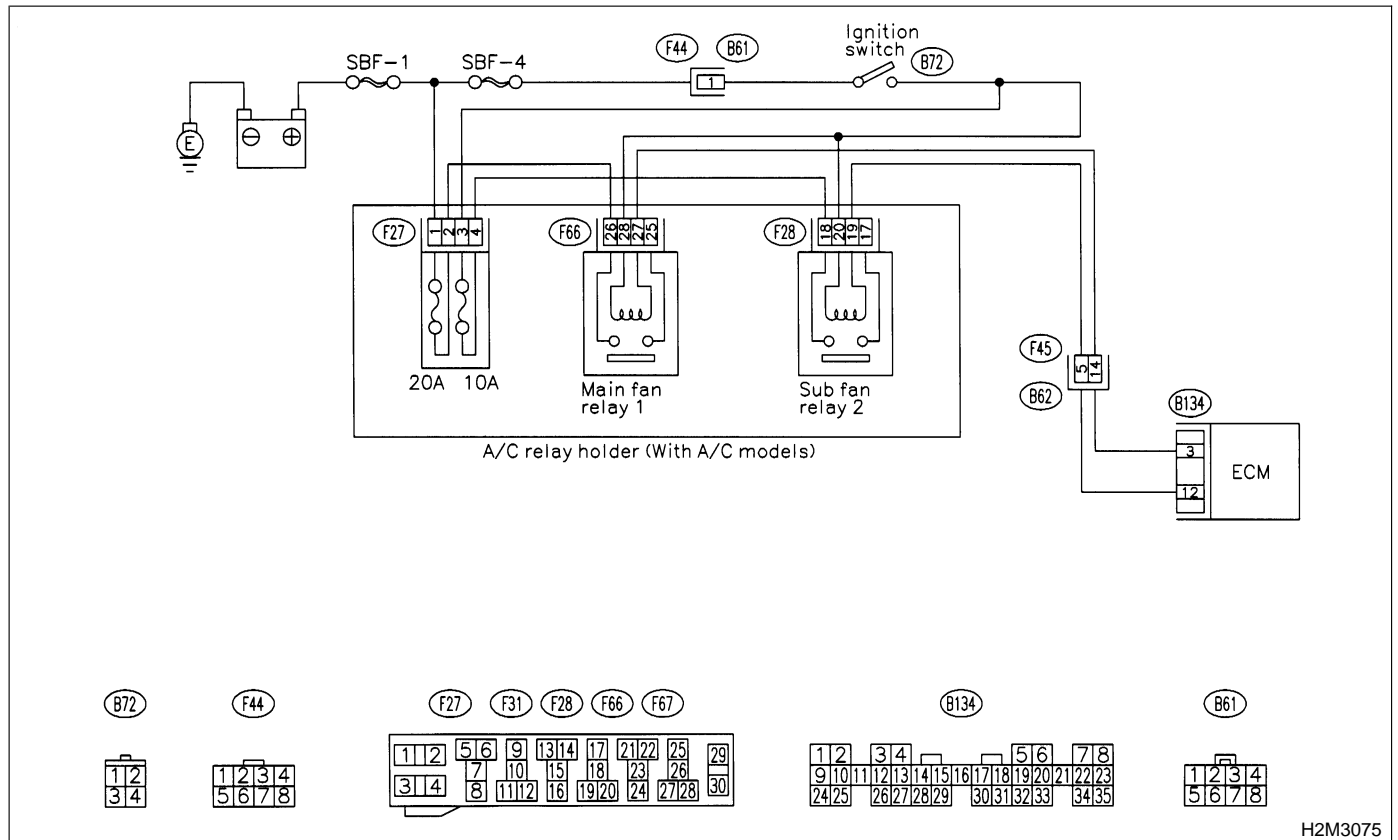

H2M3075

10AR1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to OFF.
- 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

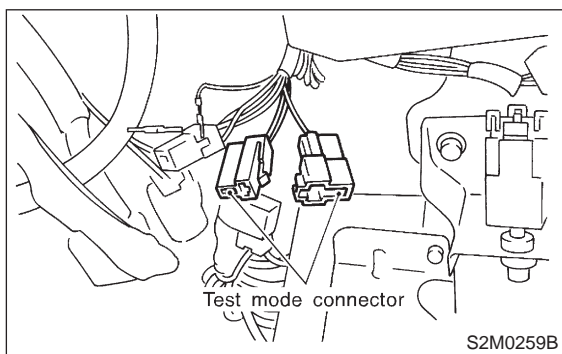


- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

NOTE:

Radiator fan relay operation check can be executed using Subaru Select Monitor. For procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

Connector & terminal (B134) No. 3 (+) — Chassis ground (-):

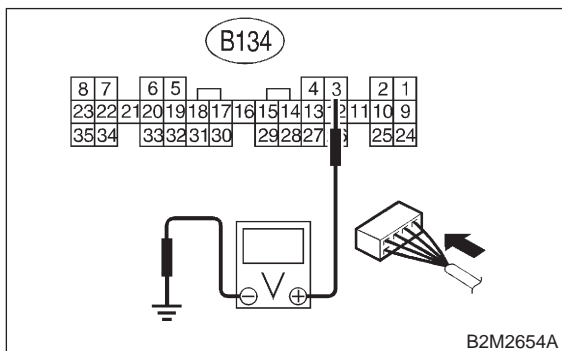


- CHECK** : Does voltage change between 0 and 10 volts?
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10AR2.

10AR2 : CHECK GROUND SHORT CIRCUIT IN RADIATOR FAN RELAY 1 CONTROL CIRCUIT.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM.
- 3) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal (B134) No. 3 — Chassis ground:

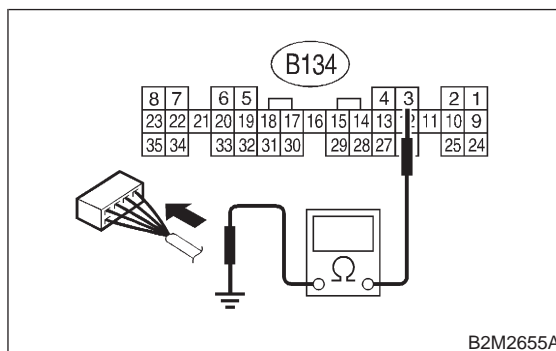


- CHECK** : Is the resistance less than 10 Ω?
- YES** : Repair ground short circuit in radiator fan relay 1 control circuit.
- NO** : Go to step 10AR3.

10AR3 : CHECK POWER SUPPLY FOR RELAY.

- 1) Remove main fan relay from A/C relay holder.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between fuse and relay box (F/B) connector and chassis ground.

Connector & terminal (F66) No. 28 (+) — Chassis ground (-):

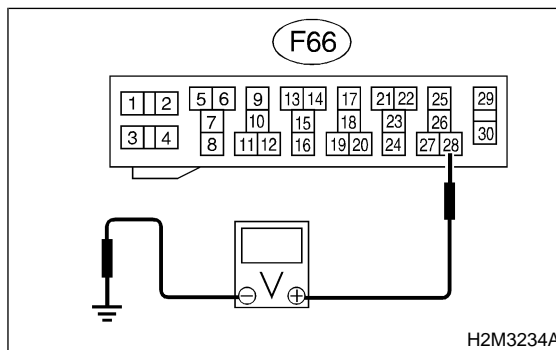

- CHECK** : Is the voltage more than 10 V?
- YES** : Go to step 10AR4.
- NO** : Repair open circuit in harness between ignition switch and fuse and relay box (F/B) connector.

2-7 [T10AR4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AR4 : CHECK MAIN FAN RELAY 1.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between main fan relay 1 terminals.

Terminal

No. 27 — No. 28:

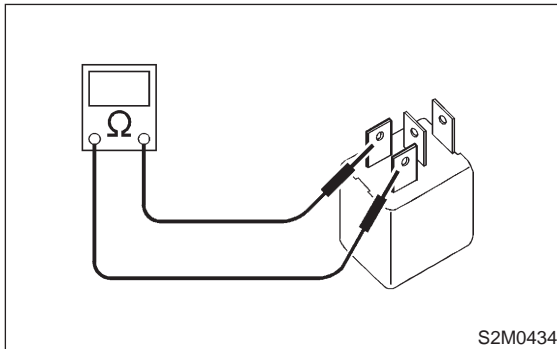


- CHECK** : *Is the resistance between 87 and 107 Ω ?*
- YES** : Go to step **10AR5**.
- NO** : Replace main fan relay 1.

10AR5 : CHECK OPEN CIRCUIT IN MAIN FAN RELAY 1 CONTROL CIRCUIT.

Measure resistance of harness between ECM and main fan relay 1 connector.

Connector & terminal

(B134) No. 3 — (F66) No. 27:

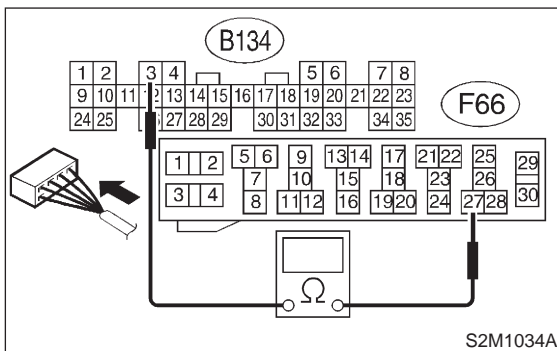

- CHECK** : *Is the resistance less than 1 Ω ?*
- YES** : Go to step **10AR6**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and main fan relay 1 connector
- Poor contact in coupling connector (F45)

10AR6 : CHECK POOR CONTACT.

Check poor contact in ECM or main fan relay 1 connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in ECM or main fan relay 1 connector?*
- YES** : Repair poor contact in ECM or main fan relay 1 connector.
- NO** : Contact with SOA service.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AR6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:

AS: DTC P0483 — COOLING FAN FUNCTION PROBLEM —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Occurrence of noise
 - Overheating


CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

NOTE:

If the vehicle, with the engine idling, is placed very close to a wall or another vehicle, preventing normal cooling function, the OBD system may detect malfunction.

● **WIRING DIAGRAM:**

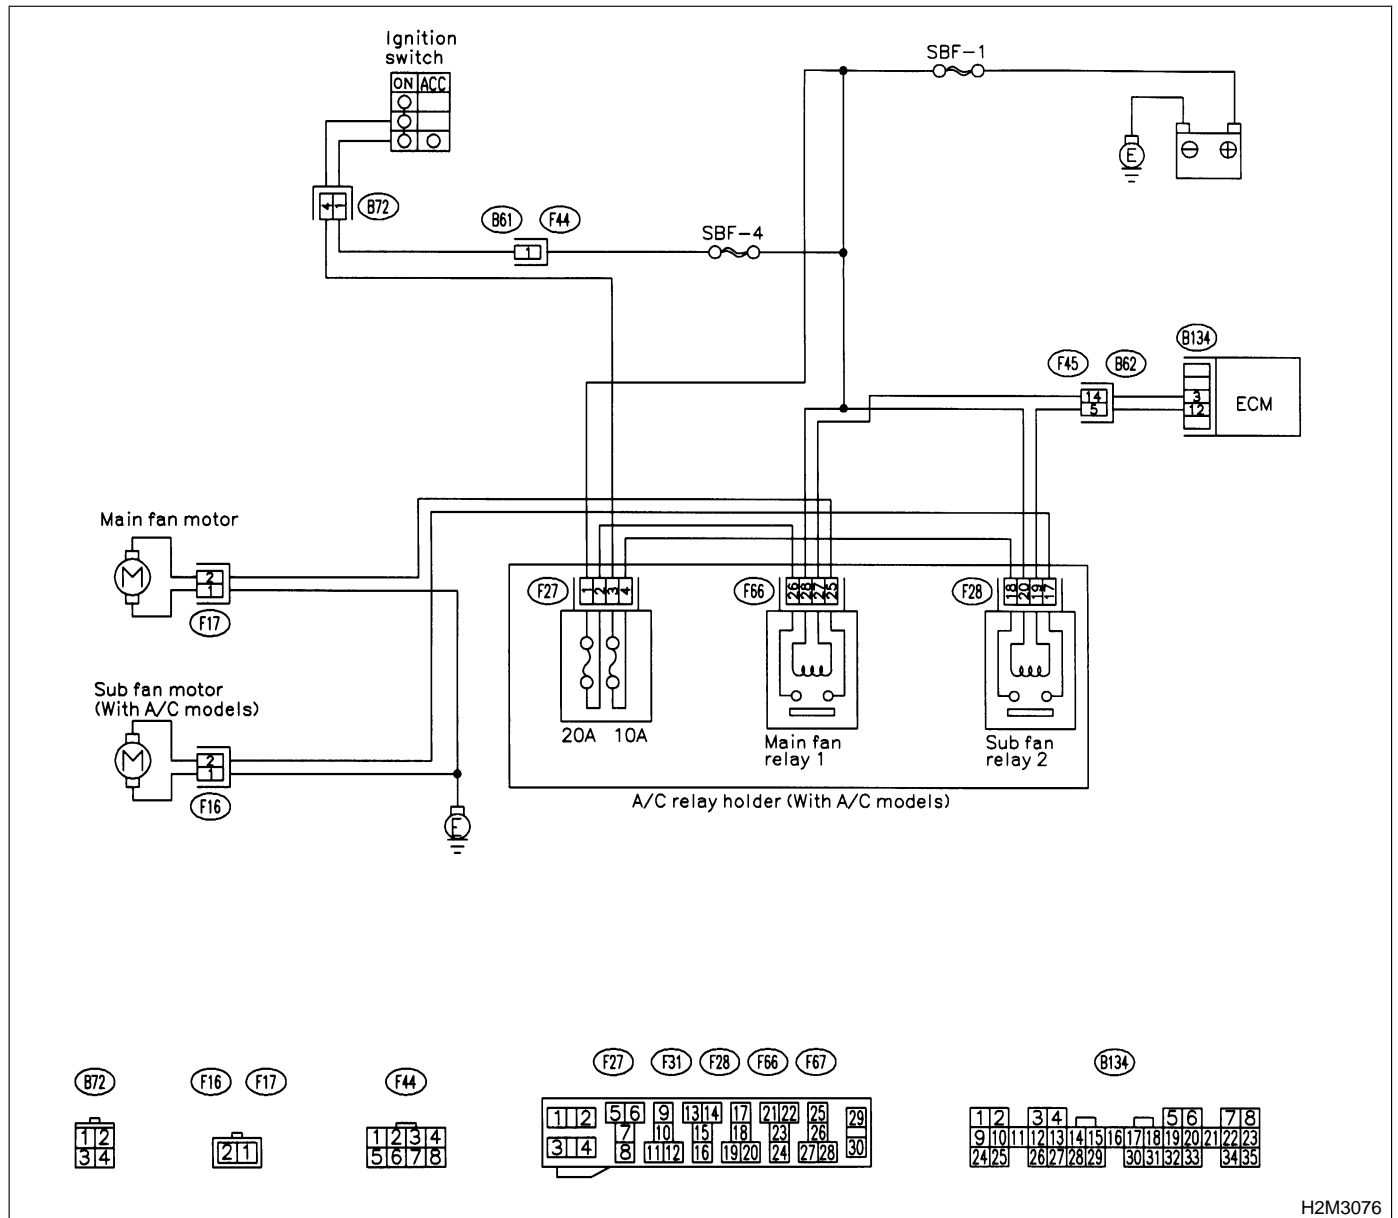

H2M3076

10AS1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : *Is there any other DTC on display?*
- YES** : Inspect the relevant DTC using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>
- NO** : Check engine cooling system. <Ref. to 2-5 [T100].>


AT: DTC P0500 — VEHICLE SPEED SENSOR MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

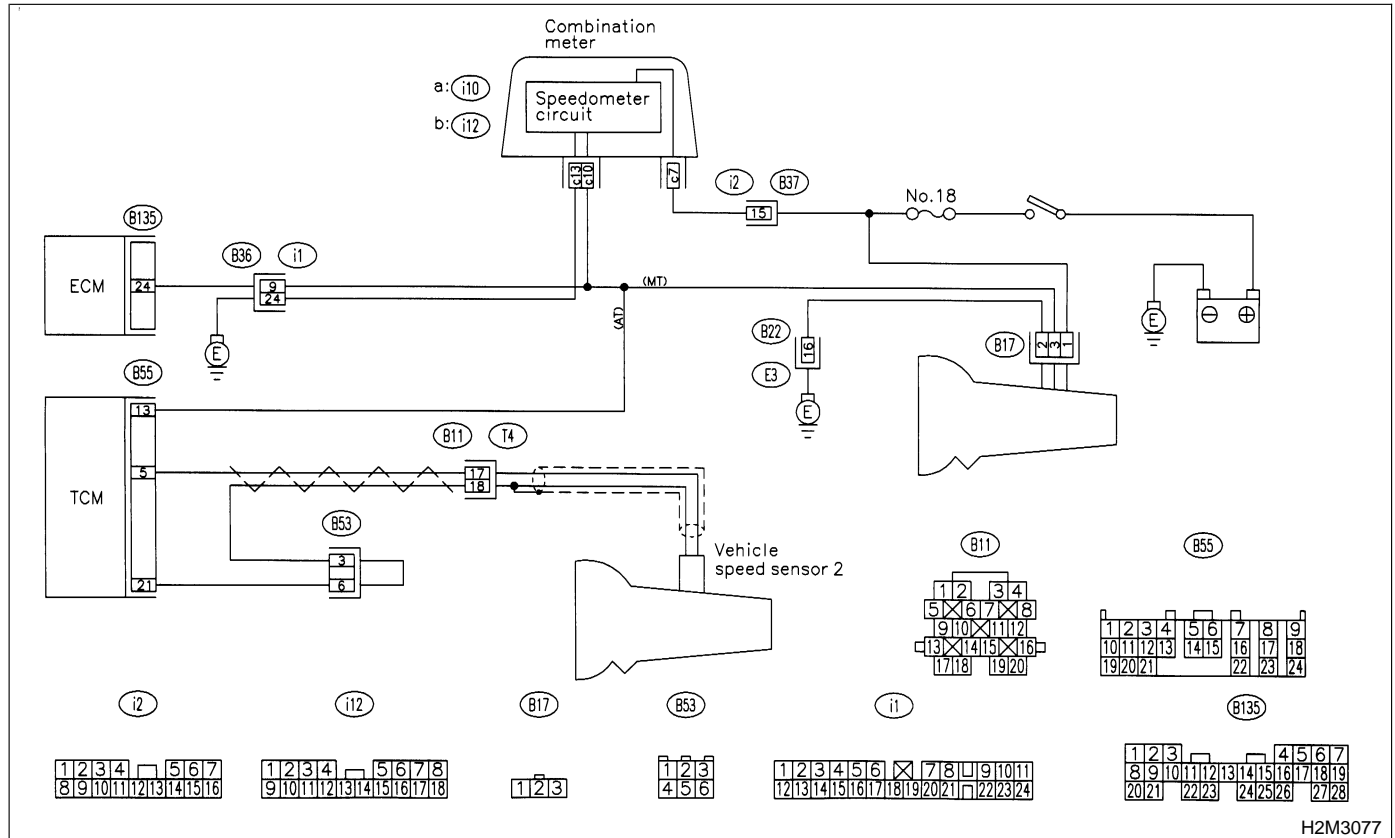

H2M3077

10AT1 : CHECK TRANSMISSION TYPE.

- CHECK** : *Is transmission type AT?*
- YES** : Go to step 10AT2.
- NO** : Go to step 10AT3.

10AT2 : CHECK DTC P0720 ON DISPLAY.

- CHECK** : *Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0720?*
- YES** : Check vehicle speed sensor 2 signal circuit. <Ref. to 3-2 [T8G0].>
- NO** : Go to step 10AT3.


10AT3 : CHECK SPEEDOMETER OPERATION IN COMBINATION METER.

- CHECK** : *Does speedometer operate normally?*
- YES** : Go to step 10AT4.
- NO** : Check speedometer and vehicle speed sensor. <Ref. to 6-2 [K2A4].>

10AT4 : CHECK HARNESS BETWEEN ECM AND COMBINATION METER CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from TCM.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 24 (+) — Chassis ground (-):

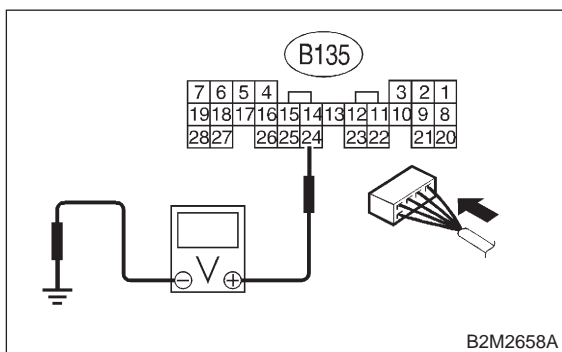

- CHECK** : **Is the voltage more than 2 V?**
YES : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and combination meter connector
- Poor contact in ECM connector
- Poor contact in combination meter connector
- Poor contact in coupling connector (B37)

NO : Go to step **10AT5**.

10AT5 : CHECK HARNESS BETWEEN ECM AND COMBINATION METER CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal
(B135) No. 24 — Chassis ground:

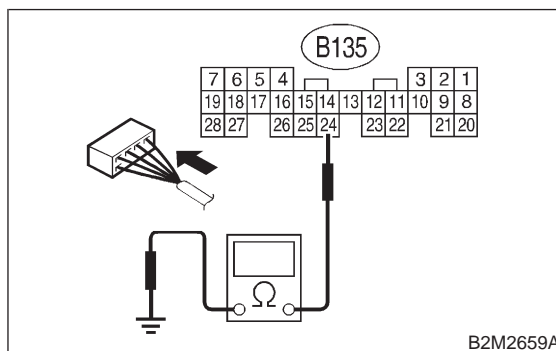

- CHECK** : **Is the resistance less than 10 Ω?**
YES : Repair ground short circuit in harness between ECM and combination meter connector.
NO : Repair poor contact in ECM connector.


AU: DTC P0505 — IDLE CONTROL SYSTEM CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Engine breathing

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

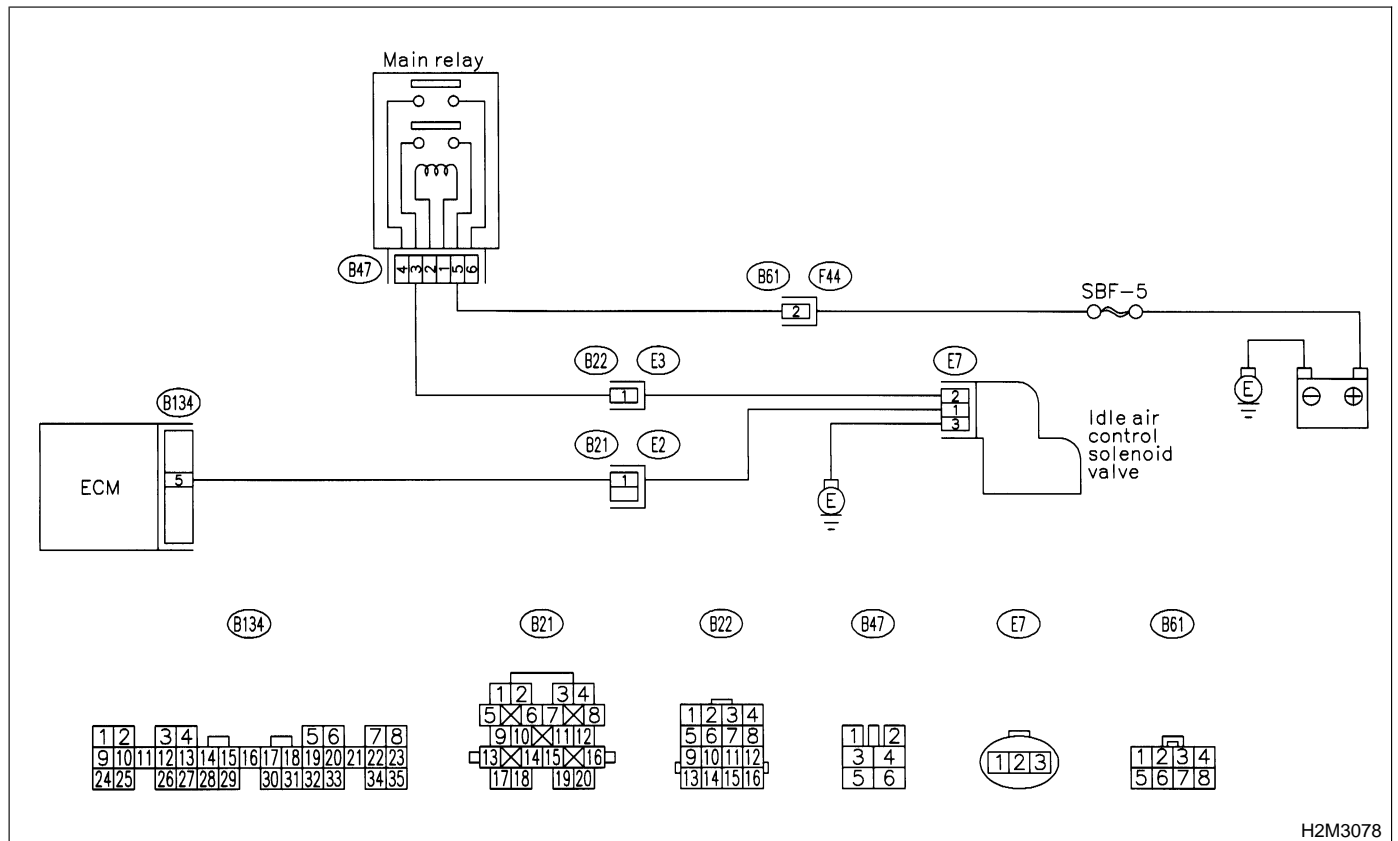

10AU1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B134) No. 5 (+) — Chassis ground (-):

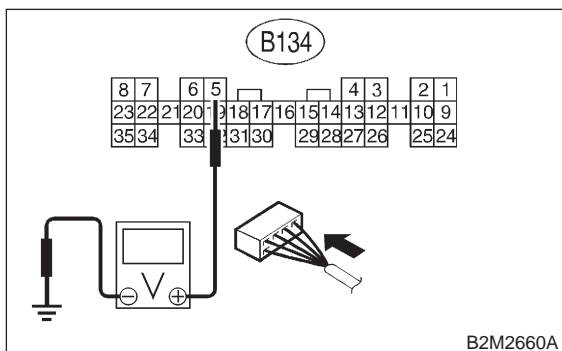


- CHECK** : *Is the voltage more than 3 V?*
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step **10AU2**.

10AU2 : CHECK POWER SUPPLY TO IDLE AIR CONTROL SOLENOID VALVE.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from idle air control solenoid valve.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between idle air control solenoid valve and engine ground.

Connector & terminal
(E7) No. 2 (+) — Engine ground (-):

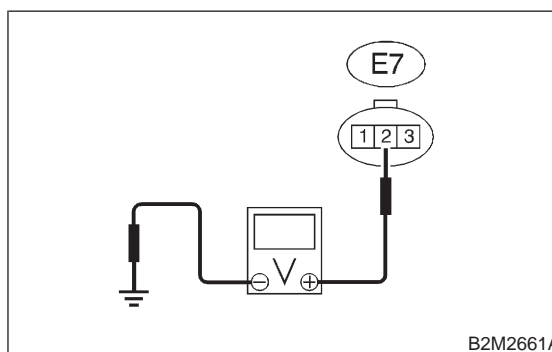

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **10AU3**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between idle air control solenoid valve and main relay connector
- Poor contact in coupling connector (B22)

2-7 [T10AU3]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AU3 : CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM and idle air control solenoid valve connector.

Connector & terminal

(B134) No. 5 — (E7) No. 1:

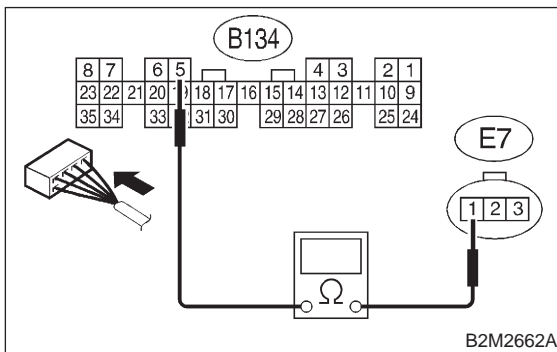

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AU4.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and idle air control solenoid valve connector
- Poor contact in coupling connector (B21)

10AU4 : CHECK HARNESS BETWEEN ECM AND IDLE AIR CONTROL SOLENOID VALVE CONNECTOR.

Measure resistance of harness between ECM and chassis ground.

Connector & terminal

(B134) No. 5 — Chassis ground:

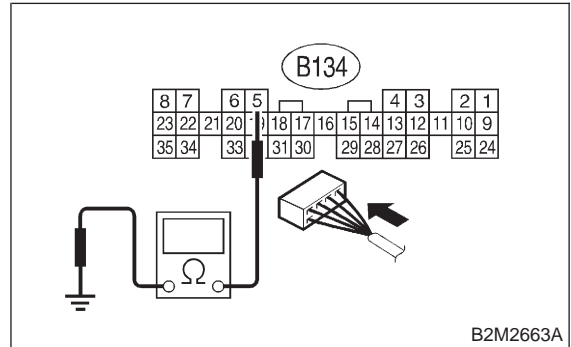


- CHECK** : Is the resistance less than 10 Ω?
- YES** : Repair ground short circuit in harness between ECM and idle air control solenoid valve connector.
- NO** : Go to step 10AU5.

10AU5 : CHECK GROUND CIRCUIT OF IDLE AIR CONTROL SOLENOID VALVE.

Measure resistance of harness between idle air control solenoid valve connector and engine ground.

Connector & terminal

(E7) No. 3 — Engine ground:

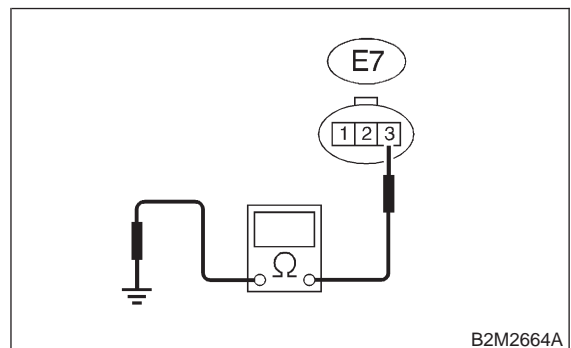

- CHECK** : Is the resistance less than 5 Ω?
- YES** : Go to step 10AU6.
- NO** : Repair open circuit in harness between idle air control solenoid valve connector and engine ground terminal.

10AU6 : CHECK POOR CONTACT.

Check poor contact in ECM and idle air control solenoid valve connectors. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in ECM and idle air control solenoid valve connectors?*
- YES** : Repair poor contact in ECM and idle air control solenoid valve connectors.
- NO** : Replace idle air control solenoid valve. <Ref. to 2-7 [W12A1].>


AV: DTC P0506 — IDLE CONTROL SYSTEM RPM LOWER THAN EXPECTED

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine is difficult to start.
 - Engine does not start.
 - Erroneous idling
 - Engine stalls.

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

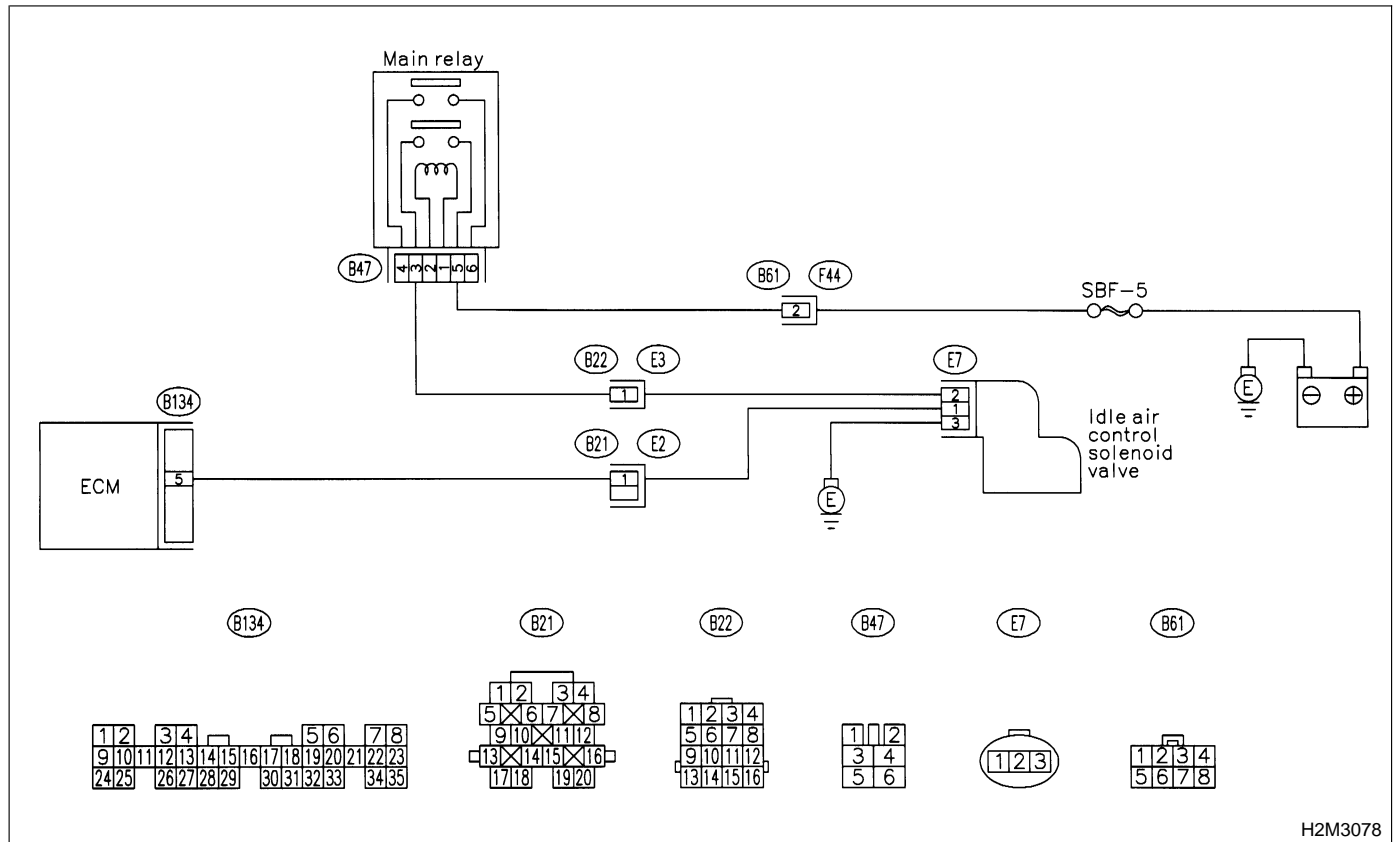

H2M3078

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AV3] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AV1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : **Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0505 or P1505?**

YES : Inspect DTC P0505 or P1505 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:
In this case, it is not necessary to inspect DTC P0506.

NO : Go to step **10AV2**.

10AV2 : CHECK IDLE AIR CONTROL SOLENOID VALVE.

- 1) Turn ignition switch to OFF.
- 2) Remove idle air control solenoid valve from throttle body. <Ref. to 2-7 [W12A1].>
- 3) Using an air gun, force air into idle air control solenoid valve by-pass air inlet. Confirm that forced air subsequently escapes from both main air passage and assist air passage.


CHECK : **Does air flow out?**

YES : Go to step **10AV4**.

NO : Replace idle air control solenoid valve. <Ref. to 2-7 [W12A1].> After replace, Go to step **10AV3**.

10AV3 : CHECK IDLE AIR CONTROL SOLENOID VALVE DUTY RATIO.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or OBD-II general scan tool to data link connector.

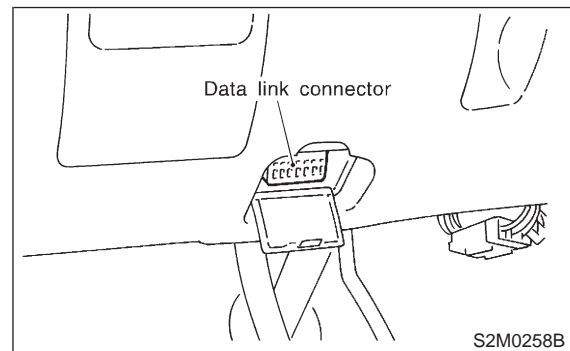

- 3) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 4) Start engine, and warm-up the engine.
- 5) Turn all accessory switches to OFF.
- 6) Read data of idle air control solenoid valve duty ratio using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedures, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : **Is the value more than 60%?**

YES : Go to step **10AV4**.

NO : END.

10AV4 : CHECK BY-PASS AIR LINE.

- 1) Turn ignition switch to OFF.
- 2) Remove idle air control solenoid valve from throttle body. <Ref. to 2-7 [W12A1].>
- 3) Remove throttle body to intake manifold. <Ref. to 2-7 [W3A1].>
- 4) Confirm that there is no foreign matter stuck in the air by-pass line.
- 5) Using an air gun, force air into solenoid valve installation area and throttle valve interior. Confirm that forced air subsequently escapes from both these areas.

CHECK : ***Does air flow out?***

YES : Replace idle air control solenoid valve.
<Ref. to 2-7 [W12A1].>

NO : Replace throttle body. <Ref. to 2-7 [W3A1].>

AW: DTC P0507 — IDLE CONTROL SYSTEM RPM HIGHER THAN EXPECTED

● DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault


● TROUBLE SYMPTOM:

- Engine keeps running at higher revolution than specified idling revolution.

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● WIRING DIAGRAM:

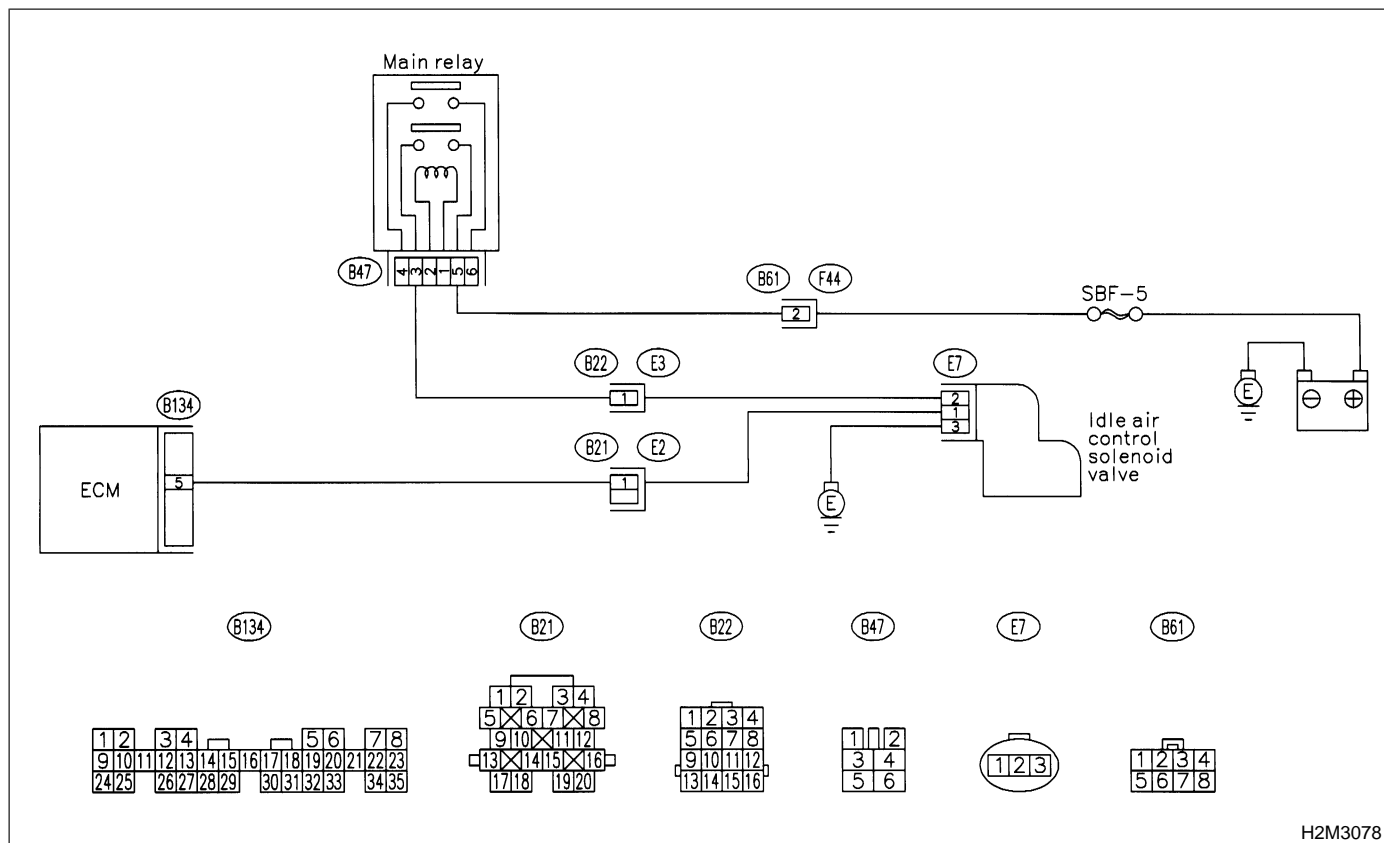

H2M3078

10AW1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0505 or P1505?

YES : Inspect DTC P0505 or P1505 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:

In this case, it is not necessary to inspect DTC P0507.

NO : Go to step **10AW2**.

10AW2 : CHECK AIR INTAKE SYSTEM.

- 1) Turn ignition switch to ON.
- 2) Start engine, and idle it.
- 3) Check the following items.
 - Loose installation of intake manifold, idle air control solenoid valve and throttle body
 - Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket
 - Disconnections of vacuum hoses

CHECK : Is there a fault in air intake system?

YES : Repair air suction and leaks.

NO : Replace idle air control solenoid valve. <Ref. to 2-7 [W12A1].>


AX: DTC P0601 — INTERNAL CONTROL MODULE MEMORY CHECK SUM ERROR —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Engine does not start.
 - Engine stalls.

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

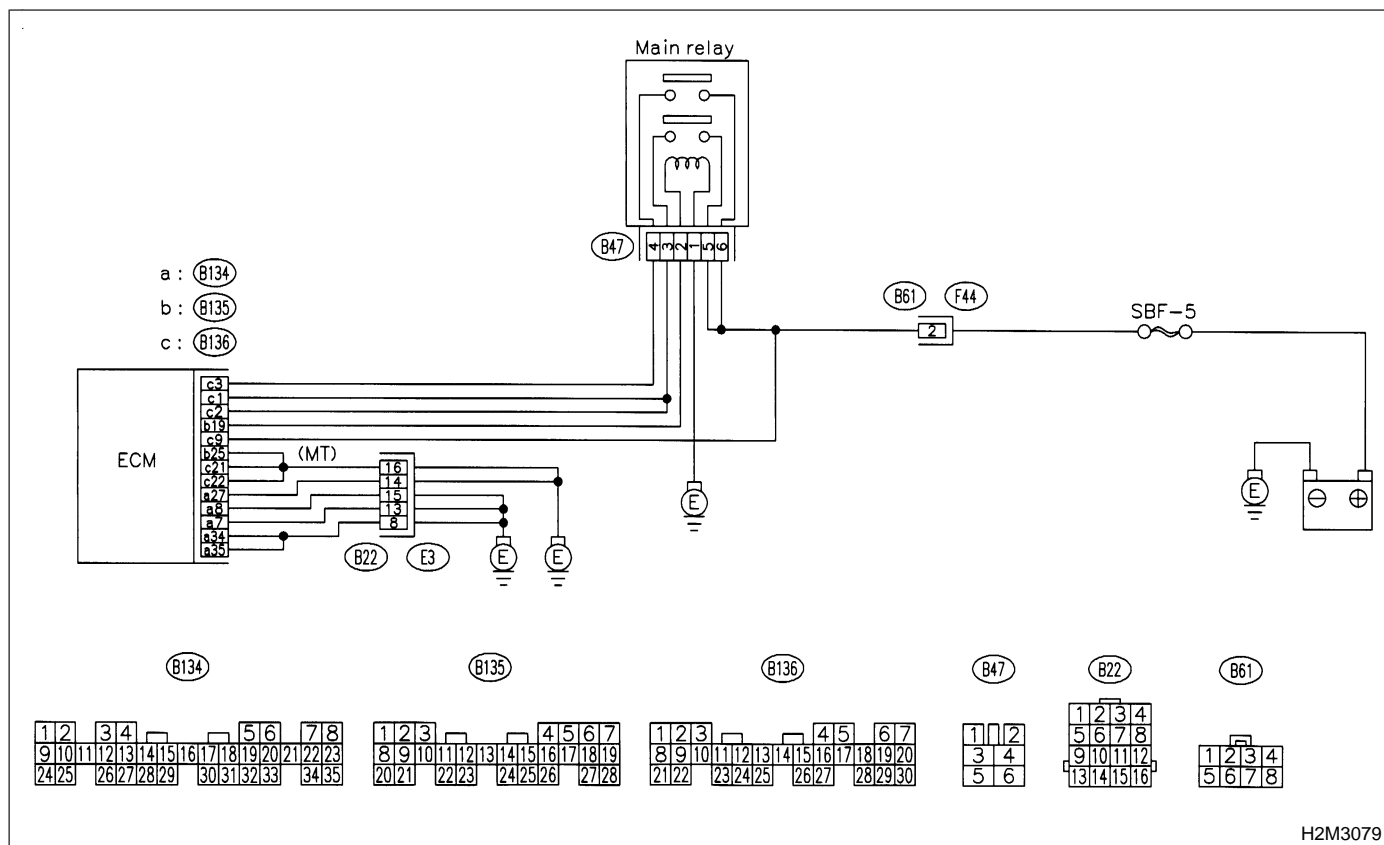

H2M3079

10AX1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0601?
- YES** : Replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : It is not necessary to inspect DTC P0601.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AX1] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


AY: DTC P0703 — BRAKE SWITCH INPUT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>.

● **WIRING DIAGRAM:**

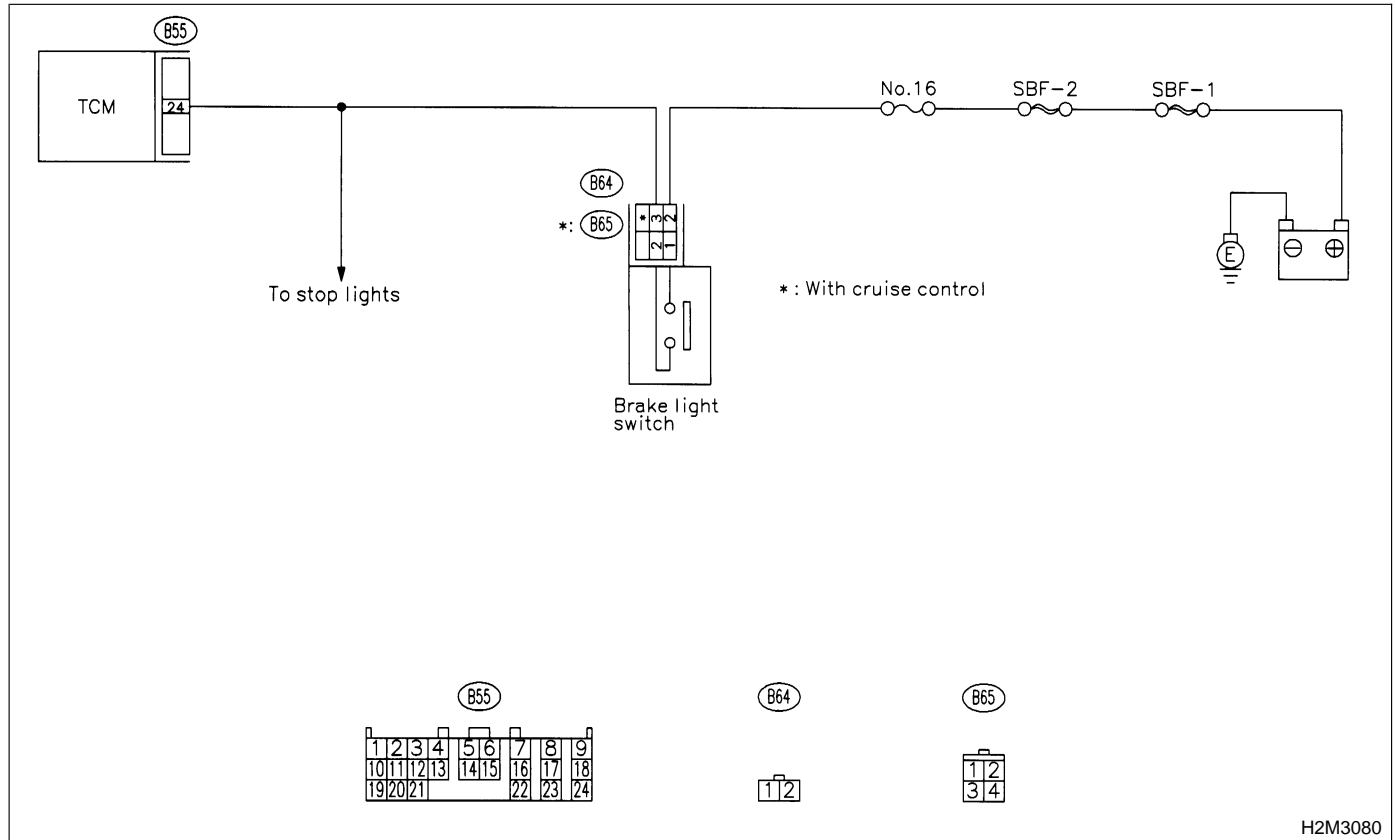

H2M3080

10AY1 : CHECK OPERATION OF BRAKE LIGHT.

- CHECK** : Does brake light come on when depressing the brake pedal?
- YES** : Go to step 10AY2.
- NO** : Repair or replace brake light circuit.


10AY2 : CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR.

- 1) Disconnect connectors from TCM and brake light switch.
- 2) Measure resistance of harness between TCM and brake light switch connector.

Connector & terminal

(B55) No. 24 — (B64) No. 2:

(B55) No. 24 — (B65) No. 3 (With cruise control):

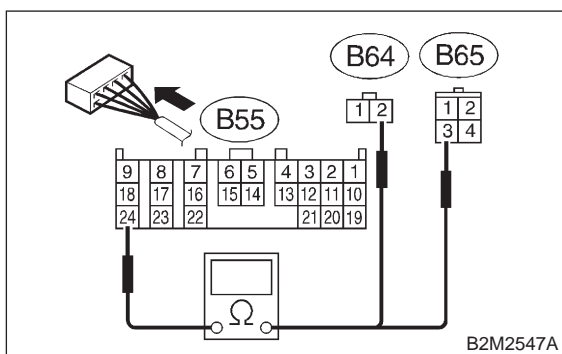

CHECK : Is the resistance less than 1 Ω?

YES : Go to step 10AY3.

NO : Repair or replace harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between TCM and brake light switch connector
- Poor contact in TCM connector
- Poor contact in brake light switch connector

10AY3 : CHECK HARNESS BETWEEN TCM AND BRAKE LIGHT SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal

(B55) No. 24 — Chassis ground:

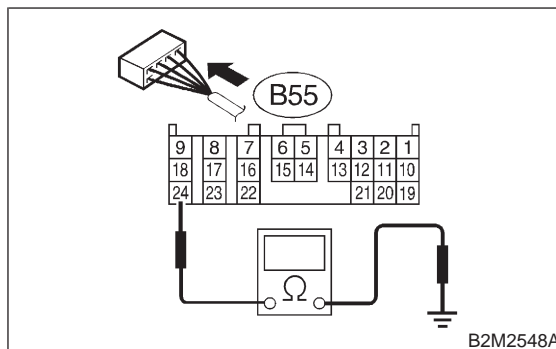

CHECK : Is the resistance more than 1 MΩ?

YES : Go to step 10AY4.


NO : Repair ground short circuit in harness between TCM and brake light switch connector.

10AY4 : CHECK INPUT SIGNAL FOR TCM.

- 1) Connect connectors to TCM and brake light switch.
- 2) Measure voltage between TCM and chassis ground.

Connector & terminal

(B55) No. 24 (+) — Chassis ground (-):

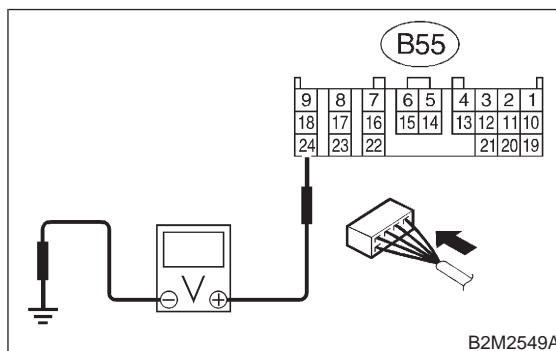

CHECK : Is the voltage less than 1 V when releasing the brake pedal?

YES : Go to step 10AY5.

NO : Adjust or replace brake light switch. <Ref. to 4-5 [W1A1].>

2-7 [T10AY5]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AY5 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM and chassis ground.

Connector & terminal

(B55) No. 24 (+) — Chassis ground (-):

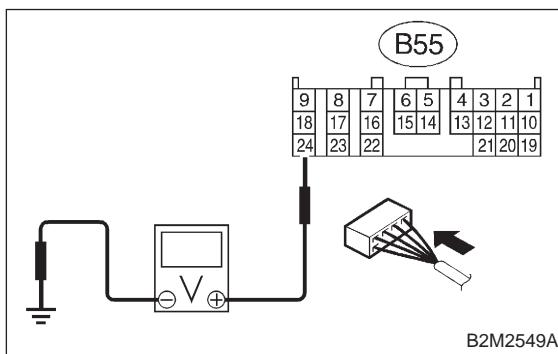

CHECK : *Is the voltage more than 10 V when depressing the brake pedal?*

YES : Go to step 10AY6.

NO : Adjust or replace brake light switch.
<Ref. to 4-5 [W1A1].>

10AY6 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

CHECK : *Is there poor contact in TCM connector?*

YES : Repair poor contact in TCM connector.

NO : Replace TCM. <Ref. to 3-2 [W22A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AY6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:

AZ: DTC P0705 — TRANSMISSION RANGE SENSOR CIRCUIT MALFUNCTION —

● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault


● **TROUBLE SYMPTOM:**

- Starter does not rotate when selector lever is in “P” or “N” range.
- Starter rotates when selector lever is in “R”, “D”, “3”, “2” or “1” range.
- Engine brake is not effected when selector lever is in “3” range.
- Shift characteristics are erroneous.

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

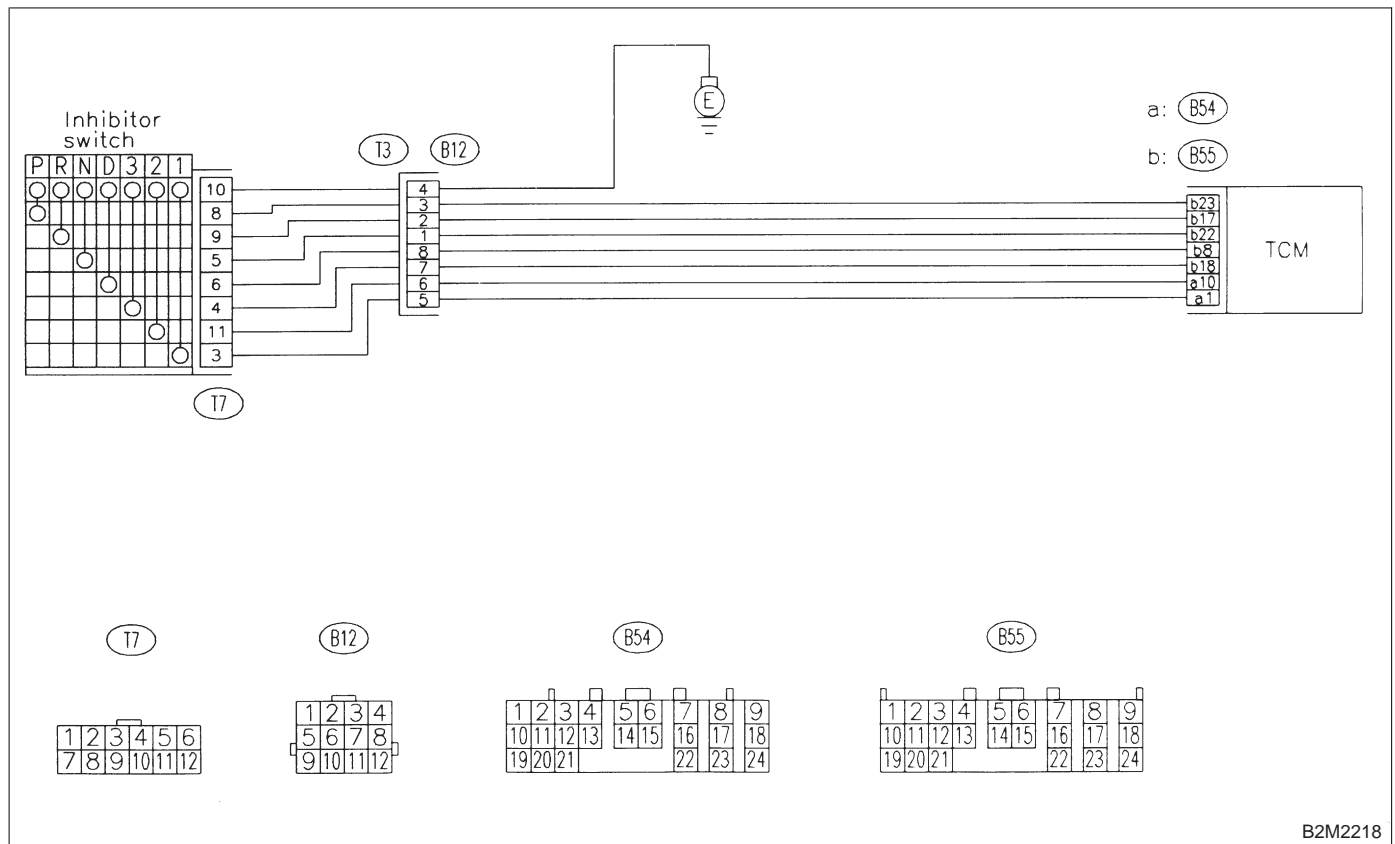


10AZ1 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM and transmission.
- 3) Measure resistance of harness between TCM and transmission harness connector.

Connector & terminal

(B55) No. 23 — (T7) No. 8:

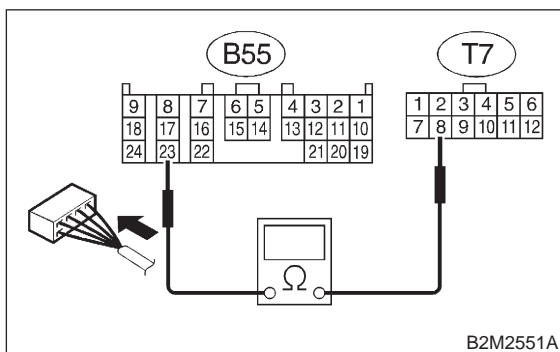

- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step **10AZ2**.
- NO** : Repair harness and connector.

NOTE:


- In this case, repair the following:
- Open circuit in harness between ECM and inhibitor switch connector
 - Poor contact in coupling connector (B12)

10AZ2 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and transmission harness connector.

Connector & terminal

(B55) No. 17 — (T7) No. 9:

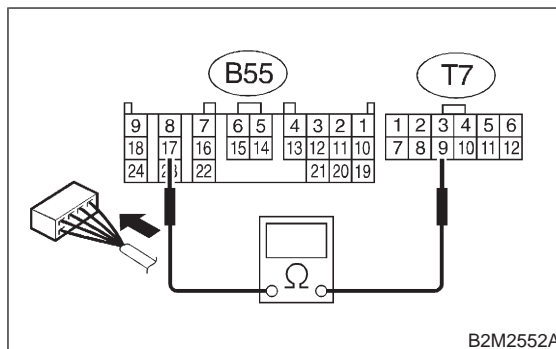

- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step **10AZ3**.
- NO** : Repair harness and connector.

NOTE:

- In this case, repair the following:
- Open circuit in harness between ECM and inhibitor switch connector
 - Poor contact in coupling connector (B12)

2-7 [T10AZ3]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AZ3 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and transmission harness connector.

Connector & terminal

(B55) No. 22 — (T7) No. 5:

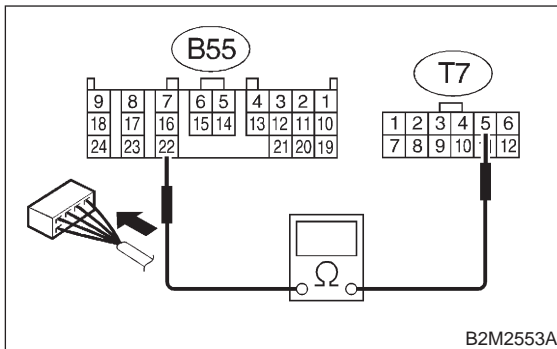

CHECK : **Is the resistance less than 1 Ω?**

YES : Go to step **10AZ4**.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and inhibitor switch connector.
- Poor contact in coupling connector (B12)

10AZ4 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and transmission harness connector.

Connector & terminal

(B55) No. 8 — (T7) No. 6:

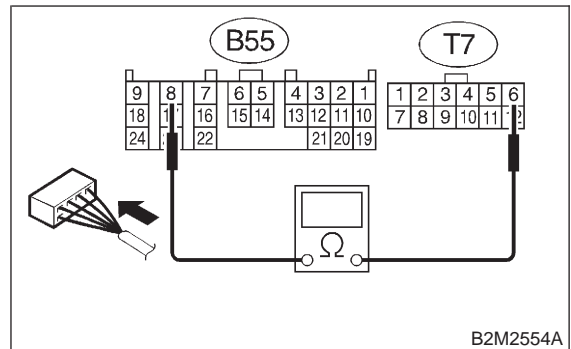

CHECK : **Is the resistance less than 1 Ω?**

YES : Go to step **10AZ5**.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and inhibitor switch connector.
- Poor contact in coupling connector (B12)

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AZ6] 2-7


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AZ5 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and transmission harness connector.

Connector & terminal

(B55) No. 18 — (T7) No. 4:

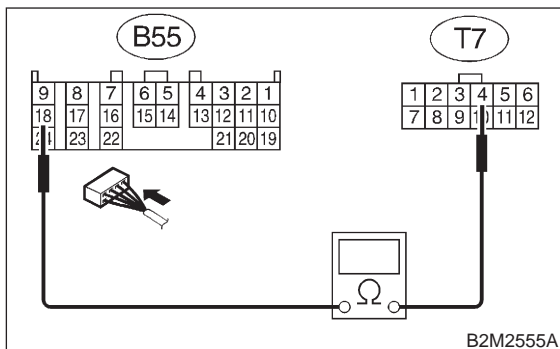

CHECK : *Is the resistance less than 1 Ω?*

YES : Go to step 10AZ6.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and inhibitor switch connector.
- Poor contact in coupling connector (B12)

10AZ6 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and transmission harness connector.

Connector & terminal

(B54) No. 10 — (T7) No. 11:

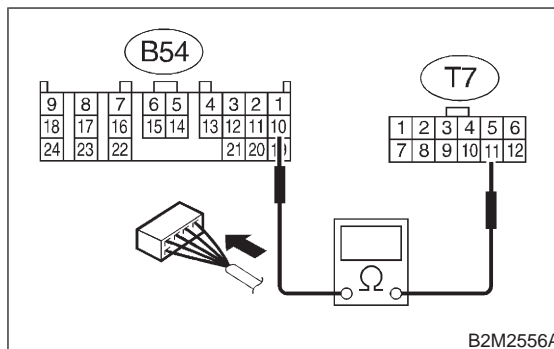

CHECK : *Is the resistance less than 1 Ω?*

YES : Go to step 10AZ7.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and inhibitor switch connector.
- Poor contact in coupling connector (B12)

2-7 [T10AZ7]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AZ7 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and transmission harness connector.

Connector & terminal

(B54) No. 1 — (T7) No. 3:

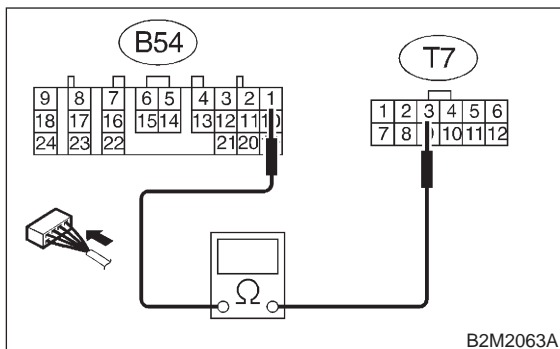

CHECK : Is the resistance less than 1 Ω?

YES : Go to step 10AZ8.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and inhibitor switch connector.
- Poor contact in coupling connector (B12)

10AZ8 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal

(B55) No. 23 — Chassis ground:

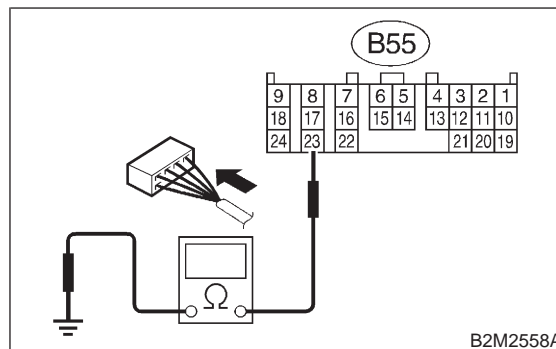

CHECK : Is the resistance more than 1 MΩ?

YES : Go to step 10AZ9.


NO : Repair ground short circuit in harness between TCM and transmission harness connector.

10AZ9 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal

(B55) No. 17 — Chassis ground:

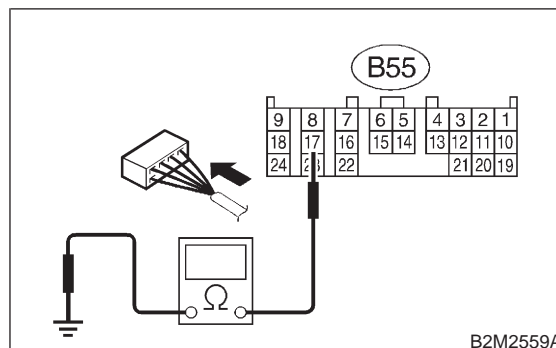

CHECK : Is the resistance more than 1 MΩ?


YES : Go to step 10AZ10.

NO : Repair ground short circuit in harness between TCM and transmission harness connector.

10AZ10 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal
(B55) No. 22 — Chassis ground:

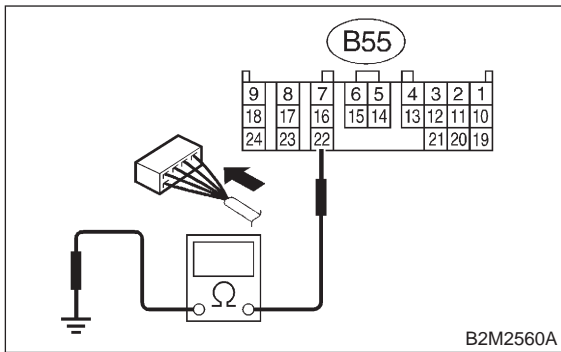


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10AZ11.
- NO** : Repair ground short circuit in harness between TCM and transmission harness connector.

10AZ12 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal
(B55) No. 18 — Chassis ground:

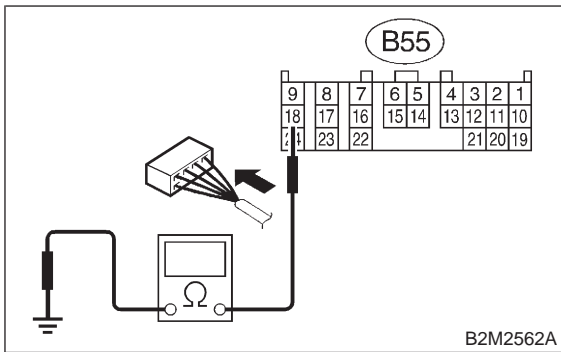


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10AZ13.
- NO** : Repair ground short circuit in harness between TCM and transmission harness connector.

10AZ11 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal
(B55) No. 8 — Chassis ground:

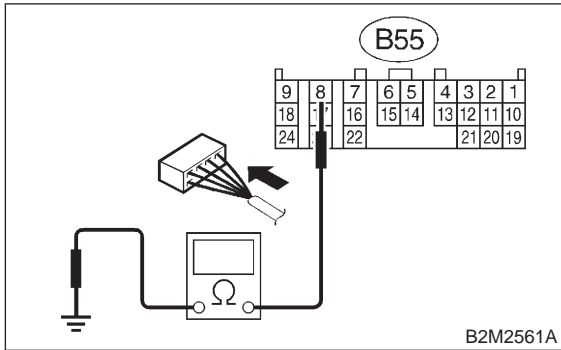


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10AZ12.
- NO** : Repair ground short circuit in harness between TCM and transmission harness connector.

10AZ13 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal
(B54) No. 10 — Chassis ground:

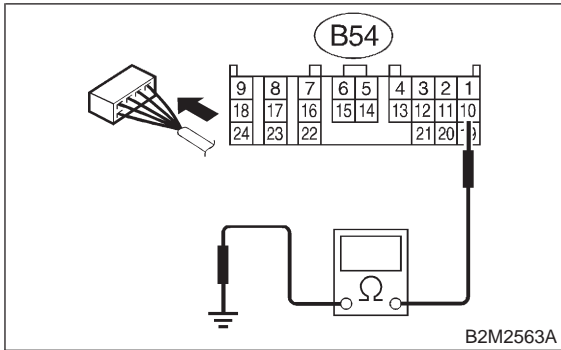

- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10AZ14.
- NO** : Repair ground short circuit in harness between TCM and transmission harness connector.

2-7 [T10AZ14]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AZ14 : CHECK HARNESS BETWEEN TCM AND INHIBITOR SWITCH CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal

(B54) No. 1 — Chassis ground:

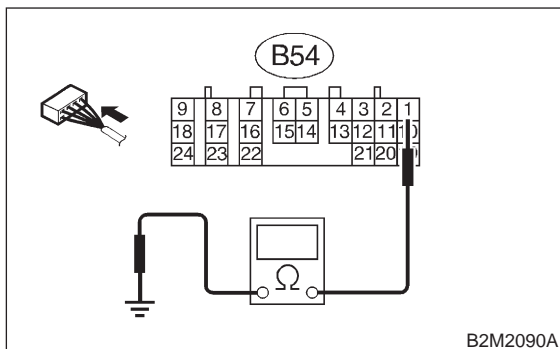


- CHECK** : Is the resistance more than 1 MΩ?
YES : Go to step 10AZ15.
NO : Repair ground short circuit in harness between TCM and transmission harness connector.

10AZ15 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever "P" position.

Terminals

No. 8 — No. 10:

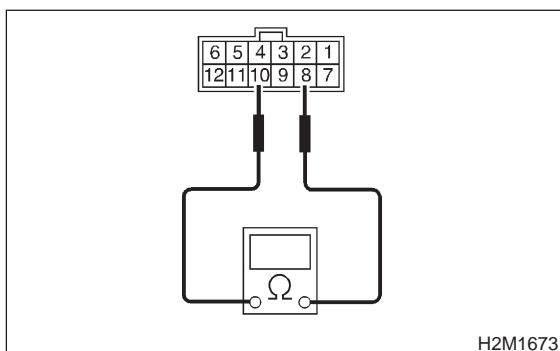


- CHECK** : Is the resistance less than 1 Ω?
YES : Go to step 10AZ16.
NO : Go to step 10AZ29.

10AZ16 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "P" position.

Terminals

No. 8 — No. 10:

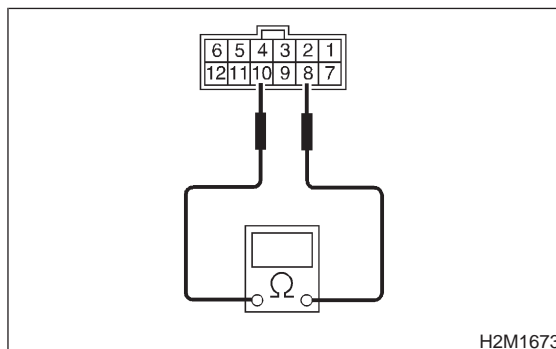


- CHECK** : Is the resistance more than 1 MΩ?
YES : Go to step 10AZ17.
NO : Go to step 10AZ29.

10AZ17 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever for "R" position.

Terminals

No. 9 — No. 10:

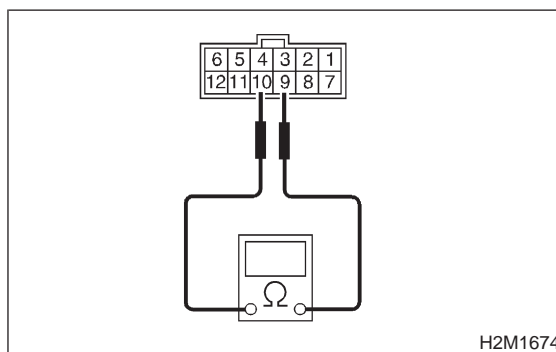

- CHECK** : Is the resistance less than 1 Ω?
YES : Go to step 10AZ18.
NO : Go to step 10AZ29.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10AZ21] 2-7


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10AZ18 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "R" position.

Terminals

No. 9 — No. 10:

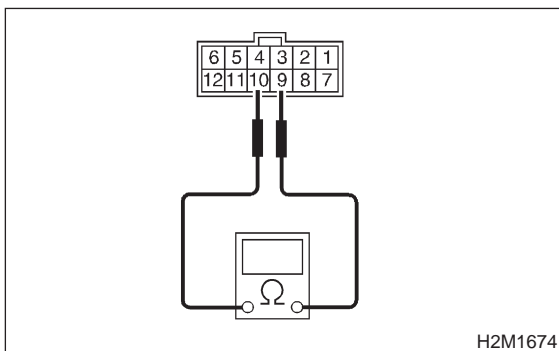

H2M1674

CHECK : Is the resistance more than 1 MΩ?

YES : Go to step 10AZ19.


NO : Go to step 10AZ29.

10AZ20 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "N" position.

Terminals

No. 5 — No. 10:

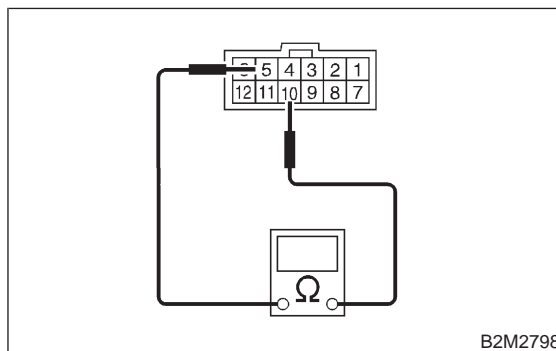

B2M2798

CHECK : Is the resistance more than 1 MΩ?

YES : Go to step 10AZ21.


NO : Go to step 10AZ29.

10AZ19 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever for "N" position.

Terminals

No. 5 — No. 10:

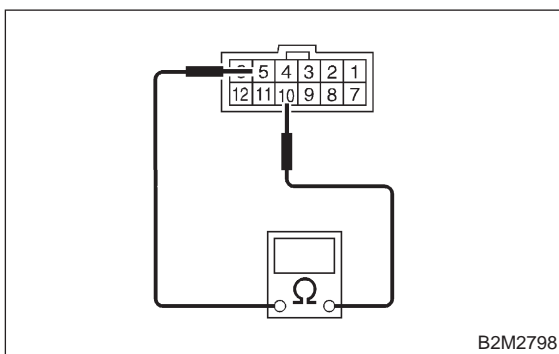

B2M2798

CHECK : Is the resistance less than 1 Ω?

YES : Go to step 10AZ20.


NO : Go to step 10AZ29.

10AZ21 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "D" position.

Terminals

No. 6 — No. 10:

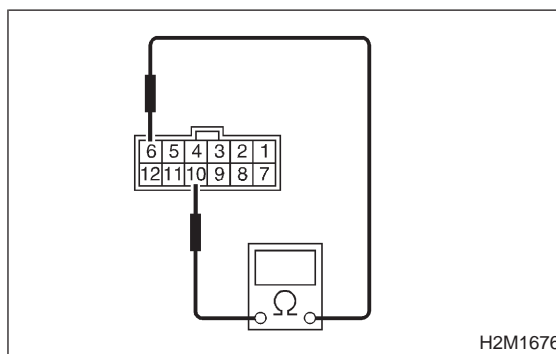

H2M1676

CHECK : Is the resistance less than 1 Ω?

YES : Go to step 10AZ22.


NO : Go to step 10AZ29.

10AZ22 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "D" position.

Terminals

No. 6 — No. 10:

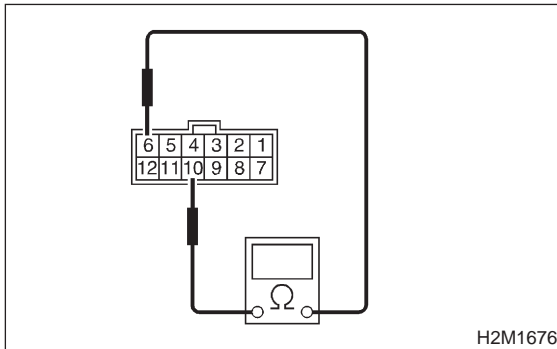

H2M1676


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10AZ23.
- NO** : Go to step 10AZ29.

10AZ24 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "3" position.

Terminals

No. 4 — No. 10:

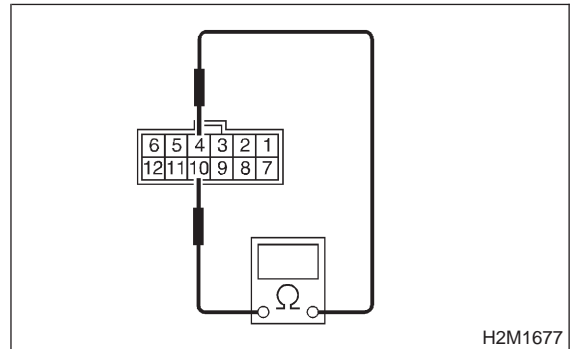

H2M1677


- CHECK** : Is the resistance more than 1 MΩ?
- YES** : Go to step 10AZ25.
- NO** : Go to step 10AZ29.

10AZ23 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever for "3" position.

Terminals

No. 4 — No. 10:

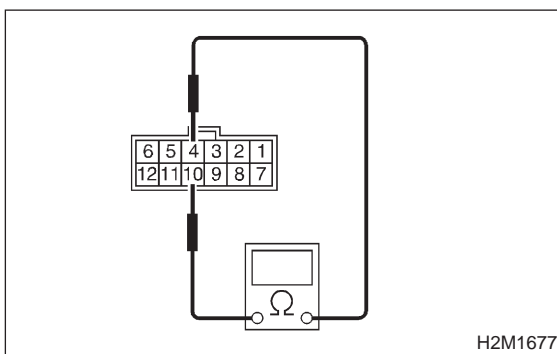

H2M1677


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AZ24.
- NO** : Go to step 10AZ29.

10AZ25 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "2" position.

Terminals

No. 11 — No. 10:

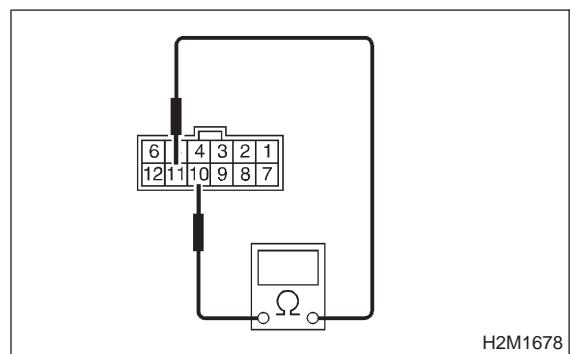

H2M1678


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10AZ26.
- NO** : Go to step 10AZ29.

10AZ26 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "R" position.

Terminals

No. 11 — No. 10:

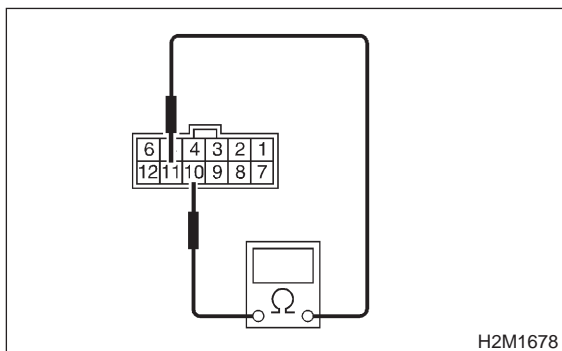


- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step 10AZ27.
- NO** : Go to step 10AZ29.

10AZ27 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "1" position.

Terminals

No. 3 — No. 10:

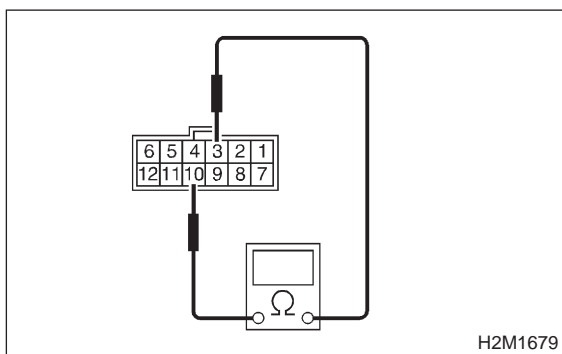


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step 10AZ28.
- NO** : Go to step 10AZ29.

10AZ28 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "1" position.

Terminals

No. 3 — No. 10:

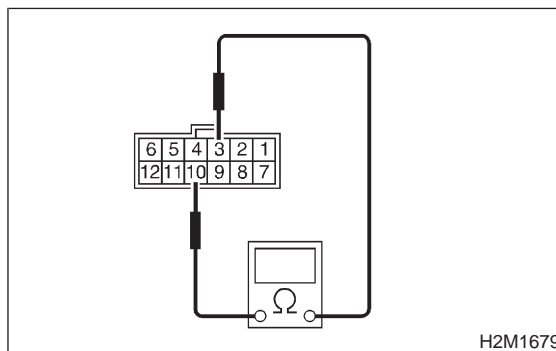

- CHECK** : *Is the resistance more than 1 MΩ?*
- YES** : Go to step 10AZ30.
- NO** : Go to step 10AZ29.


10AZ29 : CHECK SELECTOR CABLE.

- CHECK** : *Is there faulty connection in the selector cable?*
- YES** : Repair connection of selector cable.
- NO** : Replace inhibitor switch. <Ref. to 3-2 [W2C0].>

10AZ30 : CHECK INPUT SIGNAL FOR TCM.

- 1) Turn ignition switch to OFF.
- 2) Connect connector to TCM and transmission.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between TCM and chassis ground.

Connector & terminal
(B55) No. 23 (+) — Chassis ground (-):

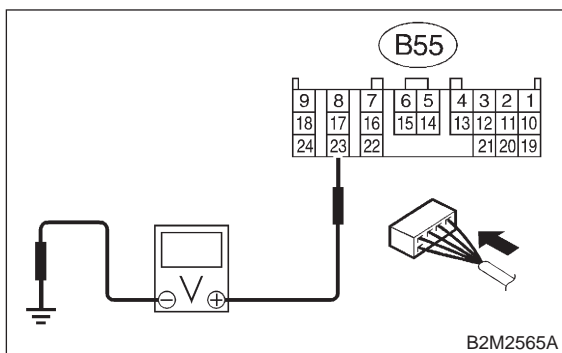


- CHECK** : Is the voltage less than 1 V?
- YES** : Go to step 10AZ31.
- NO** : Go to step 10AZ44.

10AZ31 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever except for "P" and "N" positions.

Connector & terminal
(B55) No. 23 (+) — Chassis ground (-):

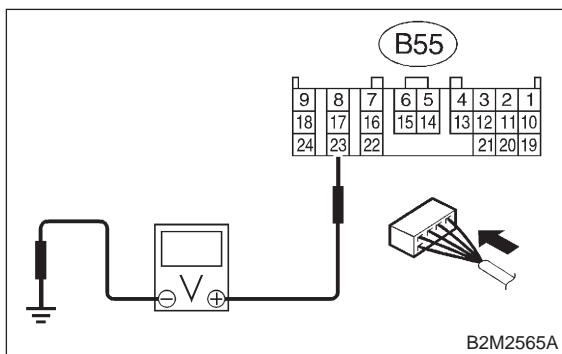


- CHECK** : Is the voltage more than 8 V?
- YES** : Go to step 10AZ32.
- NO** : Go to step 10AZ44.

10AZ32 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever "R" position.

Connector & terminal
(B55) No. 17 (+) — Chassis ground (-):

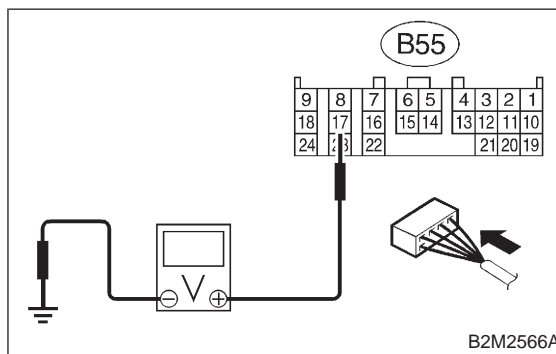


- CHECK** : Is the voltage less than 1 V?
- YES** : Go to step 10AZ33.
- NO** : Go to step 10AZ44.

10AZ33 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever except for "R" position.

Connector & terminal
(B55) No. 17 (+) — Chassis ground (-):

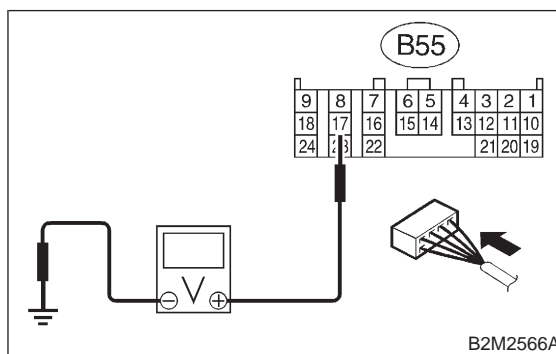


- CHECK** : Is the voltage more than 6 V?
- YES** : Go to step 10AZ34.
- NO** : Go to step 10AZ44.

10AZ34 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever "P" and "N" positions.

Connector & terminal
(B55) No. 22 (+) — Chassis ground (-):

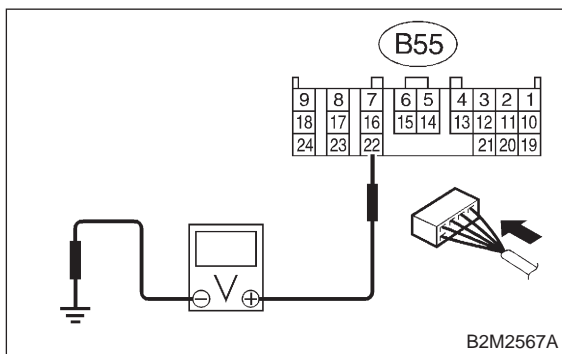


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10AZ35.
- NO** : Go to step 10AZ44.

10AZ36 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM and chassis ground in selector lever "D" position.

Connector & terminal
(B55) No. 8 (+) — Chassis ground (-):

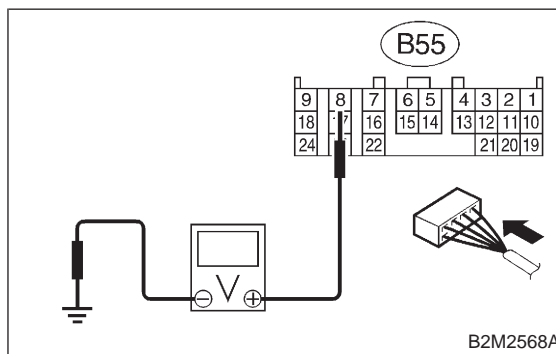


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10AZ37.
- NO** : Go to step 10AZ44.

10AZ35 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever except for "N" and "P" positions.

Connector & terminal
(B55) No. 22 (+) — Chassis ground (-):

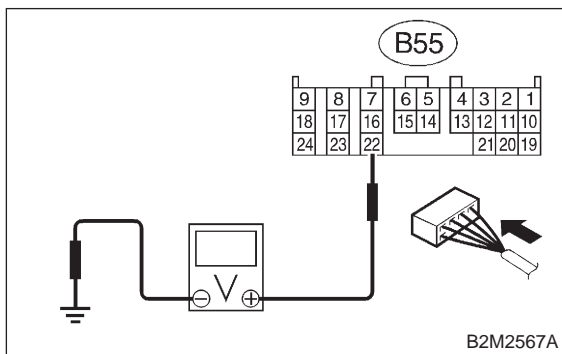


- CHECK** : *Is the voltage more than 8 V?*
- YES** : Go to step 10AZ36.
- NO** : Go to step 10AZ44.

10AZ37 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever except for "N" and "P" positions.

Connector & terminal
(B55) No. 8 (+) — Chassis ground (-):

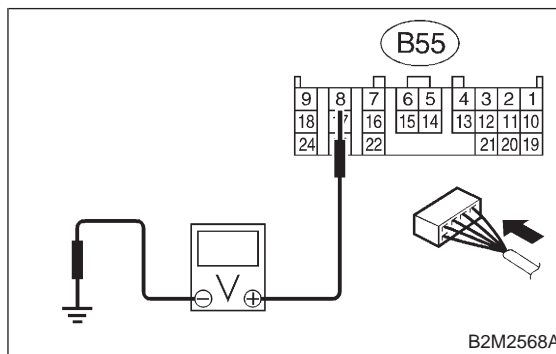


- CHECK** : *Is the voltage more than 6 V?*
- YES** : Go to step 10AZ38.
- NO** : Go to step 10AZ44.

10AZ38 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever "3" position.

Connector & terminal
(B55) No. 18 (+) — Chassis ground (-):

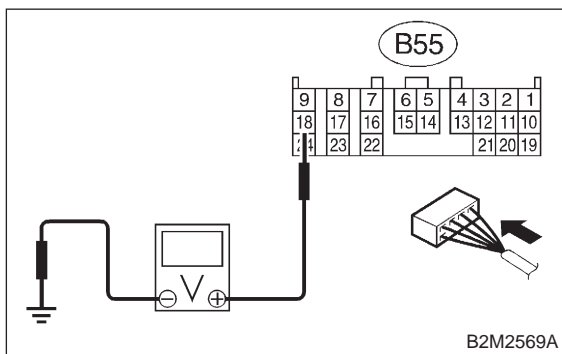


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10AZ39.
- NO** : Go to step 10AZ44.

10AZ39 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM and chassis ground in selector lever except for "3" position.

Connector & terminal
(B55) No. 18 (+) — Chassis ground (-):

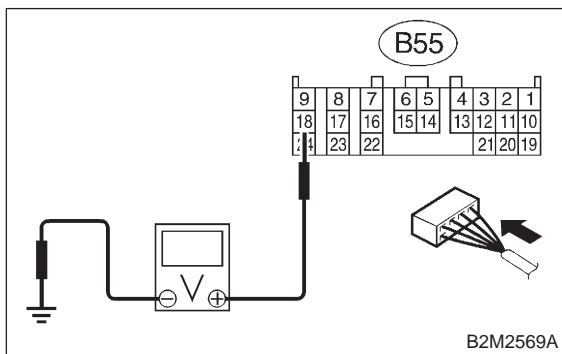


- CHECK** : *Is the voltage more than 6 V?*
- YES** : Go to step 10AZ40.
- NO** : Go to step 10AZ44.

10AZ40 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever "2" position.

Connector & terminal
(B54) No. 10 (+) — Chassis ground (-):

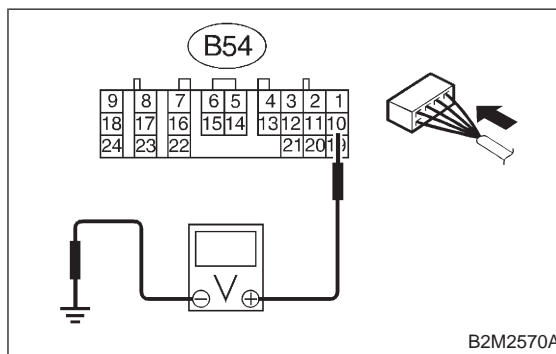


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10AZ41.
- NO** : Go to step 10AZ44.

10AZ41 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM and chassis ground in selector lever except for "2" position.

Connector & terminal
(B54) No. 10 (+) — Chassis ground (-):

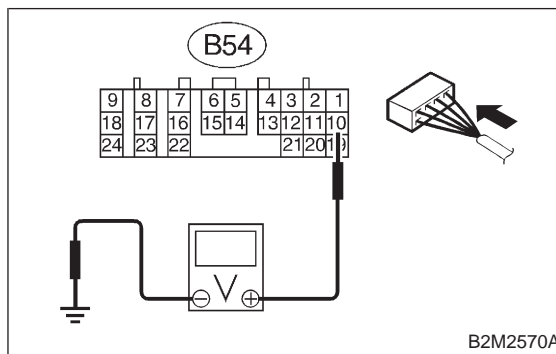


- CHECK** : *Is the voltage more than 6 V?*
- YES** : Go to step 10AZ42.
- NO** : Go to step 10AZ44.

10AZ42 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever "1" position.

Connector & terminal
(B54) No. 1 (+) — Chassis ground (-):

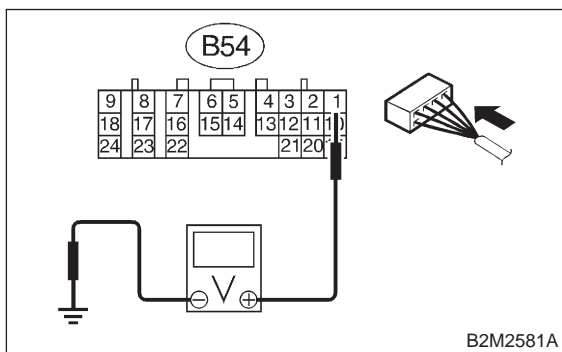

CHECK : Is the voltage less than 1 V?


YES : Go to step 10AZ43.

NO : Go to step 10AZ44.

10AZ43 : CHECK INPUT SIGNAL FOR TCM.

Measure voltage between TCM chassis ground in selector lever except for "1" position.

Connector & terminal
(B54) No. 1 (+) — Chassis ground (-):

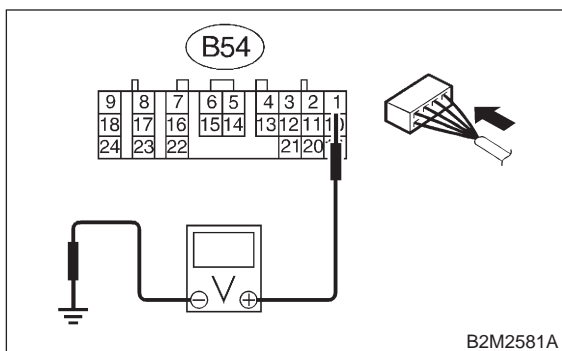

CHECK : Is the voltage more than 6 V?

YES : Repair poor contact in TCM connector.

NO : Go to step 10AZ44.

10AZ44 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

CHECK : Is there poor contact in TCM connector?

YES : Repair poor contact in TCM connector.

NO : Replace TCM. <Ref. to 3-2 [W22A0].>

BA: DTC P0710 — TRANSMISSION FLUID TEMPERATURE SENSOR CIRCUIT MALFUNCTION —

● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault


● **TROUBLE SYMPTOM:**

- No shift up to 4th speed (after engine warm-up)
- No lock-up (after engine warm-up)
- Excessive shift shock

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

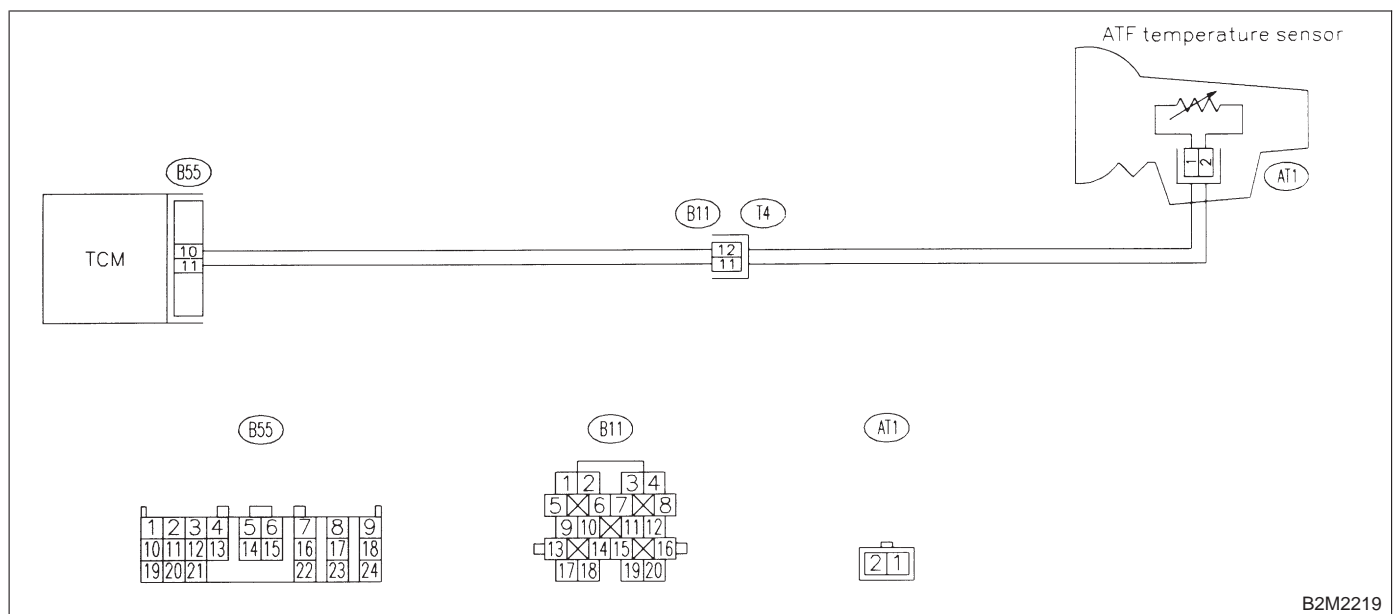

B2M2219

10BA1 : CHECK DTC P0710 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0710?
- YES** : Check ATF temperature sensor circuit. <Ref. to 3-2 [T8E0].>
- NO** : It is not necessary to inspect DTC P0710.


**BB: DTC P0715 — TORQUE CONVERTER TURBINE SPEED SENSOR
CIRCUIT MALFUNCTION —**

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

- **WIRING DIAGRAM:**

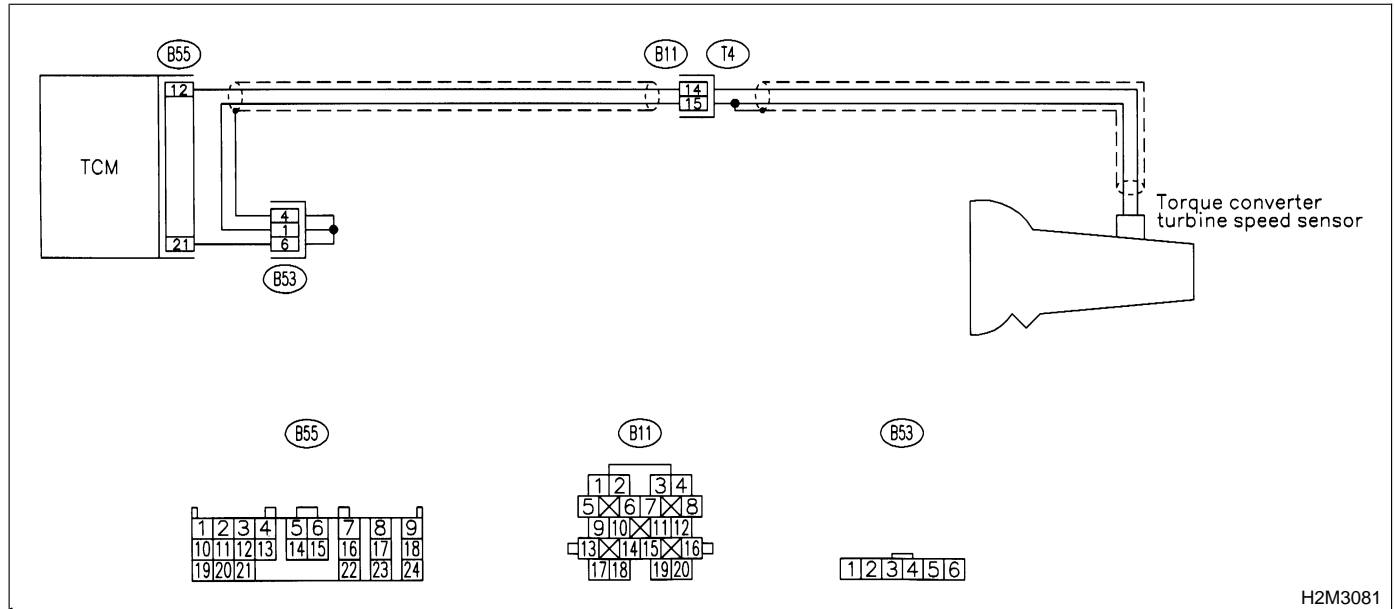

H2M3081

10BB1 : CHECK DTC P0715 ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0715?

YES : Check torque converter turbine speed sensor circuit. <Ref. to 3-2 [T8H0].>

NO : It is not necessary to inspect DTC P0715.


BC: DTC P0720 — OUTPUT SPEED SENSOR (VEHICLE SPEED SENSOR 2) CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - No shift or excessive tight corner “braking”

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

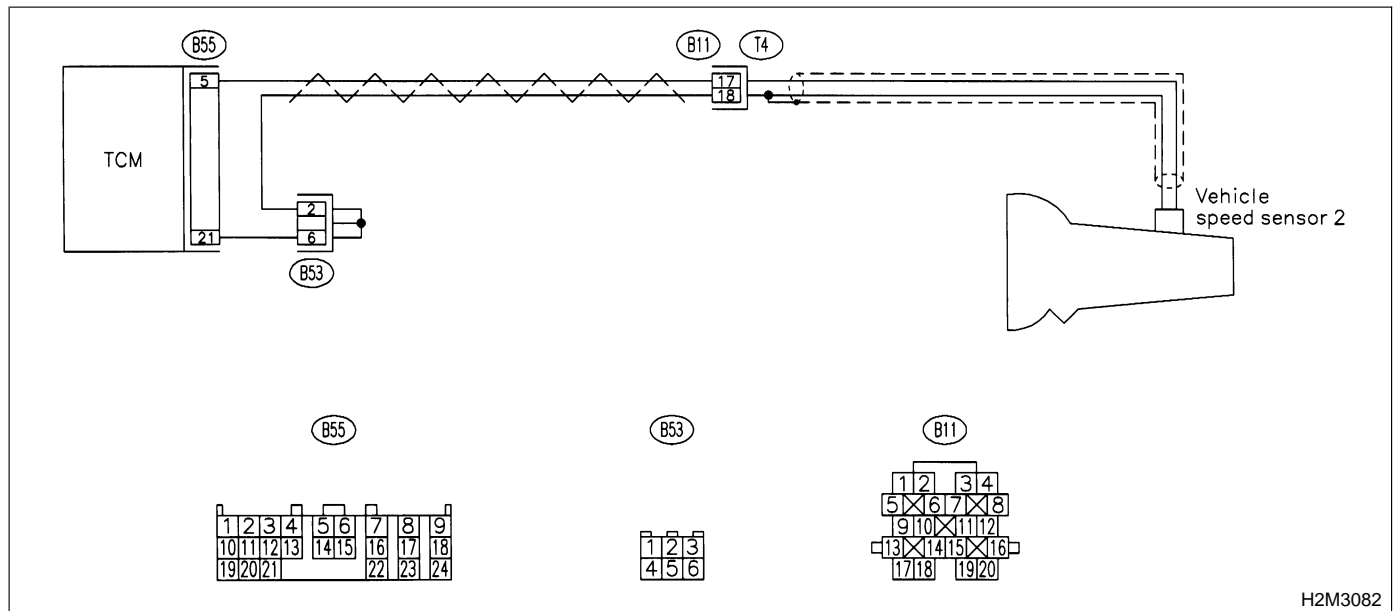

10BC1 : CHECK DTC P0720 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0720?
- YES** : Check vehicle speed sensor 2 circuit. <Ref. to 3-2 [T8G0].>
- NO** : It is not necessary to inspect DTC P0720.

BD: DTC P0725 — ENGINE SPEED INPUT CIRCUIT MALFUNCTION —

● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault


● **TROUBLE SYMPTOM:**

- No lock-up (after engine warm-up)
- AT diagnostic indicator light (AT OIL TEMP indicator light) remains on when vehicle speed is "0".

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>.

● **WIRING DIAGRAM:**

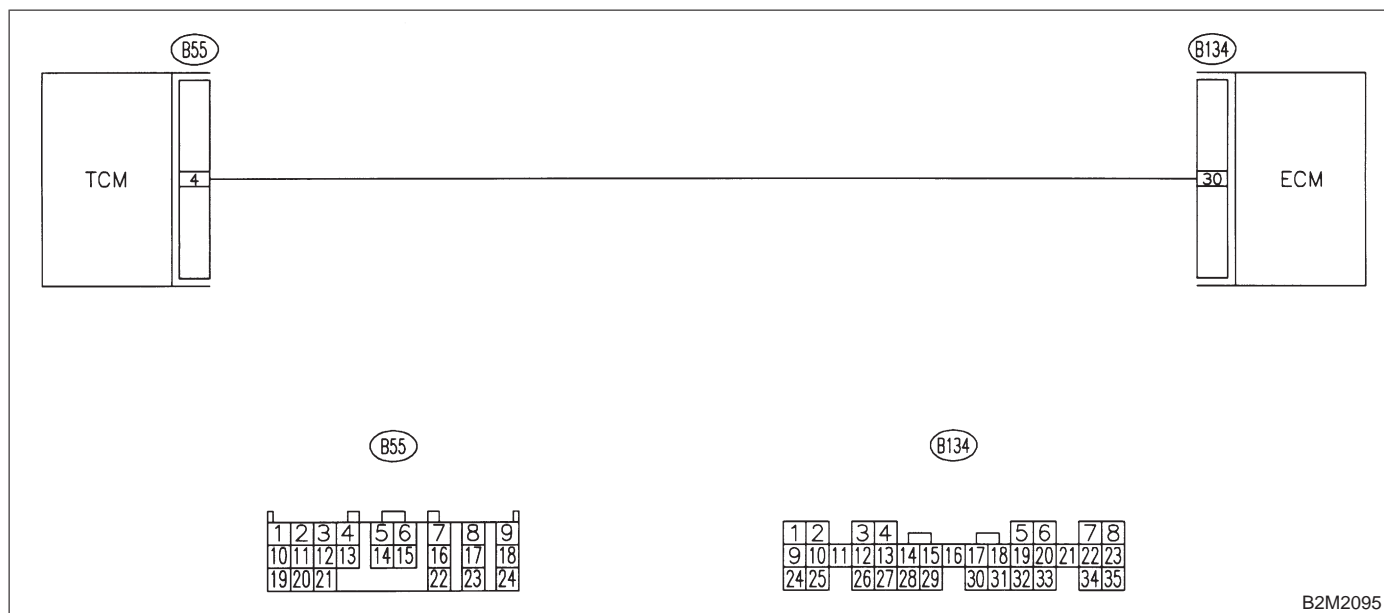

B2M2095

10BD1 : CHECK DTC P0725 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0725?
- YES** : Check engine speed input signal circuit. <Ref. to 3-2 [T8C0].>
- NO** : It is not necessary to inspect DTC P0725.

BE: DTC P0731 — GEAR 1 INCORRECT RATIO —

NOTE:

For the diagnostic procedure, refer to 2-7 [T10BH0]. <Ref. to 2-7 [T10BH0].>

BF: DTC P0732 — GEAR 2 INCORRECT RATIO —

NOTE:

For the diagnostic procedure, refer to 2-7 [T10BH0]. <Ref. to 2-7 [T10BH0].>

BG: DTC P0733 — GEAR 3 INCORRECT RATIO —

NOTE:

For the diagnostic procedure, refer to 2-7 [T10BH0]. <Ref. to 2-7 [T10BH0].>

BH: DTC P0734 — GEAR 4 INCORRECT RATIO —● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

● **TROUBLE SYMPTOM:**

- Shift point too high or too low; engine brake not effected in “3” range; excessive shift shock; excessive tight corner “braking”

CAUTION:


After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10BH2] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

● WIRING DIAGRAM:

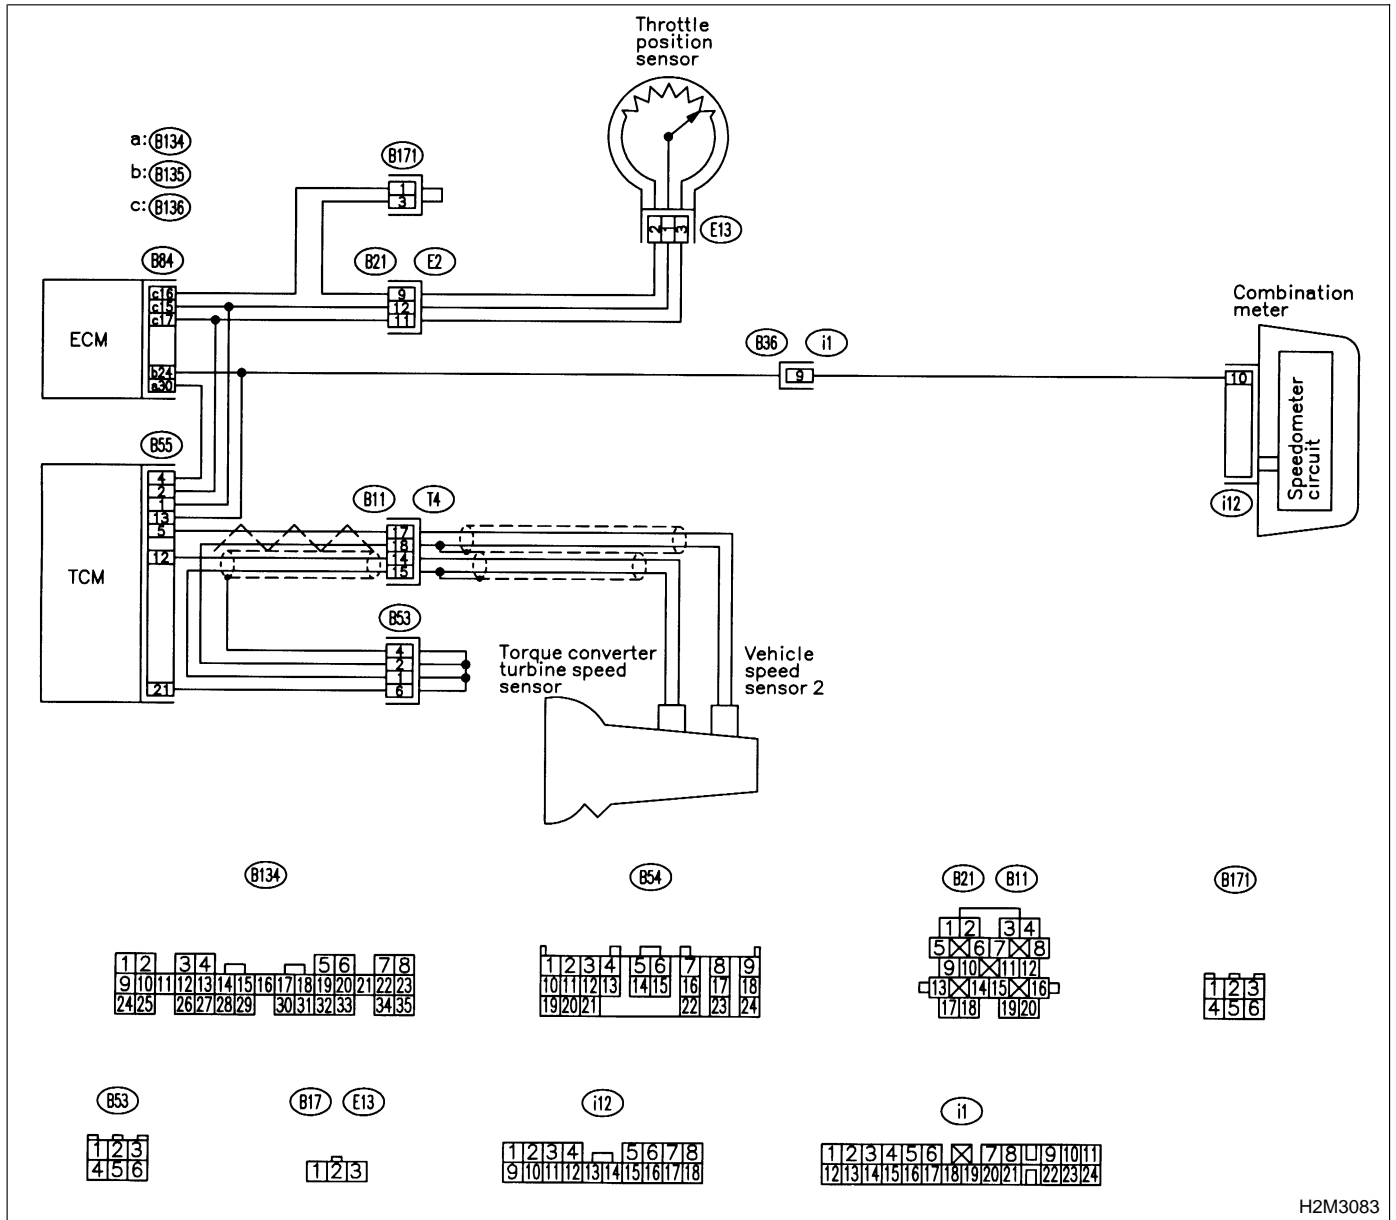

H2M3083

10BH1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : *Is there any other DTC on display?*
- YES** : Inspect relevant DTC using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10BH2**.

10BH2 : CHECK THROTTLE POSITION SENSOR CIRCUIT.

- Check throttle position sensor circuit. <Ref. to 3-2 [T8F0].>
- CHECK** : *Is there any trouble in throttle position sensor circuit?*
- YES** : Repair or replace throttle position sensor circuit.
- NO** : Go to step **10BH3**.

10BH3 : CHECK VEHICLE SPEED SENSOR 2 CIRCUIT.

Check vehicle speed sensor 2 circuit. <Ref. to 3-2 [T8G0].>

- CHECK** : *Is there any trouble in vehicle speed sensor 2 circuit?*
- YES** : Repair or replace vehicle speed sensor 2 circuit.
- NO** : Go to step **10BH4**.

10BH4 : CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT.

Check torque converter turbine speed sensor circuit. <Ref. to 3-2 [T8H0].>

- CHECK** : *Is there any trouble in torque converter turbine speed sensor circuit?*
- YES** : Repair or replace torque converter turbine speed sensor circuit.
- NO** : Go to step **10BH5**.

10BH5 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in TCM connector?*
- YES** : Repair poor contact in TCM connector.
- NO** : Go to step **10BH6**.

10BH6 : CHECK MECHANICAL TROUBLE.

Check mechanical trouble in automatic transmission.

- CHECK** : *Is there any mechanical trouble in automatic transmission?*
- YES** : Repair or replace automatic transmission. <Ref. to 3-2 [T1000].>
- NO** : Replace TCM. <Ref. to 3-2 [W22A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10BH6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:

BI: DTC P0740 — TORQUE CONVERTER CLUTCH SYSTEM MALFUNCTION

DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault


TROUBLE SYMPTOM:

- No lock-up (after engine warm-up)
- No shift or excessive tight corner "braking"

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

WIRING DIAGRAM:

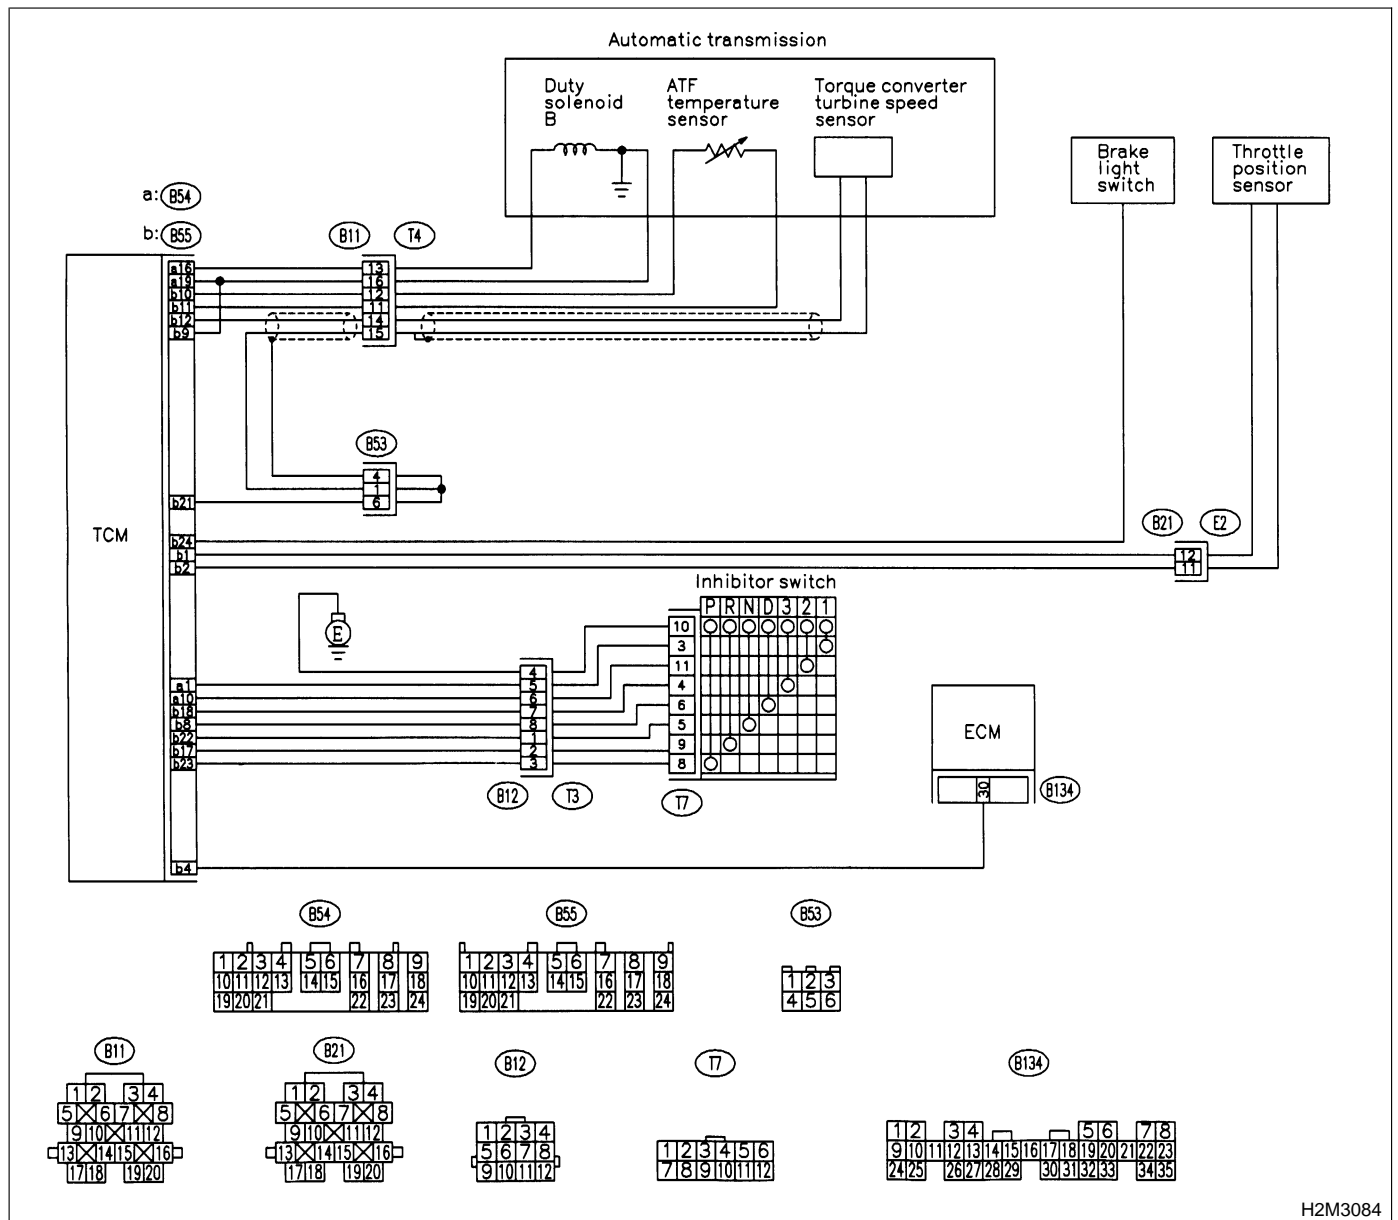

10BI1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : *Is there any other DTC on display?*
- YES** : Inspect the relevant DTC using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10BI2**.

10BI2 : CHECK DUTY SOLENOID B CIRCUIT.

Check duty solenoid B circuit. <Ref. to 3-2 [T8Q0].>

- CHECK** : *Is there any trouble in duty solenoid B circuit?*
- YES** : Repair or replace duty solenoid B circuit.
- NO** : Go to step **10BI3**.

10BI3 : CHECK THROTTLE POSITION SENSOR CIRCUIT.

Check throttle position sensor circuit. <Ref. to 3-2 [T8F0].>

- CHECK** : *Is there any trouble in throttle position sensor circuit?*
- YES** : Repair or replace throttle position sensor circuit.
- NO** : Go to step **10BI4**.

10BI4 : CHECK TORQUE CONVERTER TURBINE SPEED SENSOR CIRCUIT.

Check torque converter turbine speed sensor circuit. <Ref. to 3-2 [T8H0].>

- CHECK** : *Is there any trouble in torque converter turbine speed sensor circuit?*
- YES** : Repair or replace torque converter turbine speed sensor circuit.
- NO** : Go to step **10BI5**.

10BI5 : CHECK INHIBITOR SWITCH CIRCUIT.

Check inhibitor switch circuit. <Ref. to 2-7 [T10AZ0].>

- CHECK** : *Is there any trouble in inhibitor switch circuit?*
- YES** : Repair or replace inhibitor switch circuit.
- NO** : Go to step **10BI6**.

10BI6 : CHECK BRAKE LIGHT SWITCH CIRCUIT.

Check brake light switch circuit. <Ref. to 2-7 [T10AY0].>

- CHECK** : *Is there any trouble in brake light switch circuit?*
- YES** : Repair or replace brake light switch circuit.
- NO** : Go to step **10BI7**.

10BI7 : CHECK ATF TEMPERATURE SENSOR CIRCUIT.

Check ATF temperature sensor circuit. <Ref. to 3-2 [T8E0].>

- CHECK** : *Is there any trouble in ATF temperature sensor circuit?*
- YES** : Repair or replace ATF temperature sensor circuit.
- NO** : Go to step **10BI8**.

10BI8 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in TCM connector?*
- YES** : Repair poor contact in TCM connector.
- NO** : Go to step **10BI9**.

10BI9 : CHECK MECHANICAL TROUBLE.

Check mechanical trouble in automatic transmission.

- CHECK** : *Is there any mechanical trouble in automatic transmission?*
- YES** : Repair or replace automatic transmission. <Ref. to 3-2 [T1000].>
- NO** : Replace TCM. <Ref. to 3-2 [W22A0].>


BJ: DTC P0743 — TORQUE CONVERTER CLUTCH SYSTEM (DUTY SOLENOID B) ELECTRICAL —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - No lock-up (after engine warm-up)

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

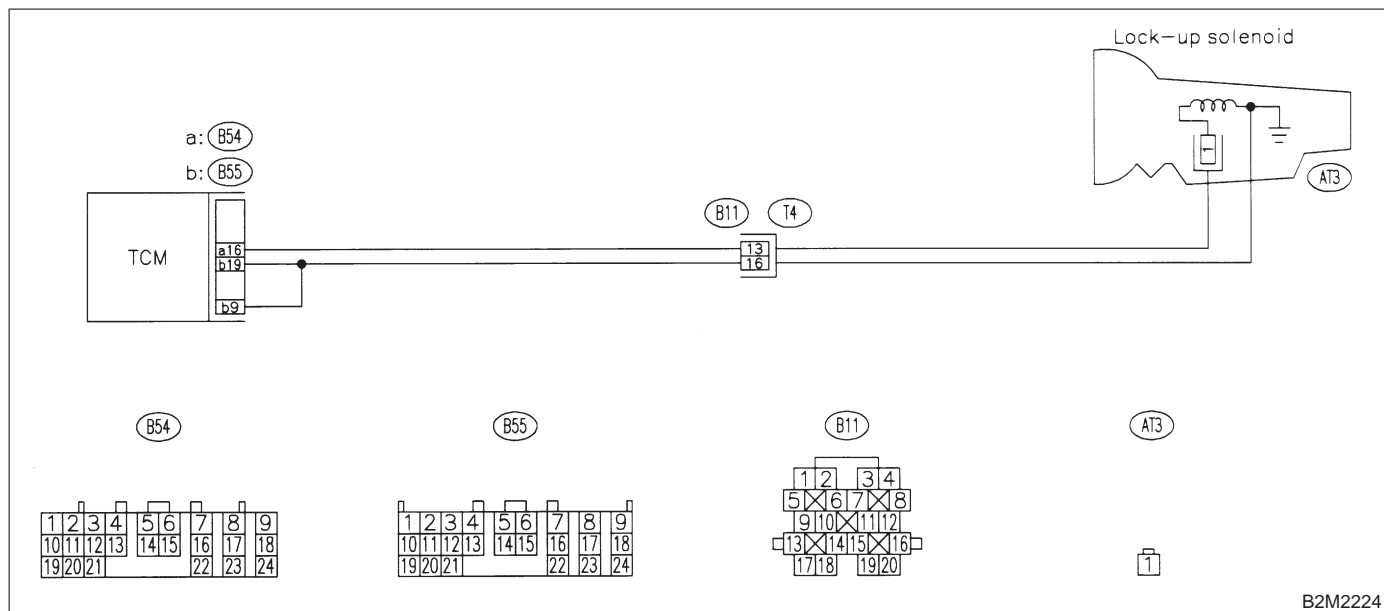

10BJ1 : CHECK DTC P0743 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0743?
- YES** : Check duty solenoid B circuit. <Ref. to 3-2 [T8Q0].>
- NO** : It is not necessary to inspect DTC P0743.


BK: DTC P0748 — PRESSURE CONTROL SOLENOID (DUTY SOLENOID A) ELECTRICAL —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Excessive shift shock

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

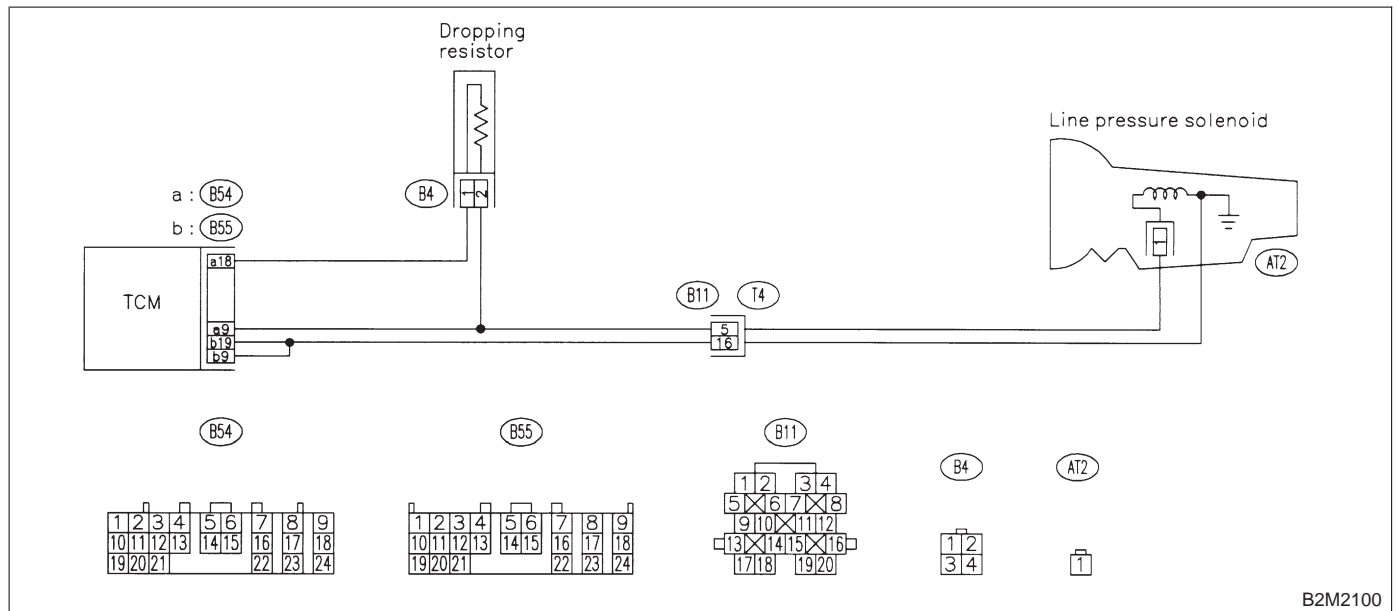

10BK1 : CHECK DTC P0748 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0748?
- YES** : Check duty solenoid A circuit. <Ref. to 3-2 [T800].>
- NO** : It is not necessary to inspect DTC P0748.


BL: DTC P0753 — SHIFT SOLENOID A (SHIFT SOLENOID 1) ELECTRICAL —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - No shift

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

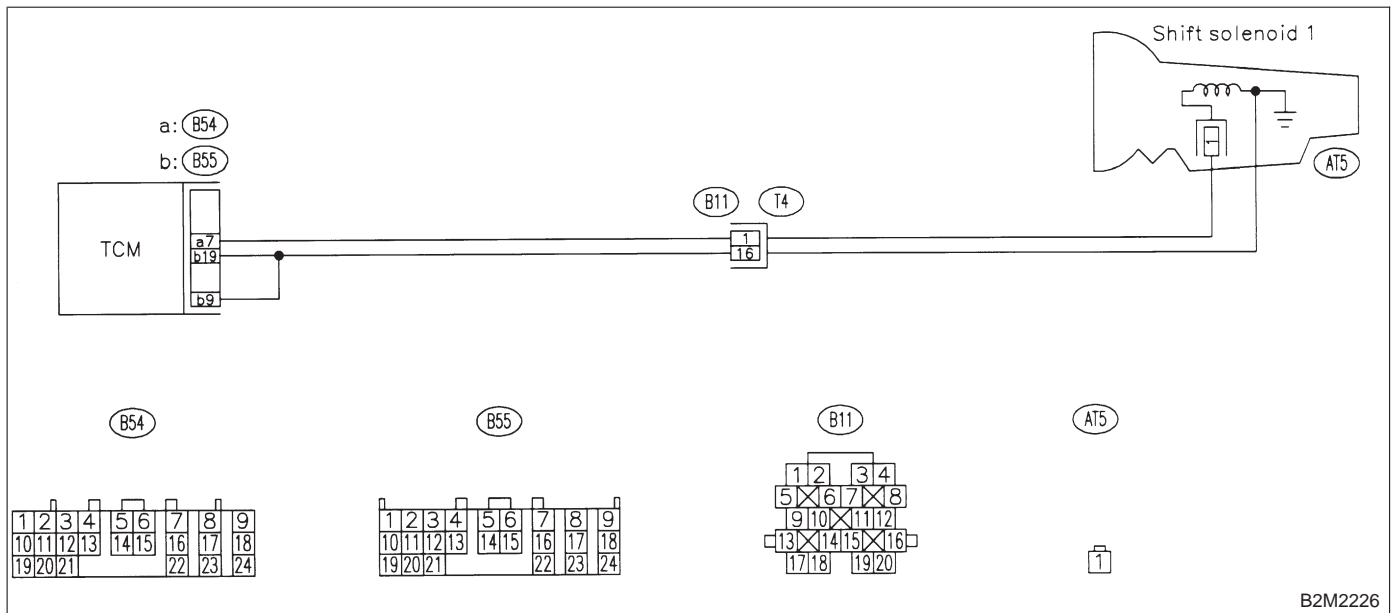

10BL1 : CHECK DTC P0753 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0753?
- YES** : Check shift solenoid 1 circuit. <Ref. to 3-2 [T8K0].>
- NO** : It is not necessary to inspect DTC P0753.


BM: DTC P0758 — SHIFT SOLENOID B (SHIFT SOLENOID 2) ELECTRICAL

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - No shift

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

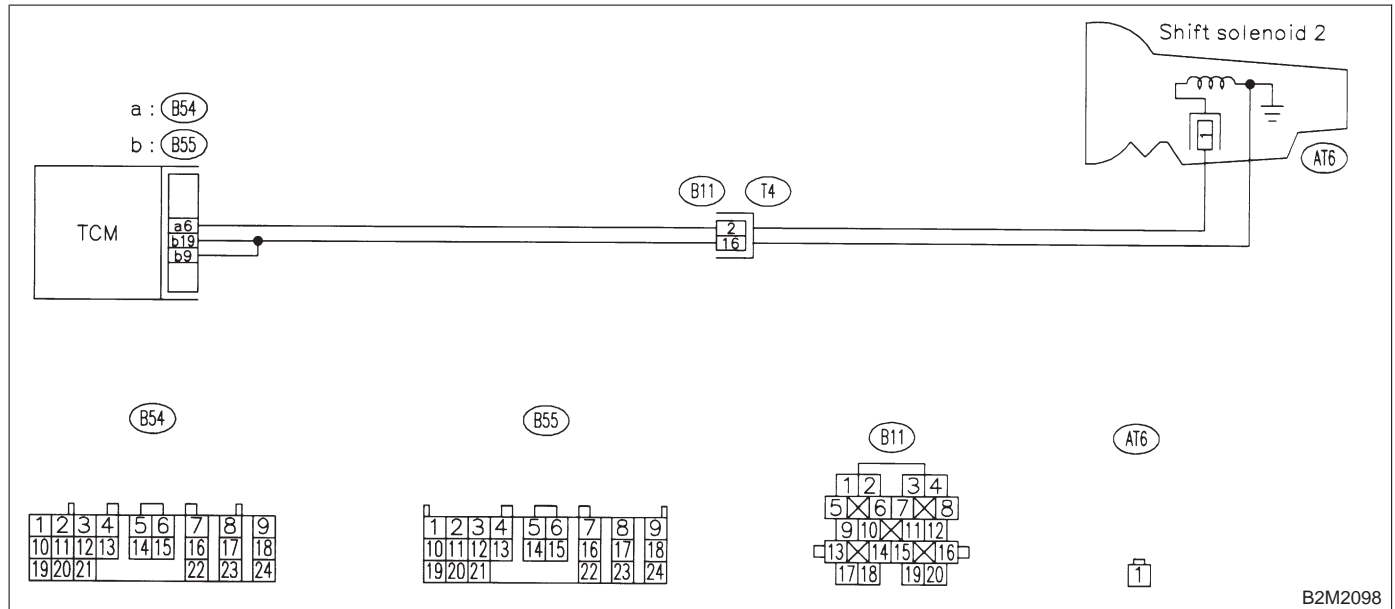

B2M2098

10BM1 : CHECK DTC P0758 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0758?
- YES** : Check shift solenoid 2 circuit. <Ref. to 3-2 [T8L0].>
- NO** : It is not necessary to inspect DTC P0758.


BN: DTC P1100 — STARTER SWITCH CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

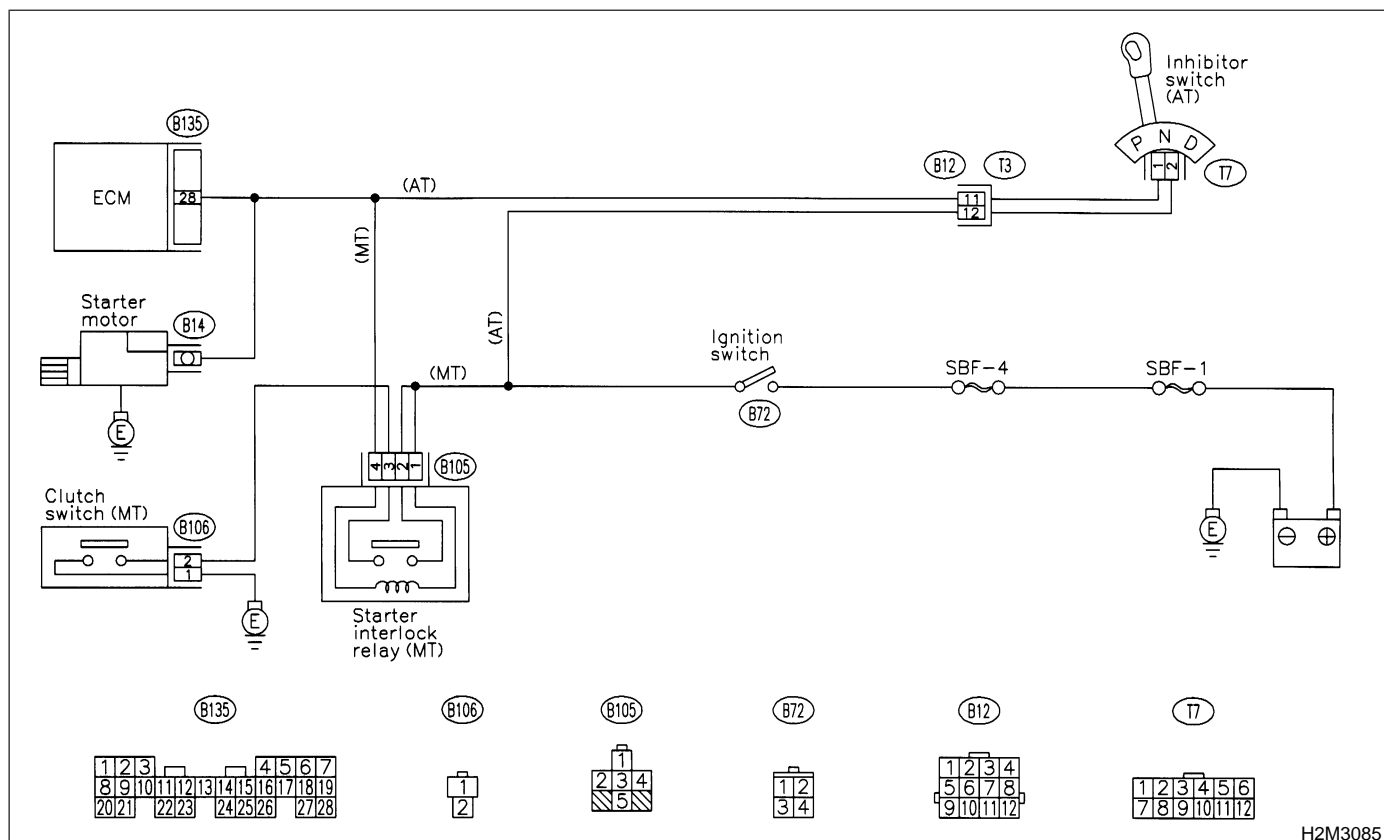

H2M3085

10BN1 : CHECK OPERATION OF STARTER MOTOR.

NOTE:

- On AT vehicles, place the inhibitor switch in the "P" or "N" position.
- On MT vehicles, depress the clutch pedal.

CHECK : *Does starter motor operate when ignition switch to "ST"?*

YES : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open or ground short circuit in harness between ECM and starter motor connector.
- Poor contact in ECM connector.

NO : Check starter motor circuit. <Ref. to 2-7 [T8B0].>


BO: DTC P1101 — NEUTRAL POSITION SWITCH CIRCUIT LOW INPUT [MT VEHICLES] —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

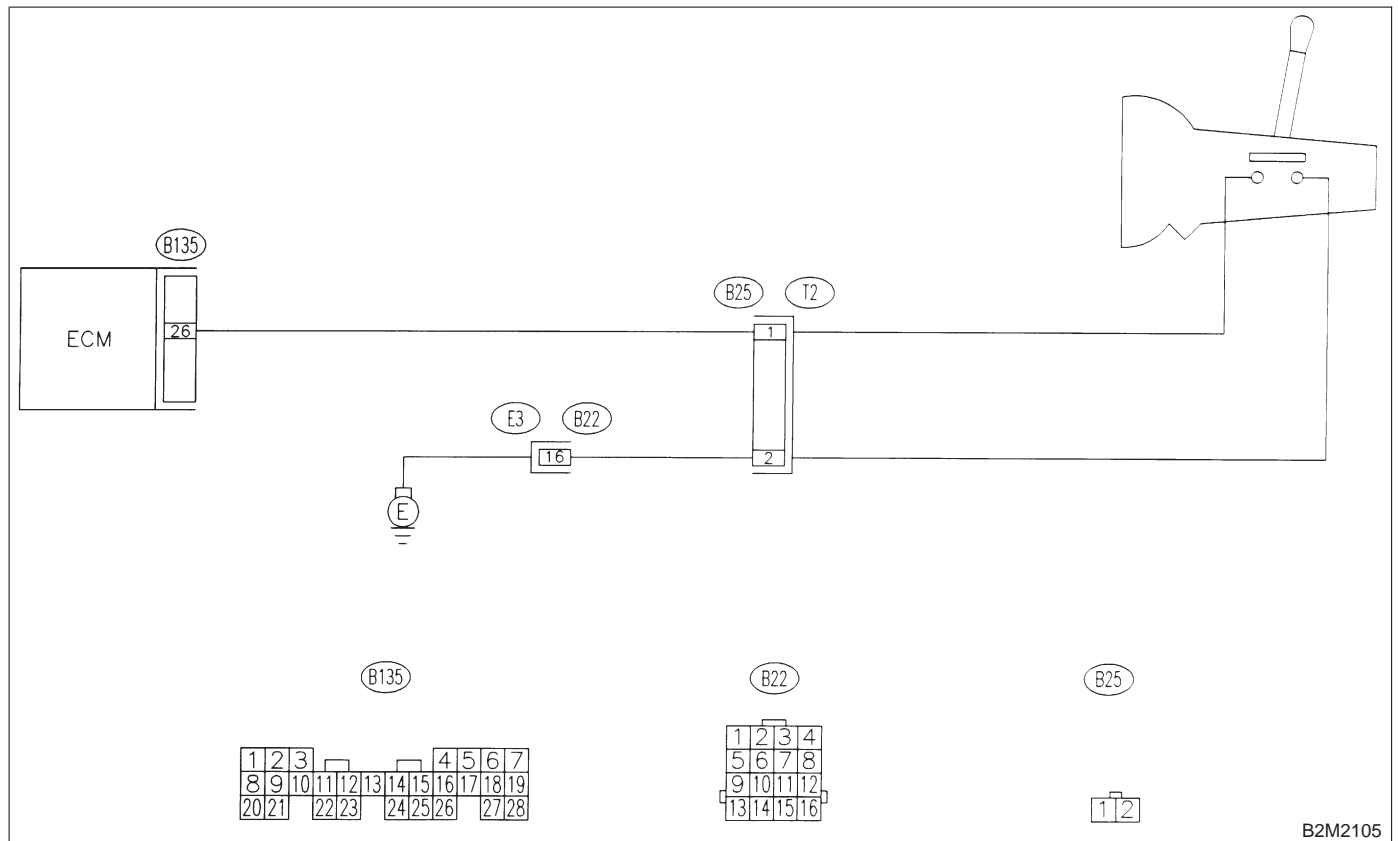


B2M2105

10B01 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

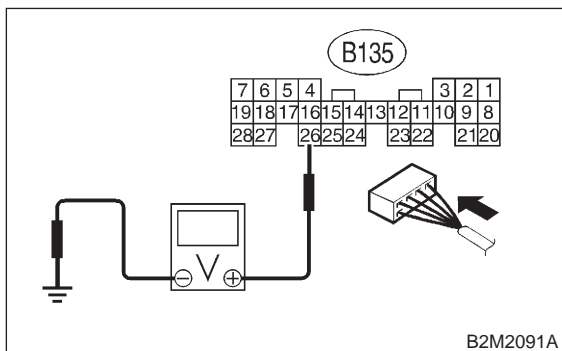


- CHECK** : *Is the voltage more than 10 V in neutral position?*
- YES** : Go to step 10B02.
- NO** : Go to step 10B04.

10B02 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

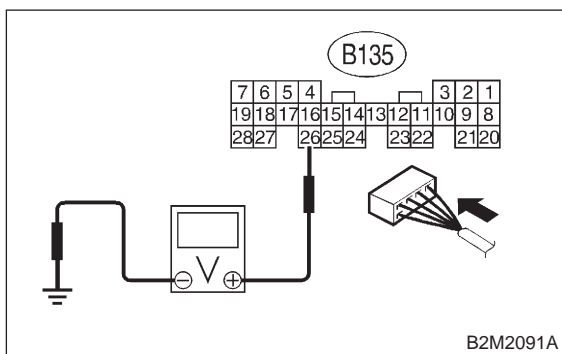

- CHECK** : *Is the voltage less than 1 V in other positions?*
- YES** : Go to step 10B03.
- NO** : Go to step 10B04.

10B03 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>


- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Contact with SOA service.

NOTE:
 Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10B04 : CHECK NEUTRAL POSITION SWITCH.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from transmission harness.
- 3) Measure resistance between transmission harness and connector terminals.

Connector & terminal
(T2) No. 1 — No. 2:

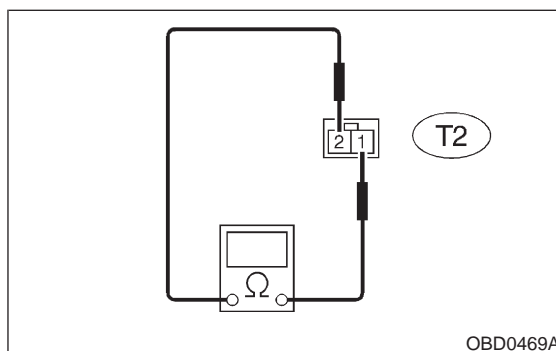


- CHECK** : *Is the resistance more than 1 MΩ in neutral position?*
- YES** : Go to step 10B05.
- NO** : Repair short circuit in transmission harness or replace neutral position switch.

10B05 : CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.

Measure resistance between ECM and chassis ground.

Connector & terminal

(B135) No. 26 — Chassis ground:

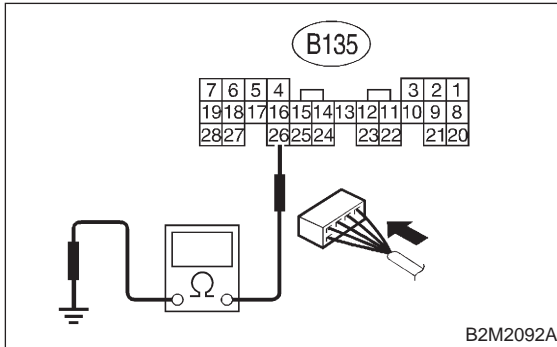

- CHECK** : **Is the resistance less than 10 Ω?**
- YES** : Repair ground short circuit in harness between ECM and transmission harness connector.
- NO** : Go to step **10B06**.

10B06 : CHECK POOR CONTACT.

Check poor contact in transmission harness connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : **Is there poor contact in transmission harness connector?**
- YES** : Repair poor contact in transmission harness connector.
- NO** : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10B06] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


BP: DTC P1101 — NEUTRAL POSITION SWITCH CIRCUIT HIGH INPUT [AT VEHICLES] —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

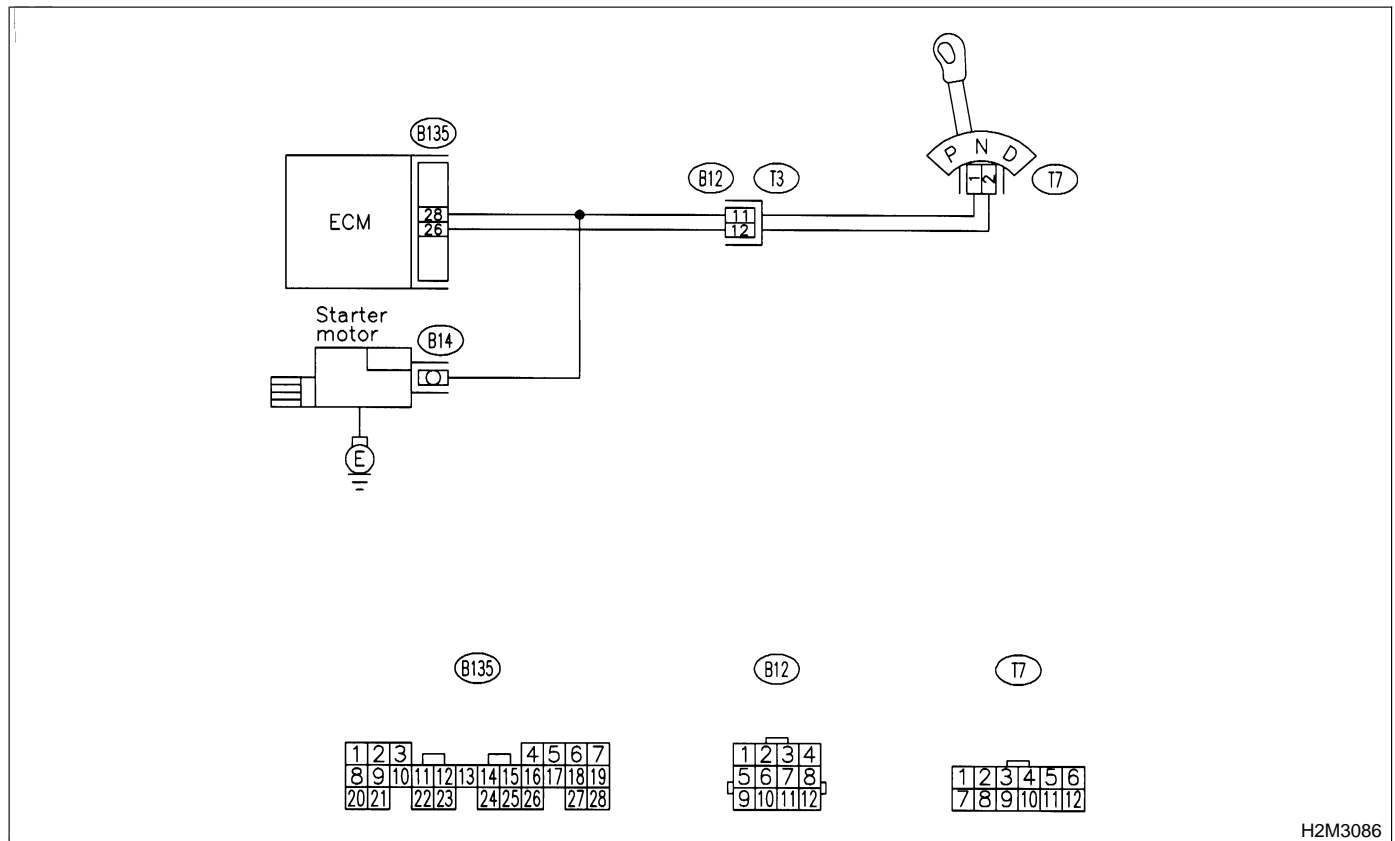


10BP1 : CHECK DTC P0705 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0705?
- YES** : Inspect DTC P0705 using “10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles”. <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10BP2**.

10BP2 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground in selector lever "N" and "P" positions.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

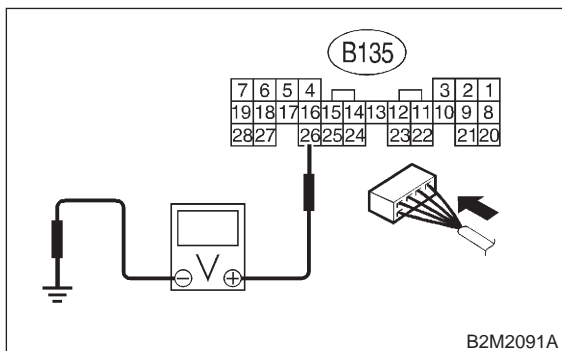


- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step 10BP3.
- NO** : Go to step 10BP5.

10BP3 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground in selector lever except for "N" and "P" positions.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

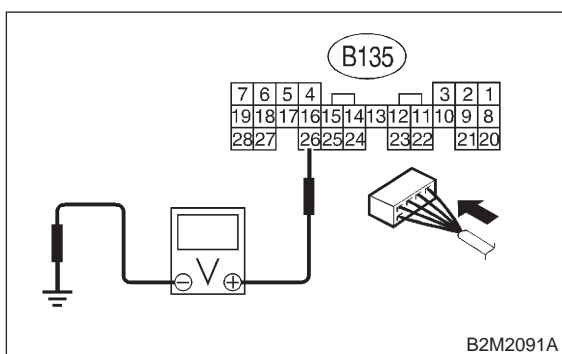

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step 10BP4.
- NO** : Go to step 10BP5.

10BP4 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>


- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Contact with SOA service.

NOTE:
 Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10BP5 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

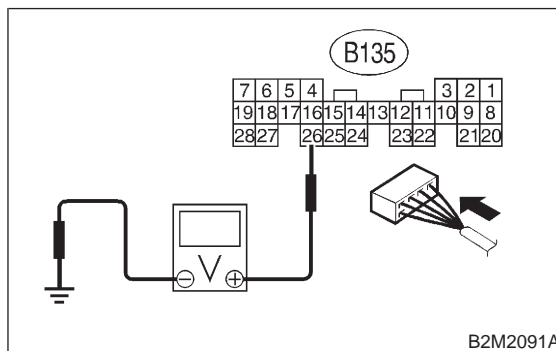

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Repair battery short circuit in harness between ECM and inhibitor switch connector.
- NO** : Go to step 10BP6.

2-7 [T10BP6]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10BP6 : CHECK HARNESS BETWEEN ECM AND INHIBITOR SWITCH CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM and inhibitor switch.
- 3) Measure resistance of harness between ECM and inhibitor switch connector.

Connector & terminal

(B135) No. 26 — (T7) No. 2:

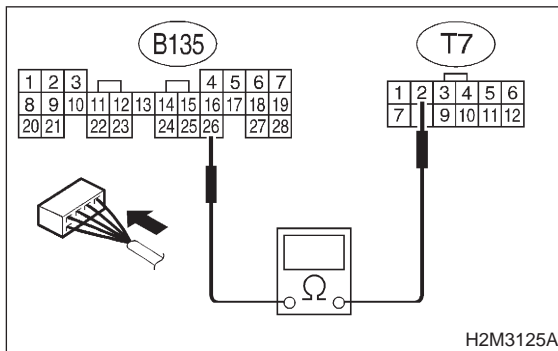

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10BP7.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and inhibitor switch connector
- Poor contact in coupling connector (B12)
- Poor contact in inhibitor switch connector
- Poor contact in ECM connector

10BP7 : CHECK INHIBITOR SWITCH GROUND LINE.

Measure resistance of harness between inhibitor switch connector and engine ground.

Connector & terminal

(T7) No. 2 — Engine ground:

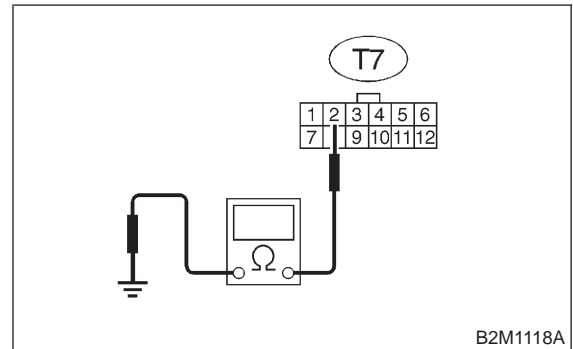


- CHECK** : Is the resistance less than 5 Ω?
- YES** : Go to step 10BP8.
- NO** : Repair open circuit in inhibitor switch ground line.

10BP8 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever "N" and "P" positions.

Terminals

No. 1 — No. 2:

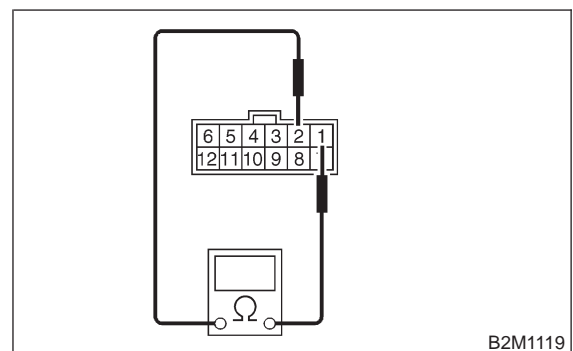

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10BP9.
- NO** : Replace inhibitor switch. <Ref. to 3-2 [W2C0].>

10BP9 : CHECK SELECTOR CABLE CONNECTION.

CHECK : *Is there any fault in selector cable connection to inhibitor switch?*

YES : Repair selector cable connection. <Ref. to 3-2 [W2A0].>

NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.


BQ: DTC P1103 — ENGINE TORQUE CONTROL SIGNAL 1 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Excessive shift shock

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

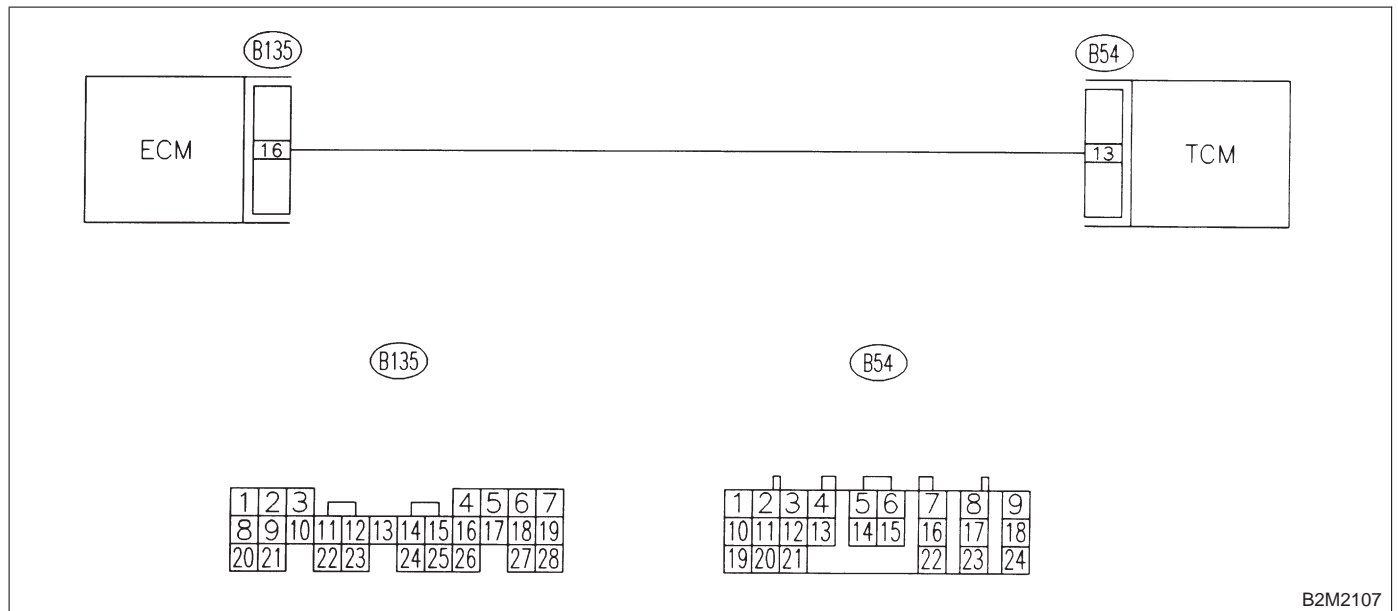


B2M2107

10BQ1 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 16 (+) — Chassis ground (-):

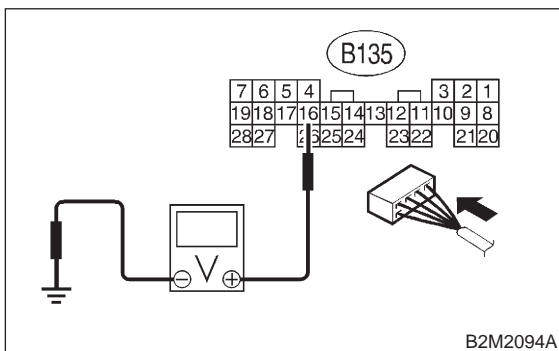


B2M2094A

- CHECK** : Is the voltage more than 4.5 V?
- YES** : Go to step 10BQ2.
- NO** : Go to step 10BQ4.

10BQ2 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 16 (+) — Chassis ground (-):

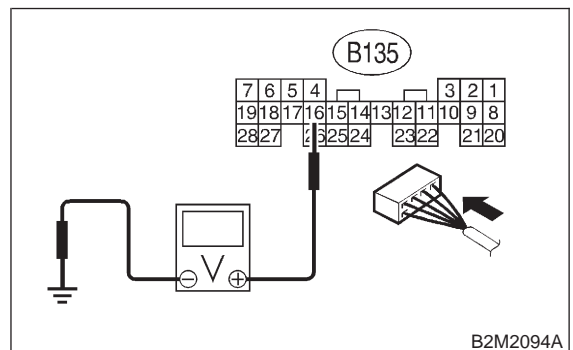

B2M2094A

- CHECK** : Is the voltage more than 10 V?
- YES** : Repair battery short circuit in harness between ECM and TCM connector.
- NO** : Go to step 10BQ3.

10BQ3 : CHECK POOR CONTACT.


Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

10BQ4 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM and TCM.
- 3) Measure resistance of harness between ECM and TCM connector.

Connector & terminal
(B135) No. 16 — (B54) No. 13:

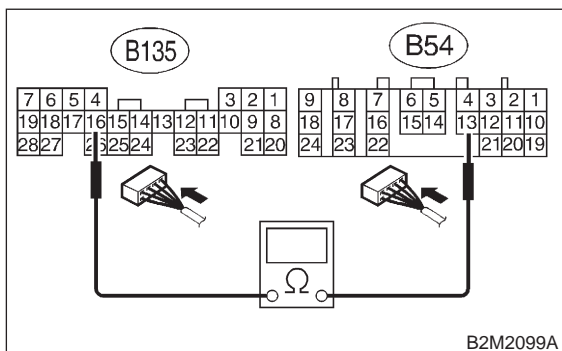


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step 10BQ5.
- NO** : Repair open circuit in harness between ECM and TCM connector.

10BQ5 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

Measure resistance of harness between ECM and chassis ground.

Connector & terminal
(B135) No. 16 — Chassis ground:

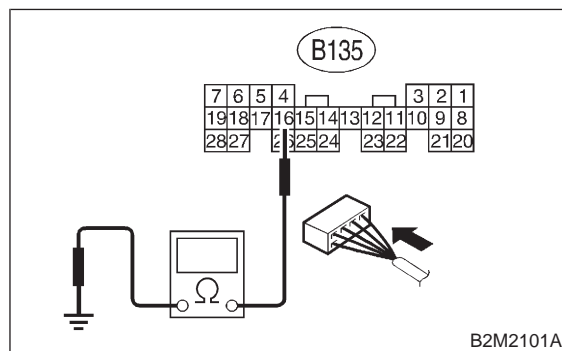

- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between ECM and TCM connector.
- NO** : Go to step 10BQ6.

10BQ6 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in TCM connector?*
- YES** : Repair poor contact in TCM connector.
- NO** : Replace TCM. <Ref. to 3-2 [W22A0].>


BR: DTC P1106 — ENGINE TORQUE CONTROL SIGNAL 2 CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Excessive shift shock

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

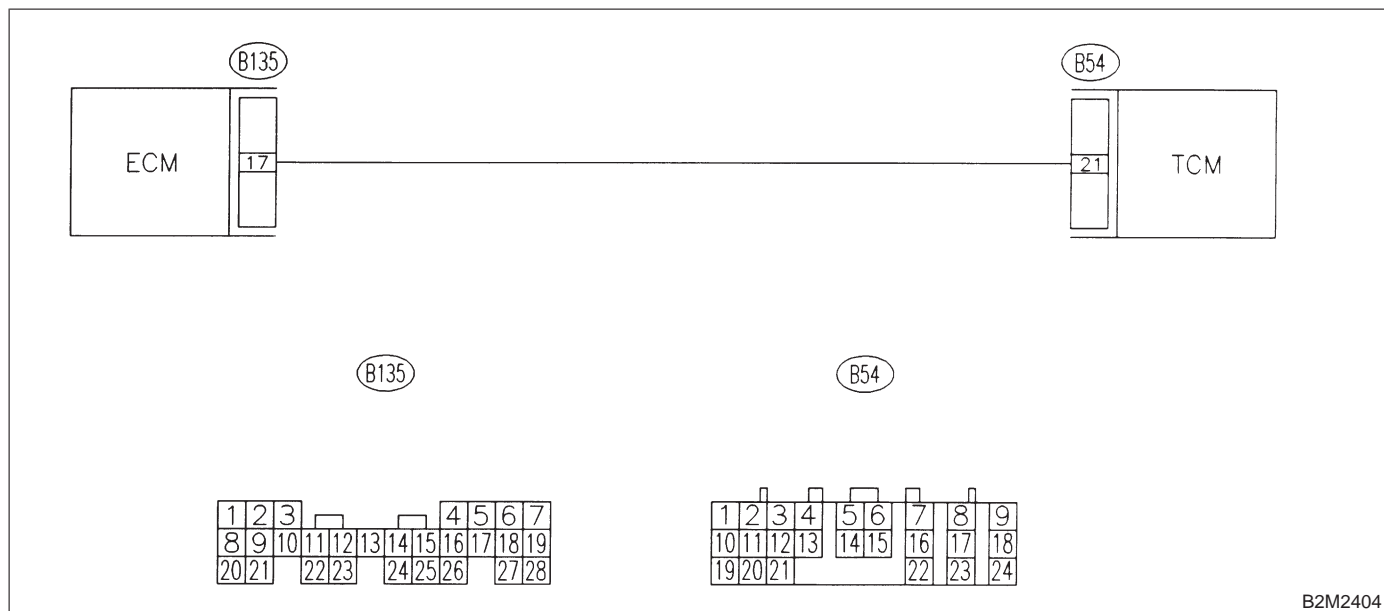

10BR1 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 17 (+) — Chassis ground (-):

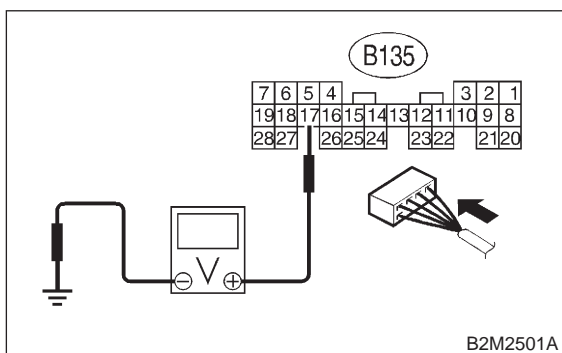


- CHECK** : Is the voltage more than 4.5 V?
- YES** : Go to step 10BR2.
- NO** : Go to step 10BR4.

10BR2 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 21 (+) — Chassis ground (-):

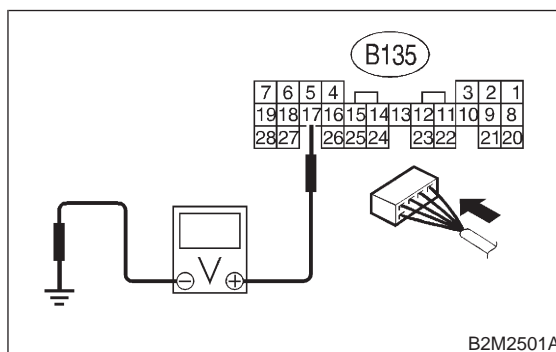

- CHECK** : Is the voltage more than 10 V?
- YES** : Repair battery short circuit in harness between ECM and TCM connector.
- NO** : Go to step 10BR3.

10BR3 : CHECK POOR CONTACT.


Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

10BR4 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM and TCM.
- 3) Measure resistance of harness between ECM and TCM connector.

Connector & terminal
(B135) No. 17 — (B54) No. 21:

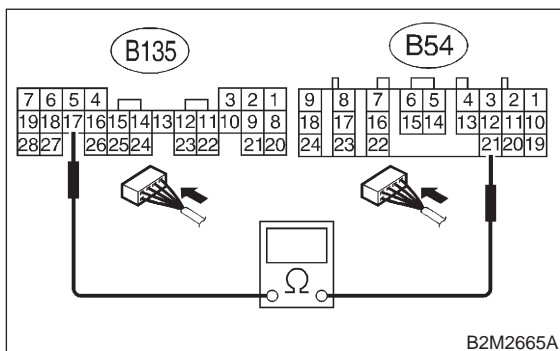


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step 10BR5.
- NO** : Repair open circuit in harness between ECM and TCM connector.

10BR5 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

Measure resistance of harness between ECM and chassis ground.

Connector & terminal
(B135) No. 17 — Chassis ground:

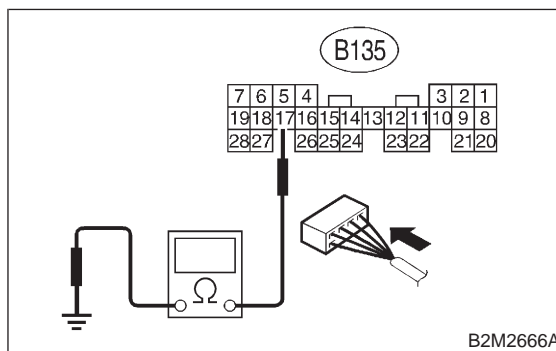

- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between ECM and TCM connector.
- NO** : Go to step 10BR6.

10BR6 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in TCM connector?*
- YES** : Repair poor contact in TCM connector.
- NO** : Replace TCM. <Ref. to 3-2 [W22A0].>

BS: DTC P1110 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT LOW INPUT —


● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

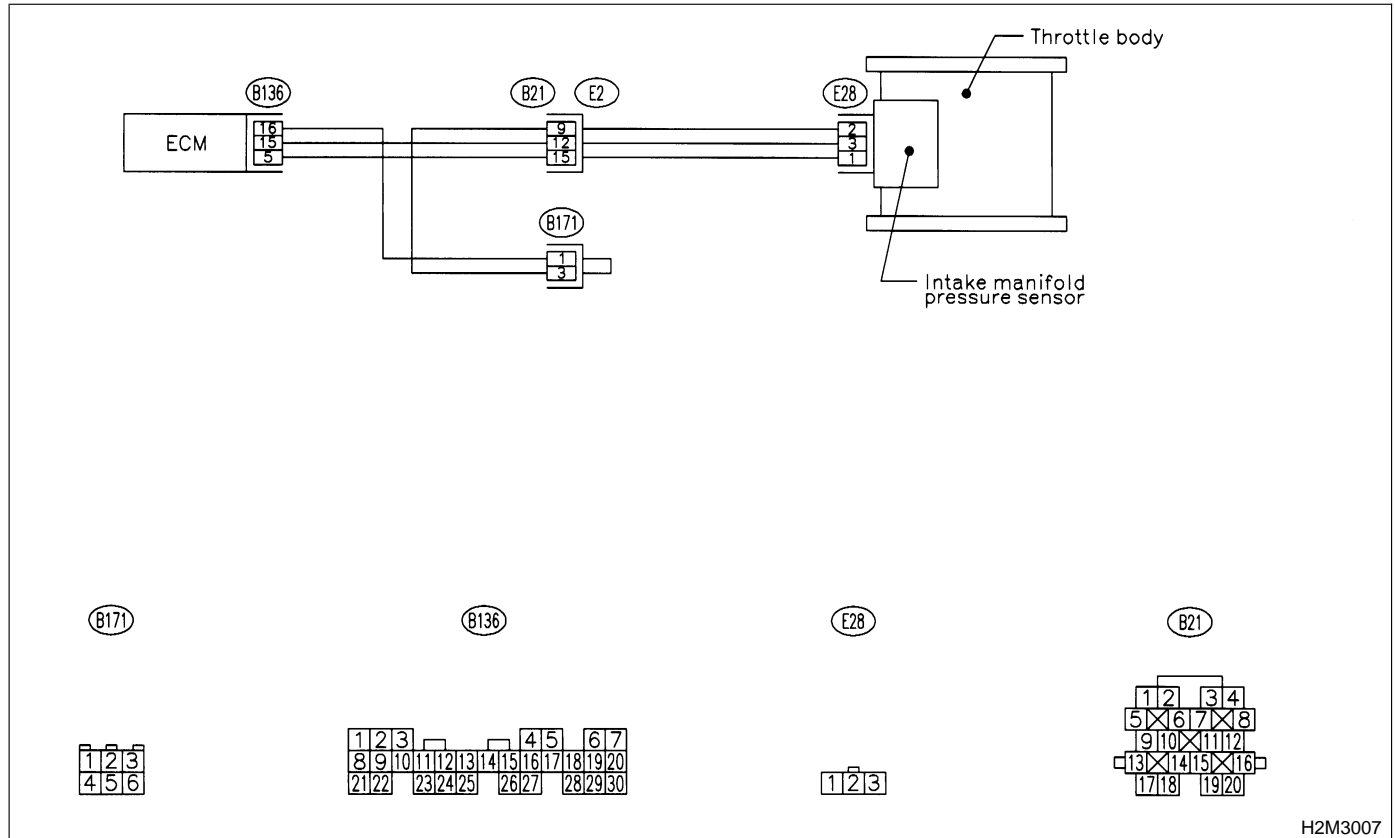

H2M3007

10BS1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1110?
- YES** : Replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : It is not necessary to inspect DTC P1110.

BT: DTC P1111 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT HIGH INPUT —


● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

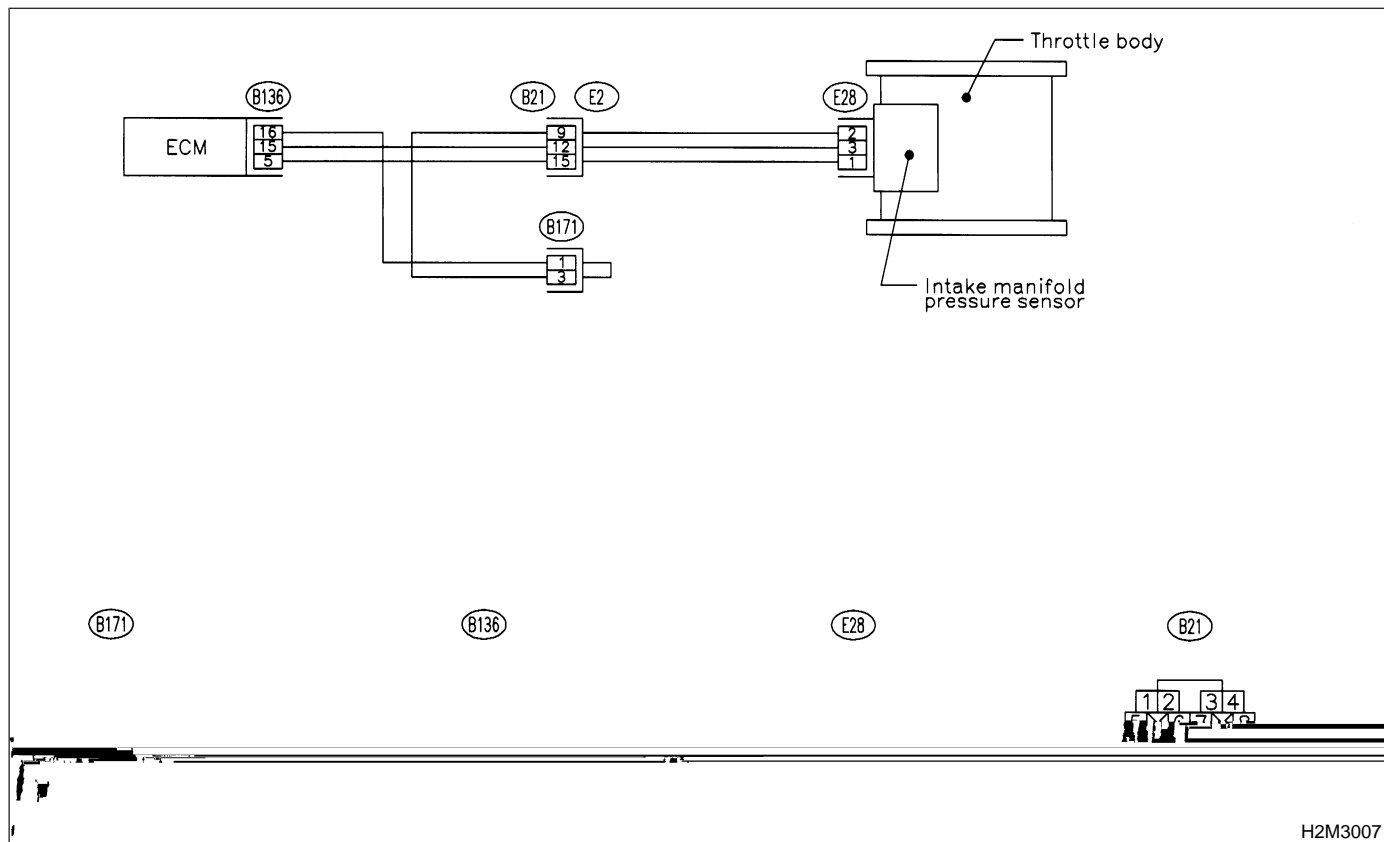

H2M3007

10BT1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1111?
- YES** : Replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : It is not necessary to inspect DTC P1111.

BU: DTC P1112 — ATMOSPHERIC PRESSURE SENSOR CIRCUIT RANGE/ PERFORMANCE PROBLEM —


● DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● WIRING DIAGRAM:

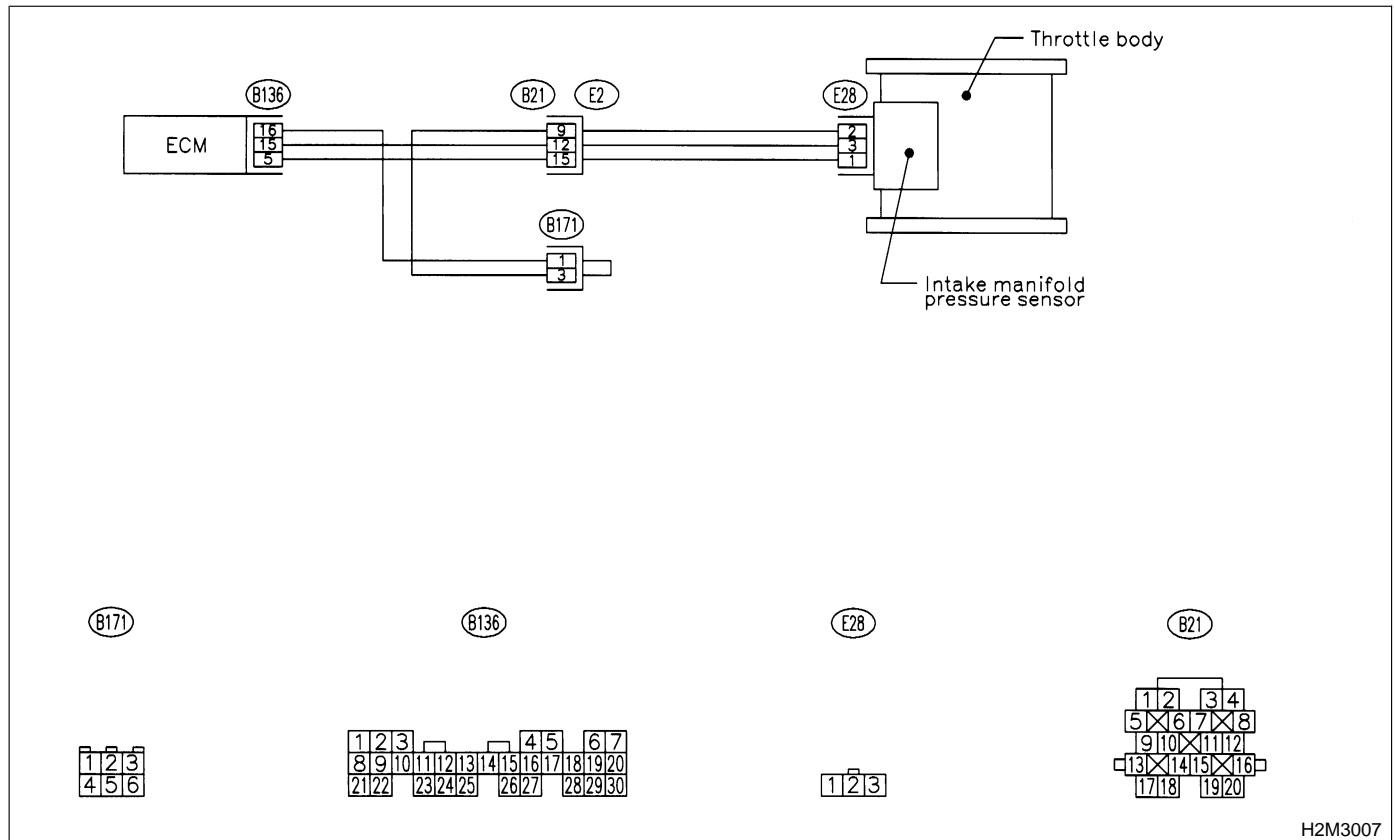

H2M3007

10BU1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0106, P0107, P0108, P1110 or P1111?
- YES** : Inspect DTC P0106, P0107, P0108, P1110 or P1111 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10BU1] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:

BV: DTC P1115 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT HIGH INPUT —


● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

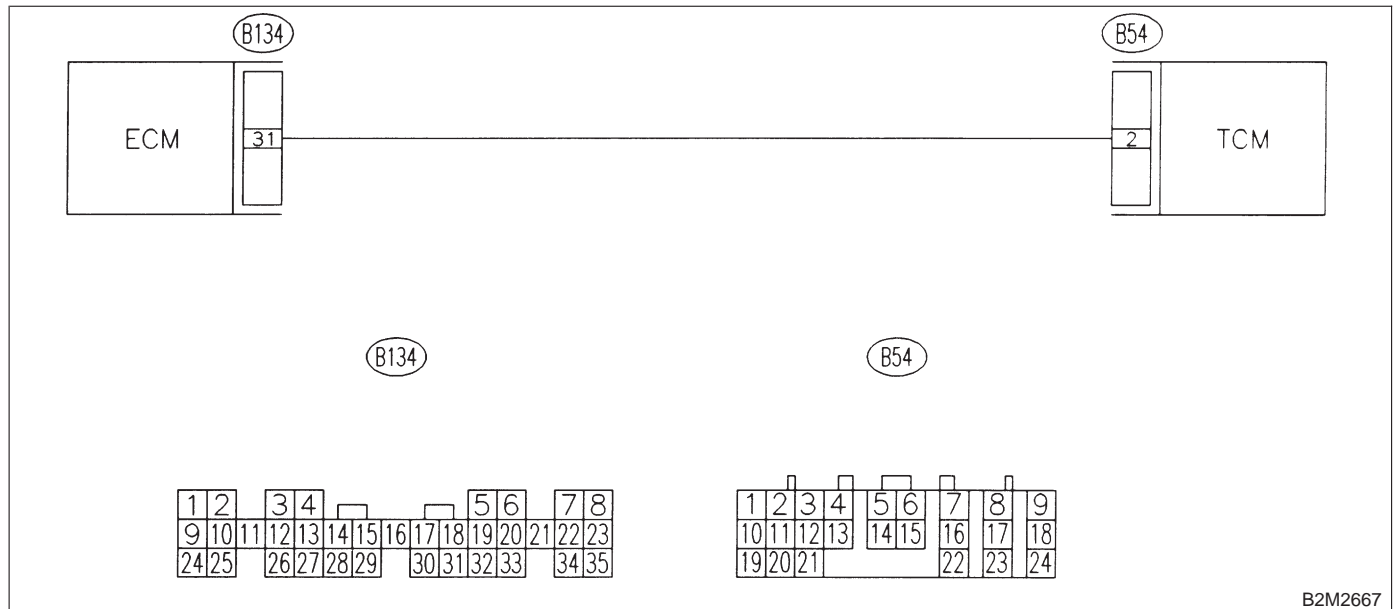


B2M2667

10BV1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Start engine, and warm-up the engine.
- 2) Turn ignition switch to OFF.
- 3) Disconnect connector from TCM.
- 4) Turn ignition switch to ON.
- 5) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 31 (+) — Chassis ground (-):

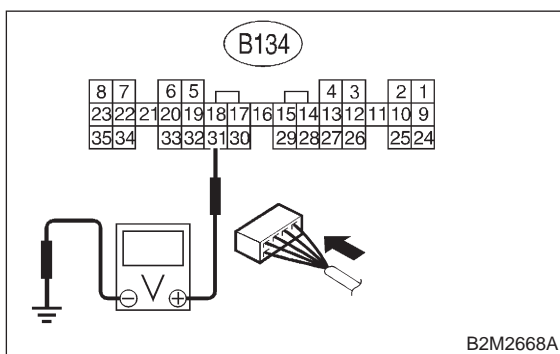


- CHECK** : **Is the voltage less than 3 V?**
- YES** : Go to step **10BV2**.
- NO** : Repair battery short circuit in harness between ECM and TCM connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>

10BV2 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 31 (+) — Chassis ground (-):

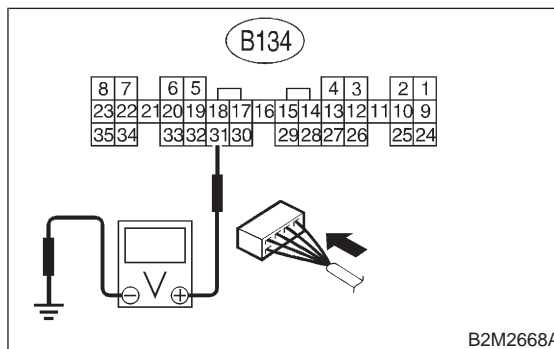

- CHECK** : **Does the voltage change more than 10 V by shaking harness and connector of ECM while monitoring the value with voltage meter?**
- YES** : Repair battery short circuit in harness between ECM and TCM connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

BW: DTC P1116 — ENGINE TORQUE CONTROL CUT SIGNAL CIRCUIT LOW INPUT —


● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

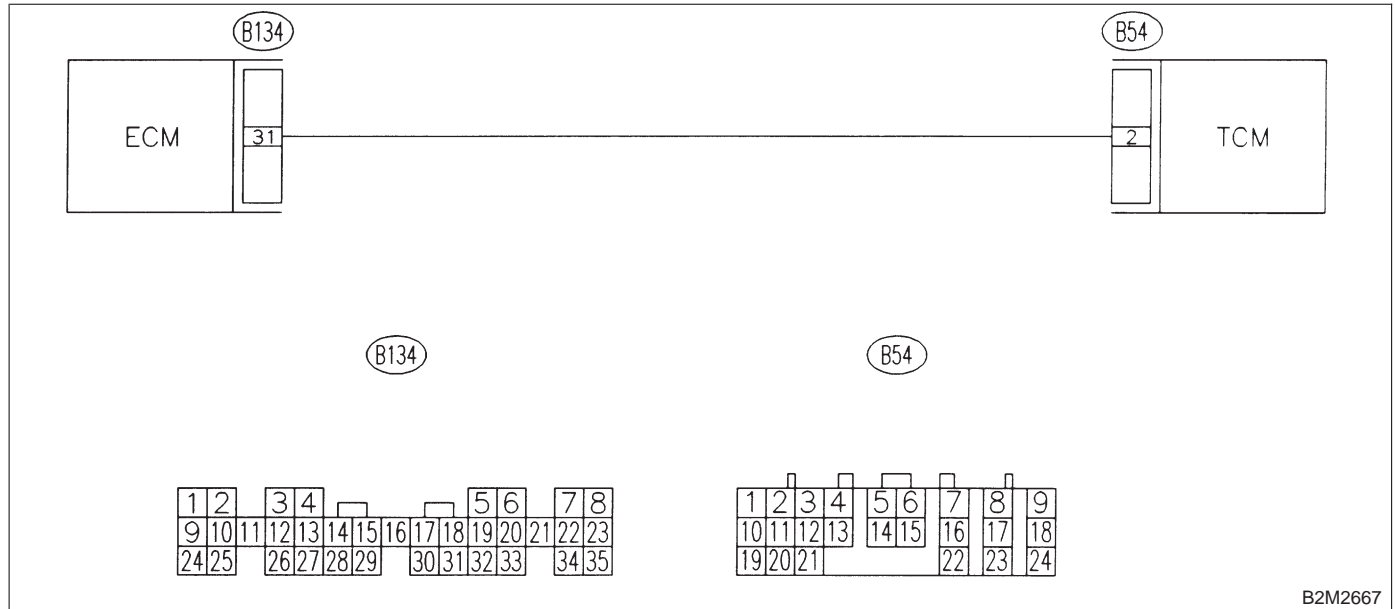


10BW1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Start engine, and warm-up the engine.
- 2) Turn ignition switch to OFF.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 31 (+) — Chassis ground (-):

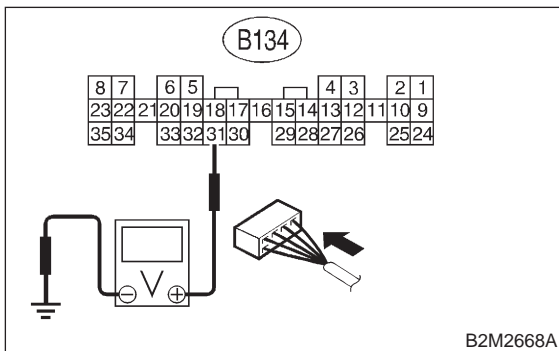


- CHECK** : Is the voltage more than 3 V?
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10BW2.

10BW2 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM and TCM.
- 3) Measure resistance of harness between ECM and chassis ground.

Connector & terminal

(B134) No. 31 — Chassis ground:

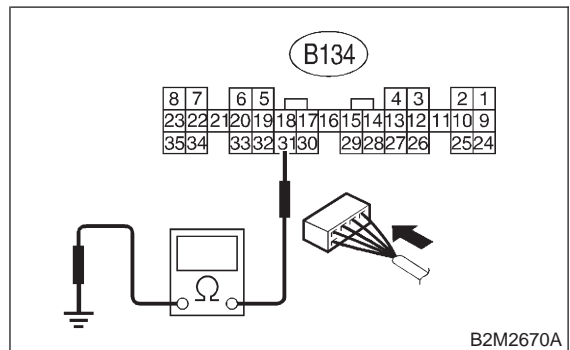


- CHECK** : Is the resistance less than 10 Ω?
- YES** : Repair ground short circuit in harness between ECM and TCM connector.
- NO** : Go to step 10BW3.

10BW3 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

Measure resistance of harness between ECM and TCM connector.

Connector & terminal

(B134) No. 31 — (B54) No. 2:

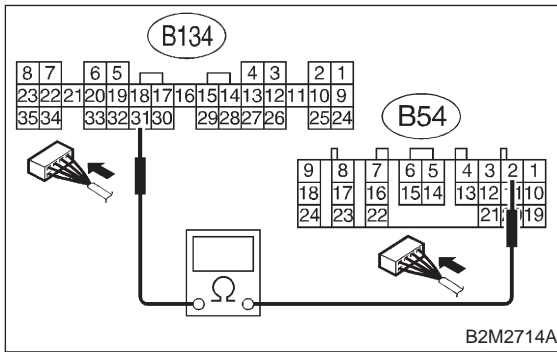

- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Repair poor contact in ECM or TCM connector.
- NO** : Repair open circuit in harness between ECM and TCM connector.


BX: DTC P1120 — STARTER SWITCH CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Failure of engine to start

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

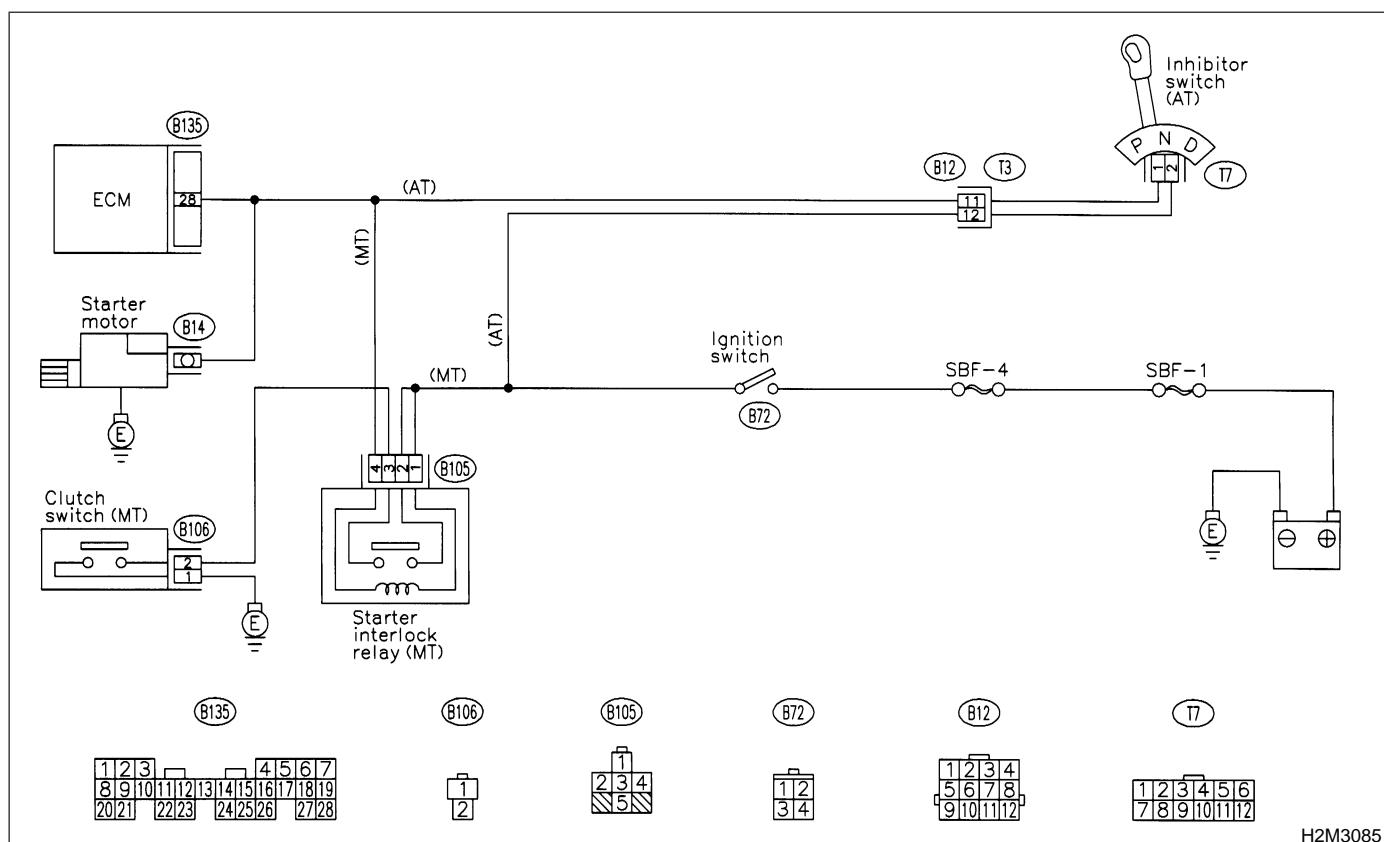

H2M3085

10BX1 : CHECK OPERATION OF STARTER MOTOR.

NOTE:

- On AT vehicles, place the inhibitor switch in each position.
- On MT vehicles, depress or release the clutch pedal.

- CHECK** : *Does starter motor operate when ignition switch to "ON"?*
- YES** : Repair battery short circuit in starter motor circuit. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Check starter motor circuit. <Ref. to 2-7 [T8B0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10BX1] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


BY: DTC P1121 — NEUTRAL POSITION SWITCH CIRCUIT HIGH INPUT [MT VEHICLES] —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

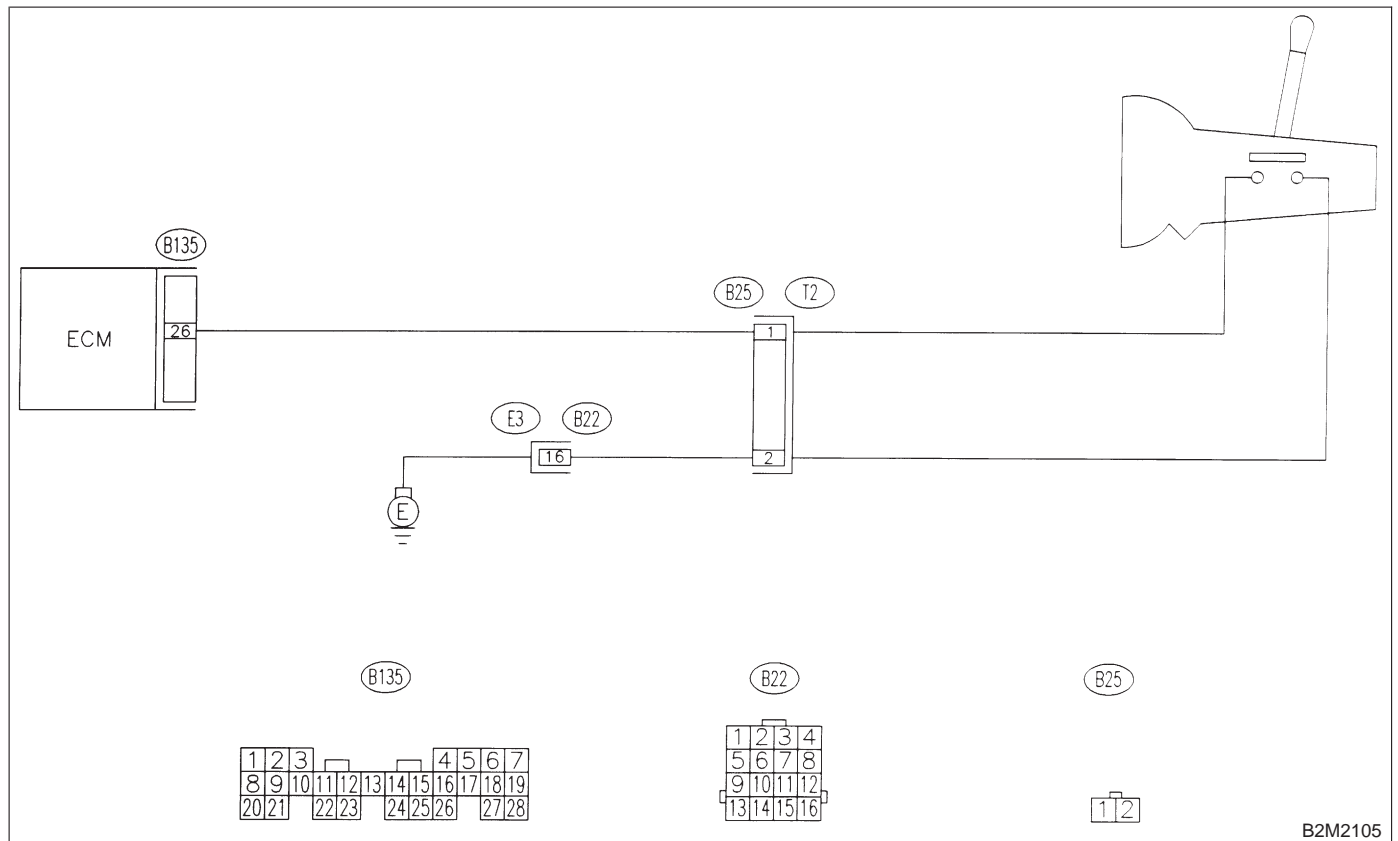


B2M2105

10BY1 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

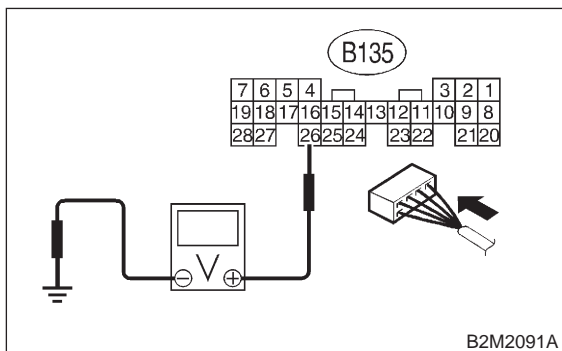


- CHECK** : *Is the voltage more than 10 V in neutral position?*
- YES** : Go to step 10BY2.
- NO** : Go to step 10BY4.

10BY2 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

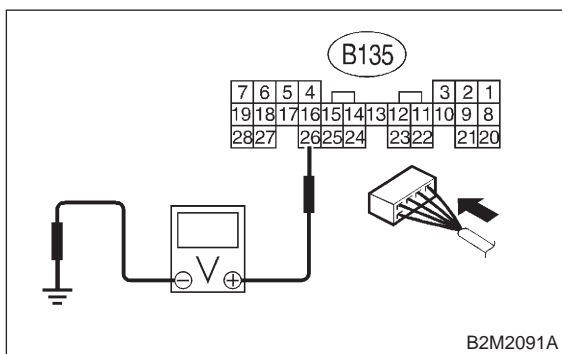

- CHECK** : *Is the voltage less than 1 V in other positions?*
- YES** : Go to step 10BY3.
- NO** : Go to step 10BY4.

10BY3 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>


- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Contact with SOA service.

NOTE:
 Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10BY4 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

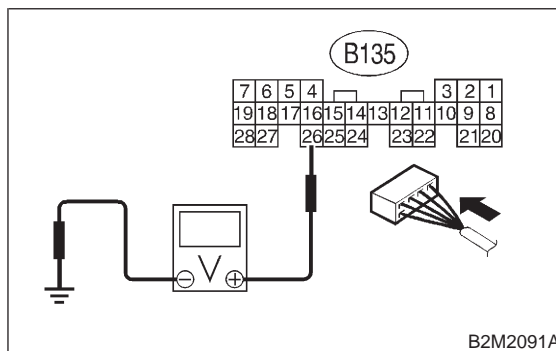

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Repair battery short circuit in harness between ECM and transmission harness connector.
- NO** : Go to step 10BY5.

2-7 [T10BY5]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10BY5 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal

(B135) No. 26 (+) — Chassis ground (-):

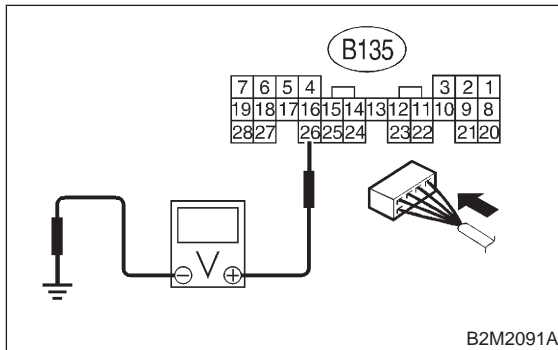


- CHECK** : *Is the voltage more than 10 V?*
- YES** : Repair battery short circuit in harness between ECM and transmission harness connector.
- NO** : Go to step 10BY6.

10BY6 : CHECK NEUTRAL POSITION SWITCH.

Measure resistance between transmission harness connector terminals.

Connector & terminal

(T2) No. 1 — No. 2:

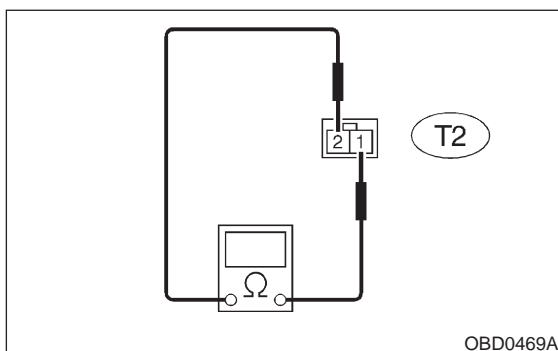


- CHECK** : *Is the resistance less than 1 Ω in other positions?*
- YES** : Go to step 10BY7.
- NO** : Repair open circuit in transmission harness or replace neutral position switch.

10BY7 : CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.

- 1) Disconnect connector from ECM.
- 2) Measure resistance of harness between ECM and transmission harness connector.

Connector & terminal

(B135) No. 26 — (B25) No. 1:

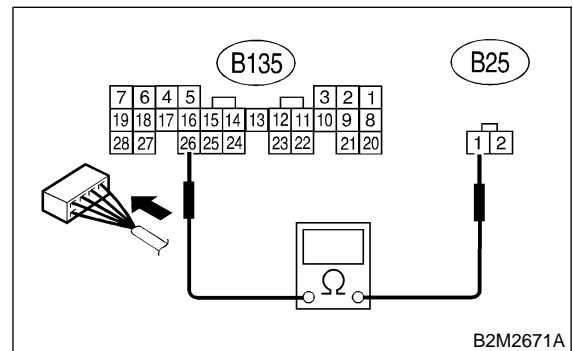


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Go to step 10BY8.
- NO** : Repair open circuit in harness between ECM and transmission harness connector.

10BY8 : CHECK HARNESS BETWEEN ECM AND NEUTRAL POSITION SWITCH CONNECTOR.

Measure resistance of harness between transmission harness connector and engine ground.

Connector & terminal
(B25) No. 2 — Engine ground:

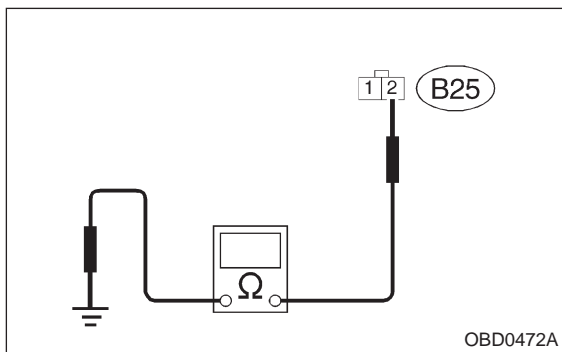

- CHECK** : *Is the resistance less than 5 Ω?*
- YES** : Go to step **10BY9**.
- NO** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between transmission harness connector and engine grounding terminal
- Poor contact in coupling connector (B22)

10BY9 : CHECK POOR CONTACT.

Check poor contact in transmission harness connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in transmission harness connector?*
- YES** : Repair poor contact in transmission harness connector.
- NO** : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.


BZ: DTC P1121 — NEUTRAL POSITION SWITCH CIRCUIT LOW INPUT [AT VEHICLES] —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

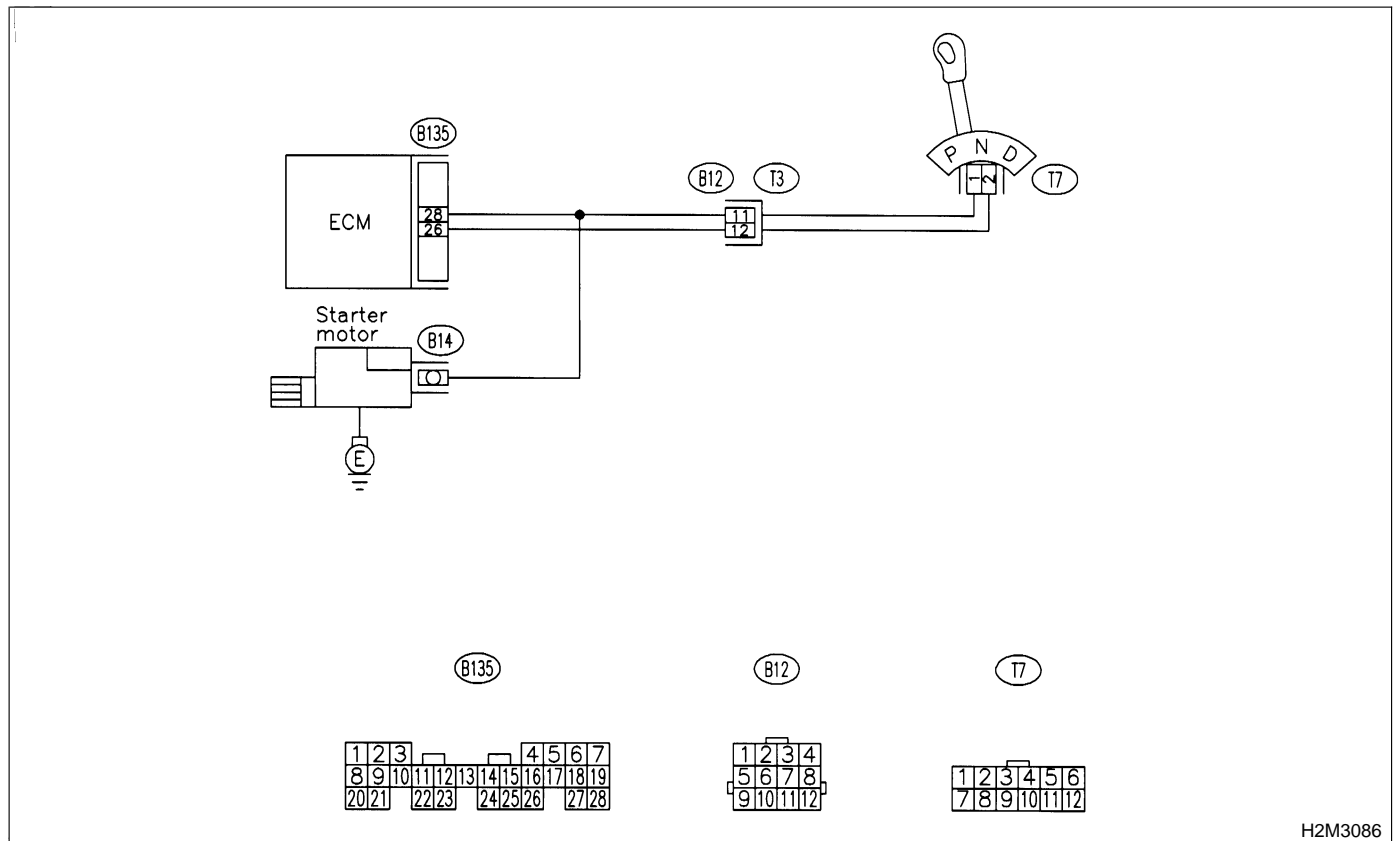


10BZ1 : CHECK DTC P0705 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0705?
- YES** : Inspect DTC P0705 using “10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles”. <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10BZ2**.

10BZ2 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 26 (+) — Chassis ground (-):

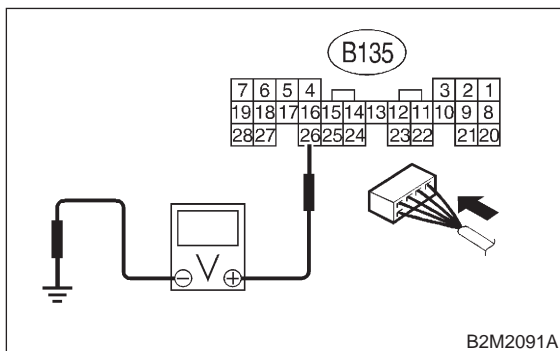


- CHECK** : *Is the voltage more than 10 V in other positions?*
- YES** : Even if MIL lights up, the circuit has returned to a normal condition at this time.
- NO** : Go to step **10BZ3**.

10BZ3 : CHECK HARNESS BETWEEN ECM AND TRANSMISSION HARNESS CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM and transmission harness connector.
- 3) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal
(B135) No. 26 — Chassis ground:

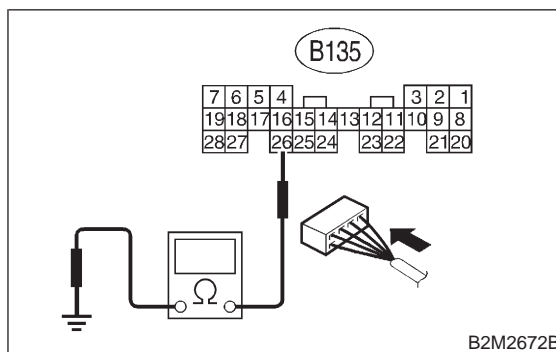

- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between ECM and transmission harness connector.
- NO** : Go to step **10BZ4**.

2-7 [T10BZ4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10BZ4 : CHECK TRANSMISSION HARNESS CONNECTOR.

- 1) Disconnect connector from inhibitor switch.
- 2) Measure resistance of harness between transmission harness connector and engine ground.

Connector & terminal

(T3) No. 12 — Engine ground:

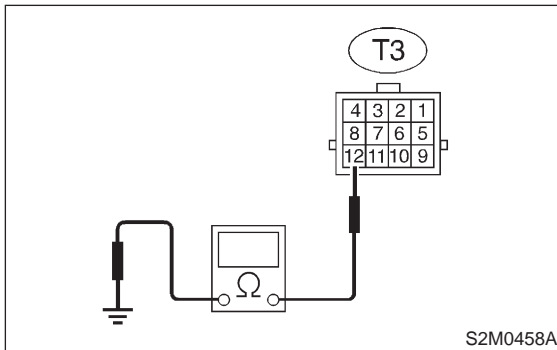

CHECK : *Is the resistance less than 10 Ω?*

YES : Repair ground short circuit in harness between transmission harness and inhibitor switch connector.


NO : Go to step **10BZ5**.

10BZ5 : CHECK INHIBITOR SWITCH.

Measure resistance between inhibitor switch connector receptacle's terminals in selector lever except for "N" position.

Terminals

No. 1 — No. 2:

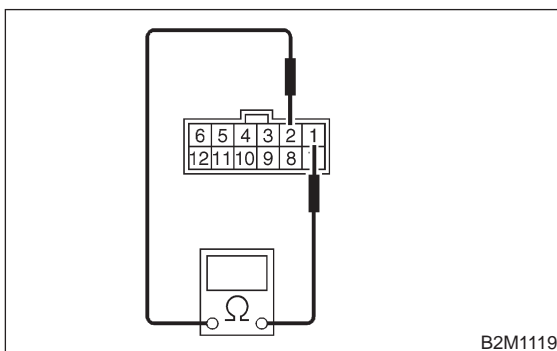

CHECK : *Is the resistance more than 1 MΩ in other positions?*

YES : Go to step **10BZ6**.

NO : Replace inhibitor switch. <Ref. to 3-2 [W2C0].>

10BZ6 : CHECK SELECTOR CABLE CONNECTION.

CHECK : *Is there any fault in selector cable connection to inhibitor switch?*

YES : Repair selector cable connection. <Ref. to 3-2 [W2A0].>

NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10BZ6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CA: DTC P1130 — FRONT OXYGEN (A/F) SENSOR CIRCUIT MALFUNCTION (OPEN CIRCUIT) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

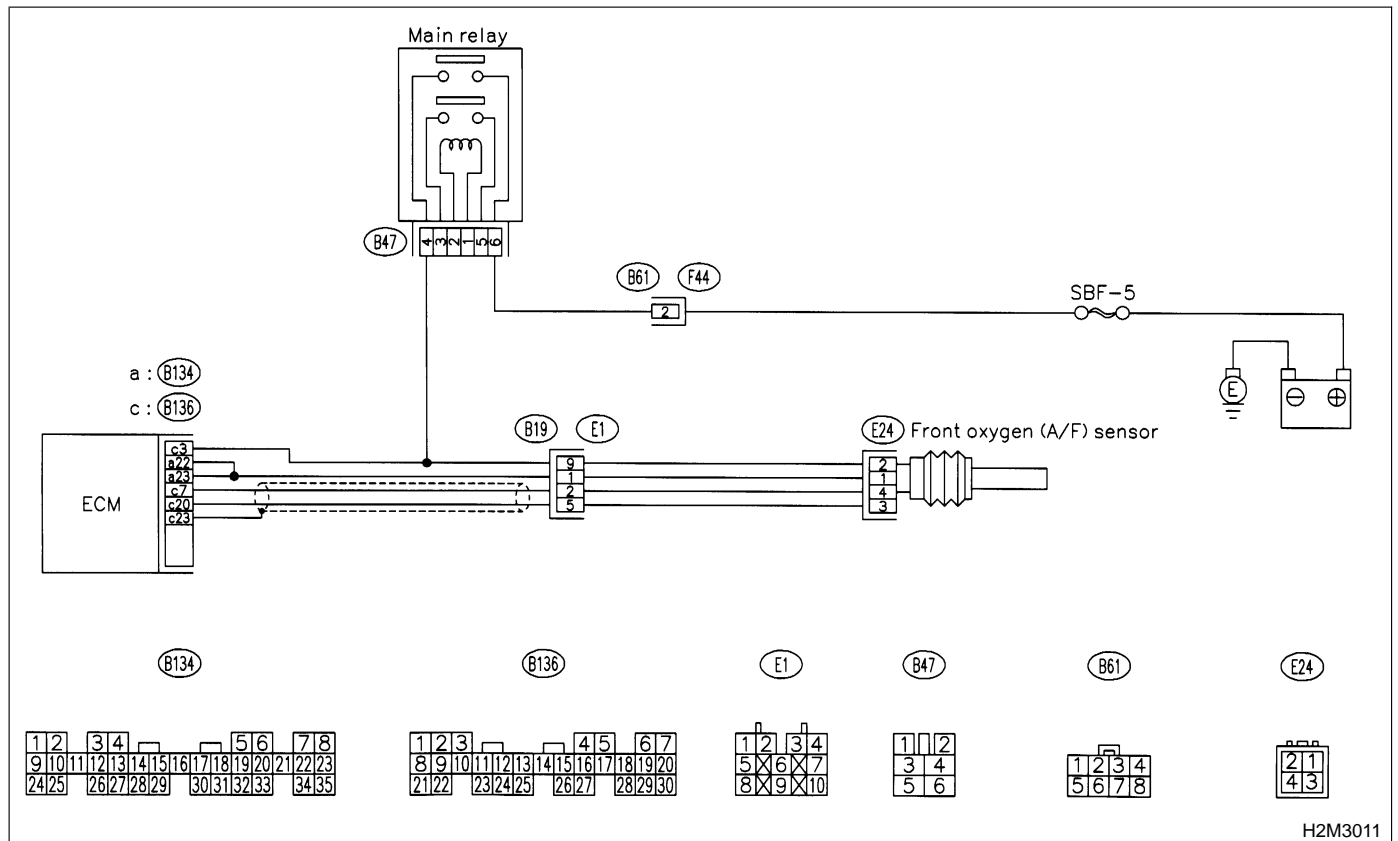


H2M3011

10CA1 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from ECM and front oxygen (A/F) sensor connector.
- 3) Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.

Connector & terminal
(B136) No. 7 — (E24) No. 4:

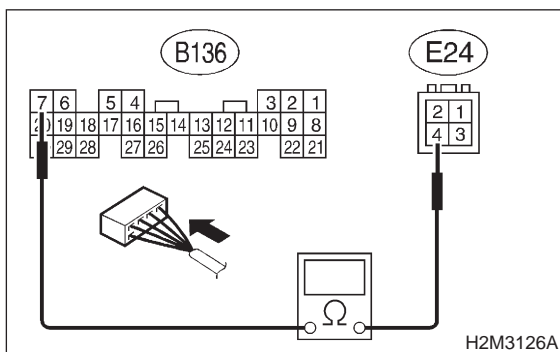

- CHECK** : Is the resistance less than 1 Ω?
YES : Go to step 10CA2.
NO : Repair harness and connector.

NOTE:


In this case, repair the following:

- Open circuit in harness between ECM and coupling connector (E1)
- Open circuit in harness between coupling connector (E1) and front oxygen (A/F) sensor connector
- Poor contact in front oxygen (A/F) sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (E1)

10CA2 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.

Connector & terminal
(B136) No. 20 — (E24) No. 3:

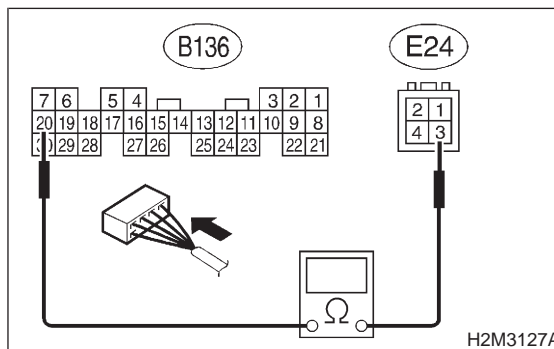

- CHECK** : Is the resistance less than 1 Ω?
YES : Go to step 10CA3.
NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and coupling connector (E1)
- Open circuit in harness between coupling connector (E1) and front oxygen (A/F) sensor connector
- Poor contact in front oxygen (A/F) sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (E1)

10CA3 : CHECK POOR CONTACT.

Check poor contact in front oxygen (A/F) sensor connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : Is there poor contact in front oxygen (A/F) sensor connector?
YES : Repair poor contact in front oxygen (A/F) sensor connector.
NO : Replace front oxygen (A/F) sensor. <Ref. to 2-7 [W7A0].>


CB: DTC P1131 — FRONT OXYGEN (A/F) SENSOR CIRCUIT MALFUNCTION (SHORT CIRCUIT) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

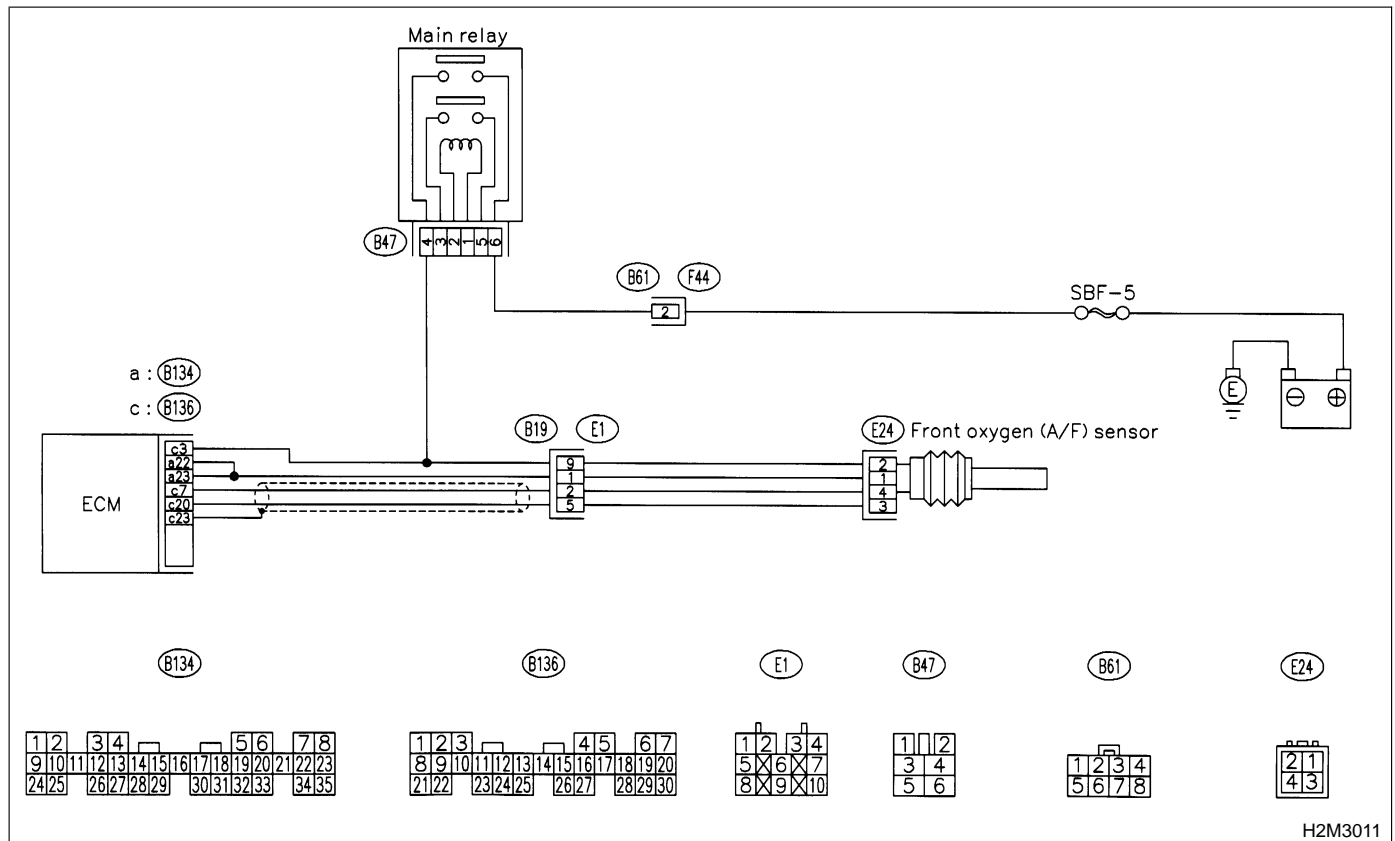

10CB1 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM.
- 3) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal
(B136) No. 7 — Chassis ground:

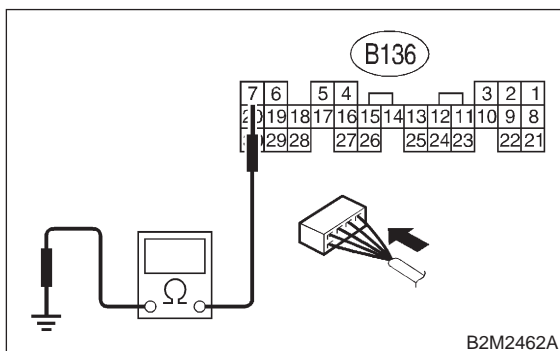


- CHECK** : Is the resistance more than 10 Ω?
- YES** : Go to step 10CB2.
- NO** : Repair ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.

10CB2 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal
(B136) No. 20 — Chassis ground:

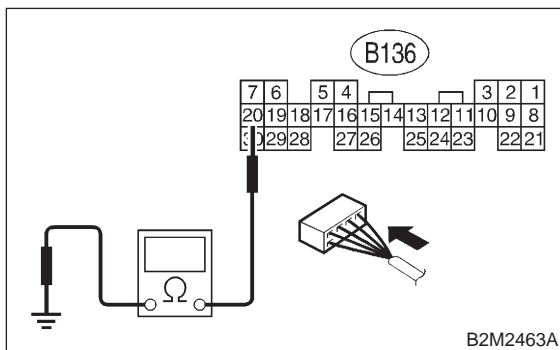


- CHECK** : Is the resistance more than 10 Ω?
- YES** : Go to step 10CB3.
- NO** : Repair ground short circuit in harness between ECM and front oxygen (A/F) sensor connector.

10CB3 : CHECK OUTPUT SIGNAL FOR ECM.

- 1) Connect connector to ECM.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B136) No. 7 (+) — Chassis ground (-):

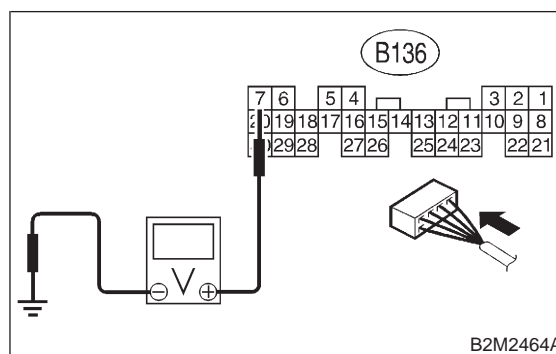


- CHECK** : Is the voltage more than 4.5 V?
- YES** : Go to step 10CB4.
- NO** : Go to step 10CB5.

10CB4 : CHECK OUTPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B136) No. 7 (+) — Chassis ground (-):

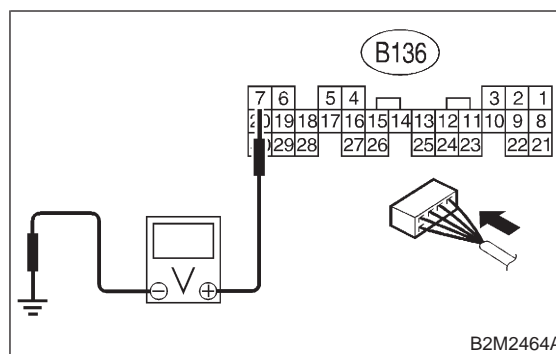


- CHECK** : Is the voltage more than 10 V?
- YES** : Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Repair poor contact in ECM connector.

10CB5 : CHECK OUTPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 20 (+) — Chassis ground (-):

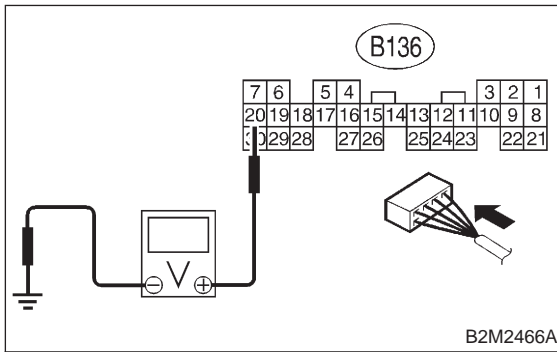


- CHECK** : **Is the voltage more than 4.95 V?**
- YES** : Go to step **10CB6**.
- NO** : Replace front oxygen (A/F) sensor. <Ref. to 2-7 [W7A0].>

10CB6 : CHECK OUTPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B136) No. 20 (+) — Chassis ground (-):

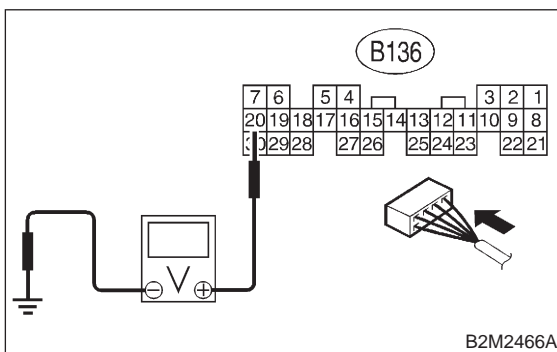

- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Repair poor contact in ECM connector.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CB6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CC: DTC P1132 — FRONT OXYGEN (A/F) SENSOR HEATER CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

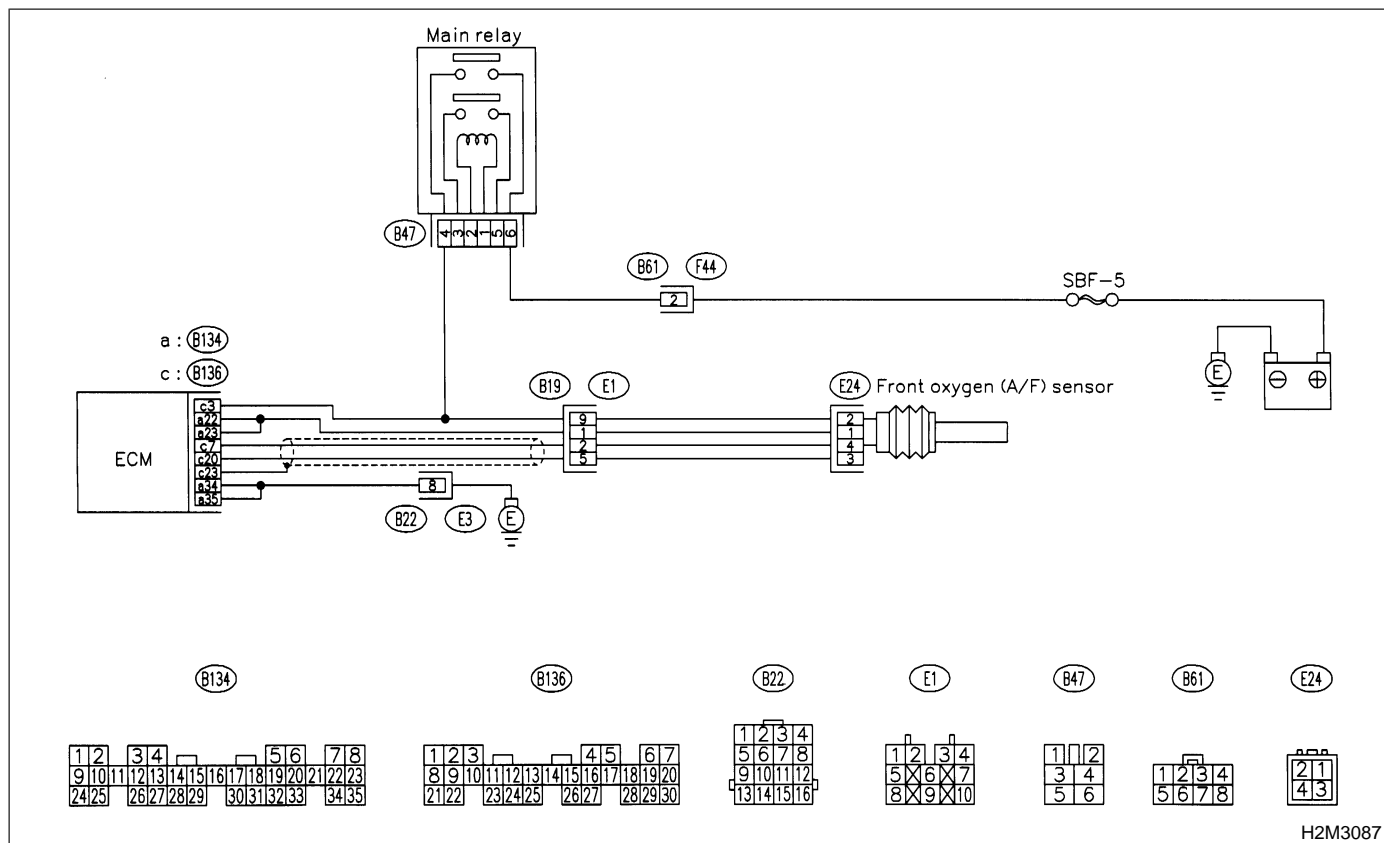

10CC1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1132 and P0141 at the same time?
- YES** : Go to step 10CC2.
- NO** : Go to step 10CC5.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CC4] 2-7


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CC2 : CHECK POWER SUPPLY CIRCUIT OF ECM.

- 1) Disconnect connectors from ECM.
- 2) Turn ignition switch to ON.
- 3) Measure power supply voltage between ECM connector terminals.

Connector & terminal

(B136) No. 3 (+) — (B134) No. 34 (-):

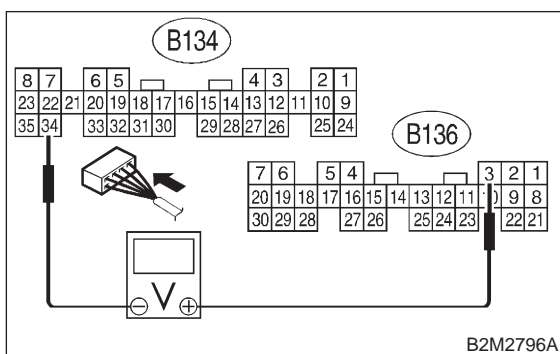


- CHECK** : Is the voltage more than 8 V?
- YES** : Go to step 10CC3.
- NO** : Repair open or ground short circuit in harness of power supply circuit.

10CC3 : CHECK POWER SUPPLY CIRCUIT OF ECM.

Measure power supply voltage between ECM connector terminals.

Connector & terminal

(B136) No. 3 (+) — (B136) No. 35 (-):

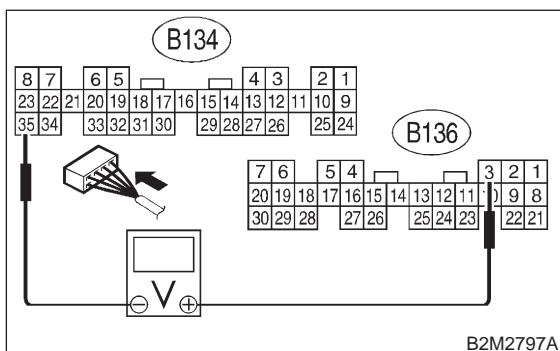


- CHECK** : Is the voltage more than 8 V?
- YES** : Go to step 10CC4.
- NO** : Repair open or ground short circuit in harness of power supply circuit.

10CC4 : CHECK GROUND CIRCUIT OF ECM.

Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal

(B134) No. 35 — Chassis ground:

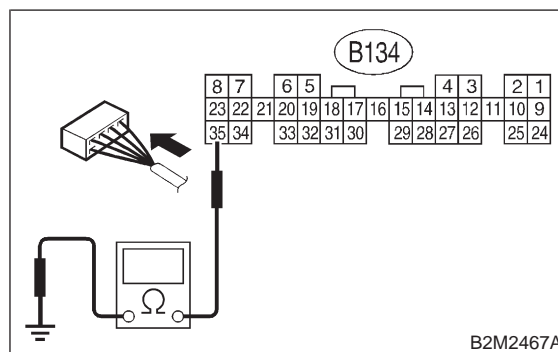

- CHECK** : Is the resistance less than 5 Ω?
- YES** : Go to step 10CC6.
- NO** : Go to step 10CC5.

10CC5 : CHECK GROUND CIRCUIT OF ECM.

1) Repair harness and connector.

NOTE:


In this case, repair the following:

- Open circuit in harness between ECM and engine ground terminal
- Poor contact in ECM connector
- Poor contact in coupling connector (B22)

2) Measure resistance of harness between ECM connector and chassis ground.

Connector & terminal

(B134) No. 34 — Chassis ground:

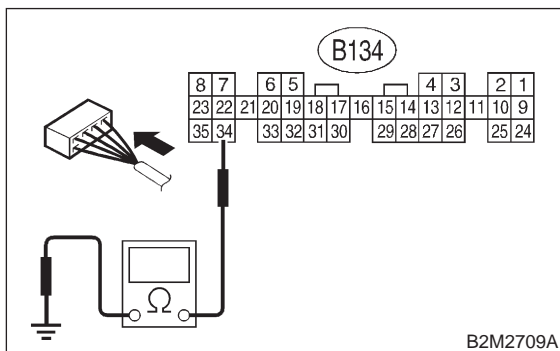

- CHECK** : *Is there resistance less than 5 Ω?*
- YES** : Go to step **10CC6**.
- NO** : Repair harness and connector.


NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and engine ground terminal
- Poor contact in ECM connector
- Poor contact in coupling connector (B22)

10CC6 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

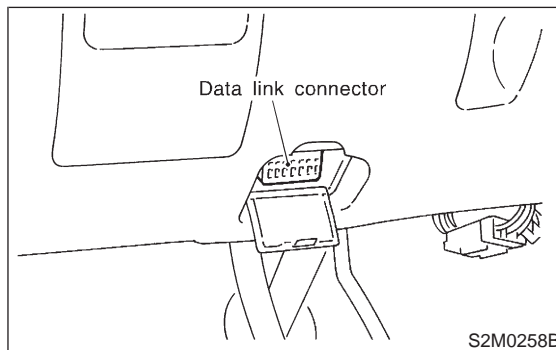

- 3) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 4) Start engine
- 5) Read data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II scan tool
For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value more than 0.2 A?*
- YES** : Repair poor contact in connector.

NOTE:


In this case, repair the following:

- Poor contact in front oxygen (A/F) sensor connector
 - Poor contact in ECM connector
- NO** : Go to step **10CC7**.

10CC7 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Start and idle the engine.
- 2) Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 22 (+) — Chassis ground (-):

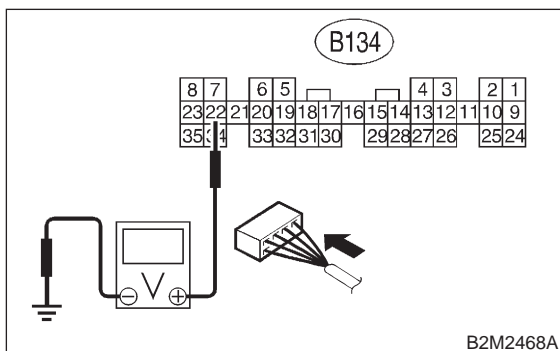


- CHECK** : *Is the voltage less than 1.0 V?*
- YES** : Go to step 10CC9.
- NO** : Go to step 10CC8.

10CC8 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 22 (+) — Chassis ground (-):

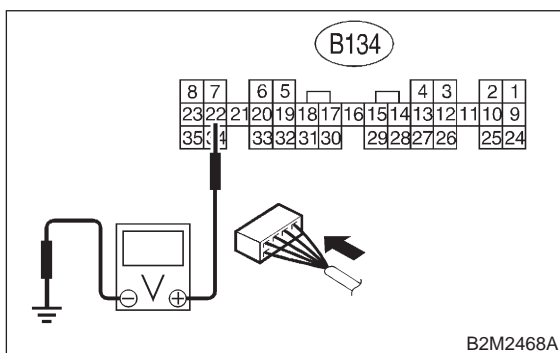


- CHECK** : *Does the voltage change less than 1.0 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10CC9.

10CC9 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 23 (+) — Chassis ground (-):

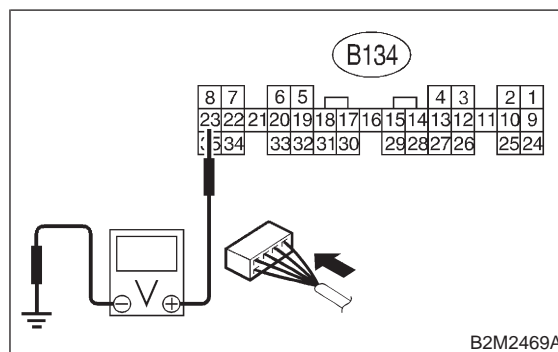


- CHECK** : *Is the voltage less than 1.0 V?*
- YES** : Go to step 10CC11.
- NO** : Go to step 10CC10.

10CC10 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 23 (+) — Chassis ground (-):

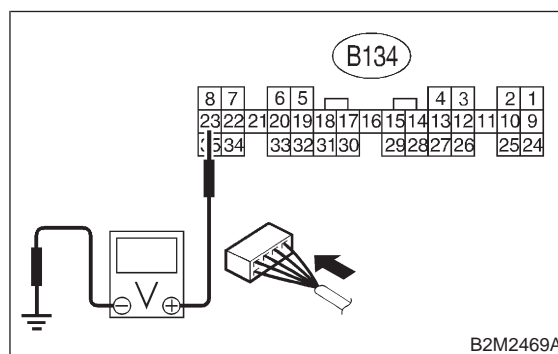


- CHECK** : *Does the voltage change less than 1.0 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10CC11.

10CC11 : CHECK POWER SUPPLY TO FRONT OXYGEN SENSOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from front oxygen sensor.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between front oxygen sensor connector and engine ground.

Connector & terminal

(E24) No. 2 (+) — Engine ground (-):

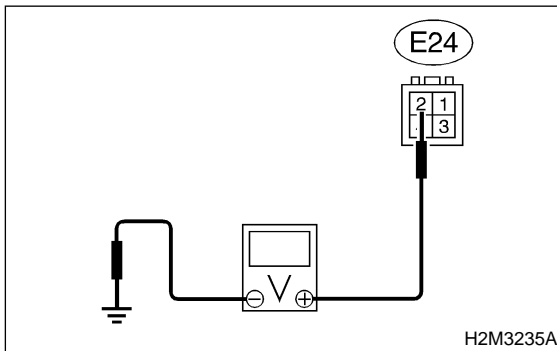

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **10CC12**.
- NO** : Repair power supply line.

NOTE:

In this case, repair the following:


- Open circuit in harness between main relay and coupling connector (E1)
- Open circuit in harness between coupling connector (E1) and front oxygen (A/F) sensor connector
- Poor contact in front oxygen sensor connector
- Poor contact in main relay connector
- Poor contact in coupling connector (E1)

10CC12 : CHECK FRONT OXYGEN SENSOR.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between front oxygen sensor connector terminals.

Terminals

No. 3 — No. 1:

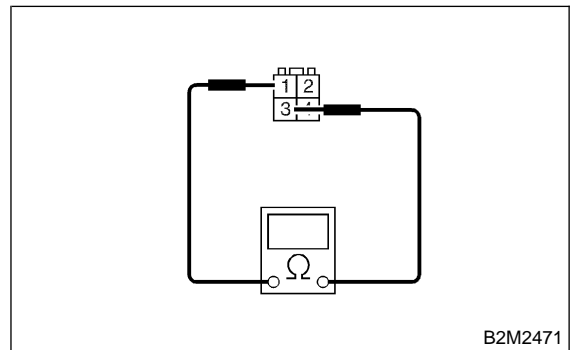

- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open or ground short circuit in harness between front oxygen (A/F) sensor and coupling connector (E1)
- Open or ground short circuit in harness between coupling connector (E1) and ECM connector
- Poor contact in front oxygen sensor connector
- Poor contact in ECM connector
- Poor contact in coupling connector (E1)
- NO** : Replace front oxygen (A/F) sensor. <Ref. to 2-7 [W7A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CC12] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CD: DTC P1133 — FRONT OXYGEN (A/F) SENSOR HEATER CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

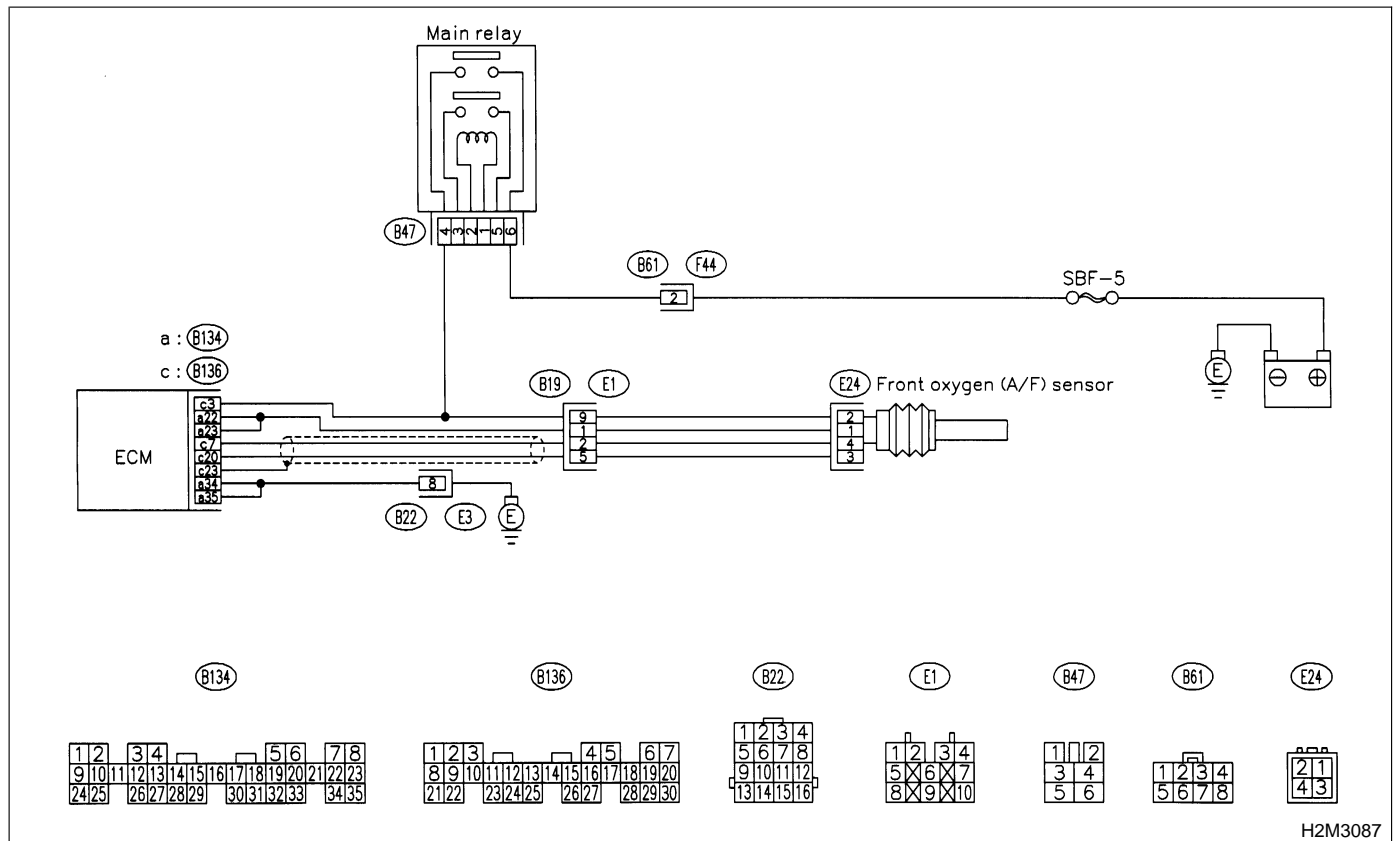

10CD1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 23 (+) — Chassis ground (-):

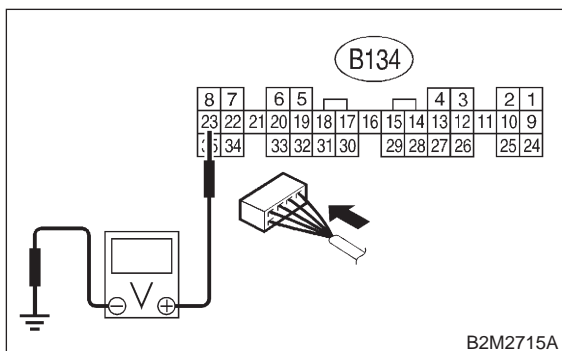


- CHECK** : *Is the voltage more than 8 V?*
- YES** : Go to step 10CD3.
- NO** : Go to step 10CD2.

10CD2 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM connector and chassis ground.


Connector & terminal
(B134) No. 22 (+) — Chassis ground (-):

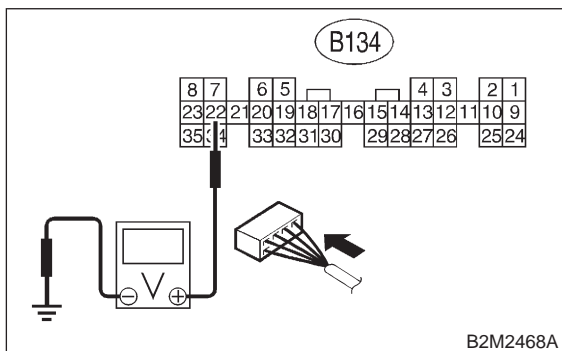

- CHECK** : *Is the voltage more than 8 V?*
- YES** : Go to step 10CD3.
- NO** : Go to step 10CD4.

10CD3 : CHECK FRONT OXYGEN (A/F) SENSOR HEATER CURRENT.

- 1) Turn ignition switch to OFF.
- 2) Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.
- 3) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

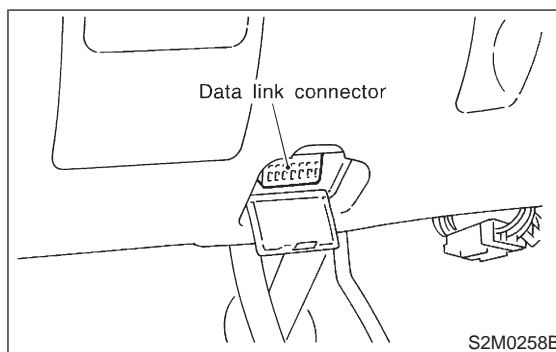

- 4) Turn ignition switch to ON and Subaru Select Monitor or OBD-II general scan tool switch to ON.
- 5) Read data of front oxygen (A/F) sensor heater current using Subaru Select Monitor or the OBD-II general scan tool.

NOTE:

- Subaru Select Monitor
 For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>
- OBD-II general scan tool
 For detailed operation procedure, refer to the OBD-II General Scan Tool Instruction Manual.

- CHECK** : *Is the value more than 2.3 A?*
- YES** : Replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : END

2-7 [T10CD4]


ON-BOARD DIAGNOSTICS II SYSTEM

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CD4 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 23 (+) — Chassis ground (-):

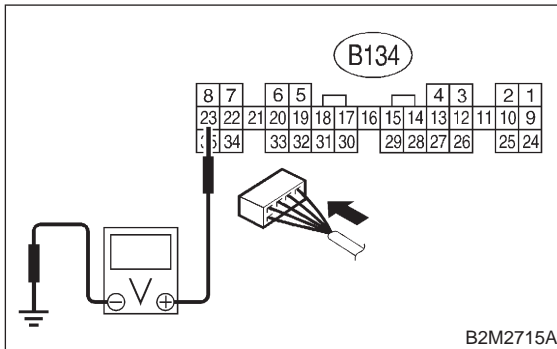


- CHECK** : Does the voltage change more than 8 V by shaking harness and connector of ECM while monitoring the value with voltage meter?
- YES** : Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.
- NO** : Go to step 10CD5.

10CD5 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 22 (+) — Chassis ground (-):

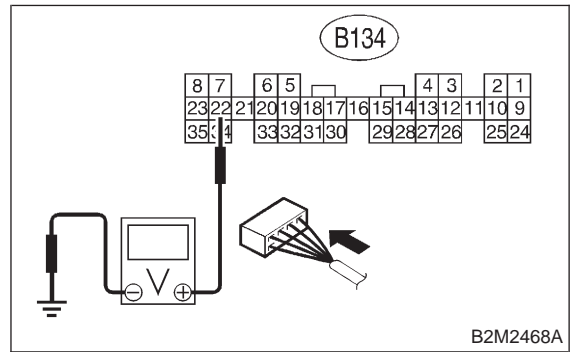

- CHECK** : Does the voltage change more than 8 V by shaking harness and connector of ECM while monitoring the value with voltage meter?
- YES** : Repair battery short circuit in harness between ECM and front oxygen (A/F) sensor connector.
- NO** : END


CE: DTC P1134 — FRONT OXYGEN (A/F) SENSOR MICRO-COMPUTER PROBLEM —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

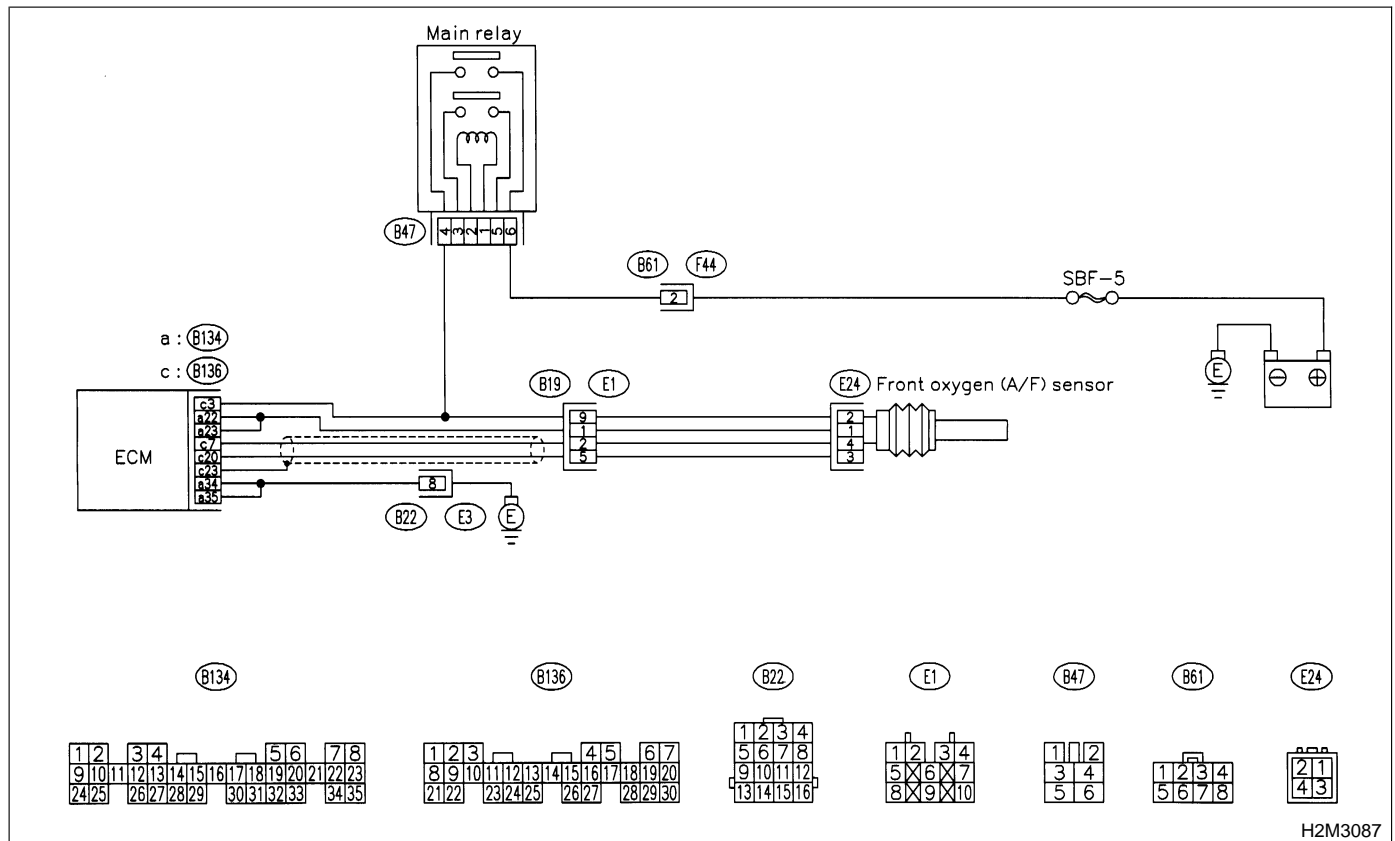

H2M3087

10CE1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1134?
- YES** : Replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : It is not necessary to inspect DTC P1134.


CF: DTC P1139 — FRONT OXYGEN (A/F) SENSOR #1 HEATER CIRCUIT RANGE/PERFORMANCE PROBLEM —

- DTC DETECTING CONDITION:
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● WIRING DIAGRAM:

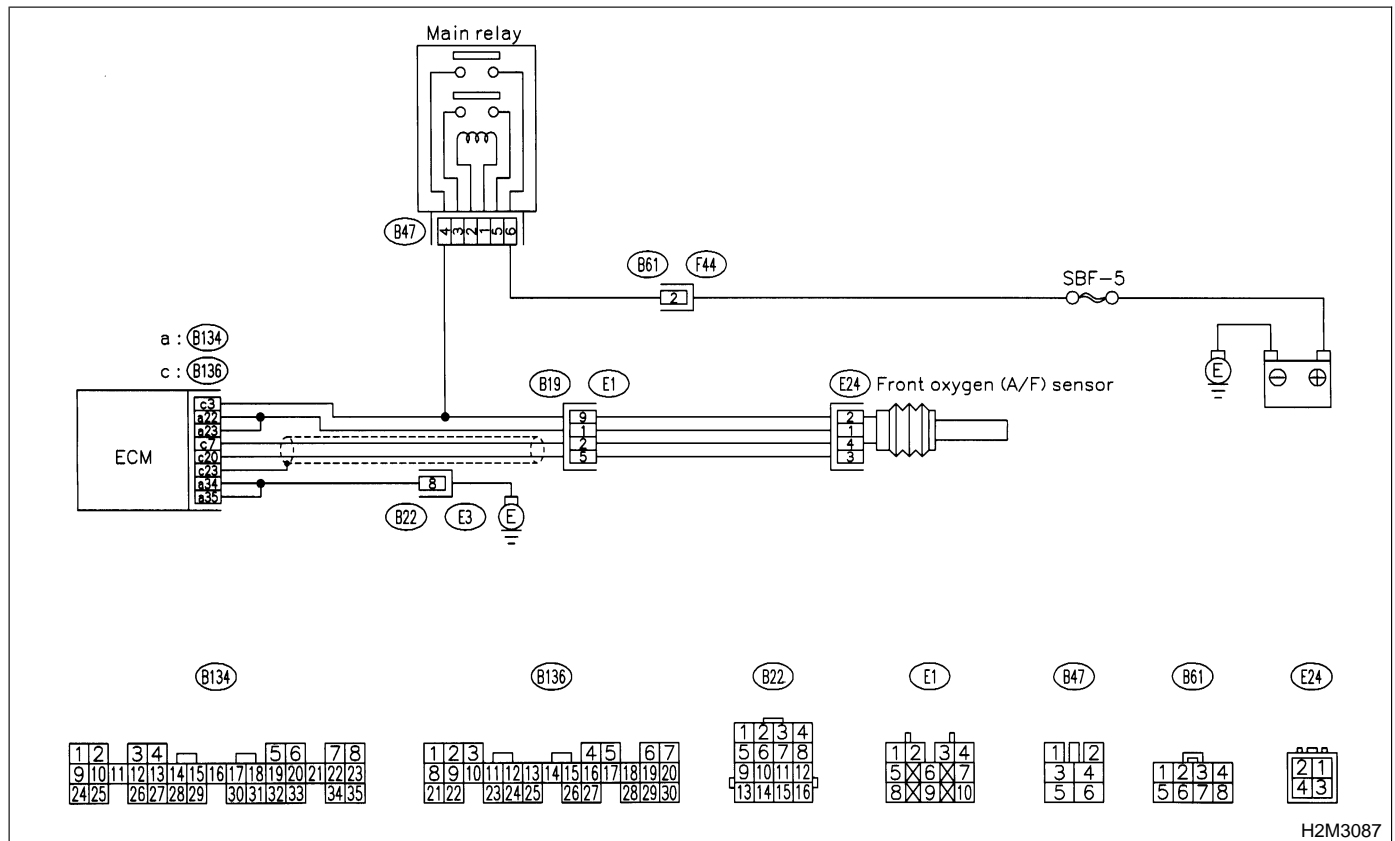


10CF1 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

- 1) Start engine, and warm-up the engine.
- 2) Turn ignition switch to OFF.
- 3) Disconnect connectors from ECM and front oxygen (A/F) sensor.
- 4) Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.

Connector & terminal

(B134) No. 22 — (E24) No. 1:

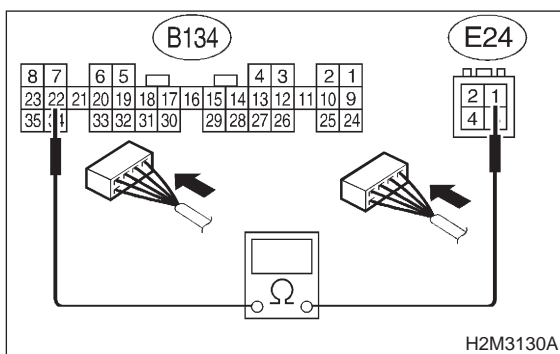


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10CF2.
- NO** : Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.

10CF2 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.

Connector & terminal

(B136) No. 7 — (E24) No. 4:

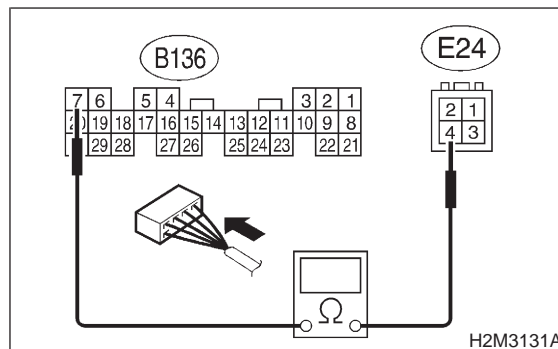


- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10CF3.
- NO** : Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.

10CF3 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.

Connector & terminal

(B136) No. 20 — (E24) No. 3:

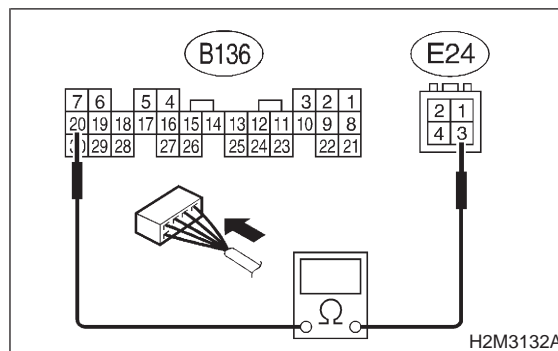

- CHECK** : Is the resistance less than 1 Ω?
- YES** : Go to step 10CF4.
- NO** : Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.

2-7 [T10CF4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CF4 : CHECK HARNESS BETWEEN ECM AND FRONT OXYGEN (A/F) SENSOR CONNECTOR.

Measure resistance of harness between ECM and front oxygen (A/F) sensor connector.

Connector & terminal

(B136) No. 3 — (E24) No. 2:

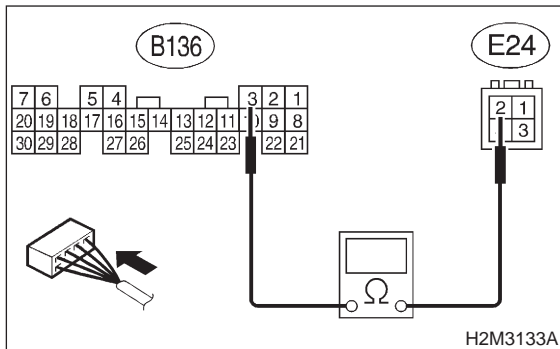

CHECK : *Is the resistance less than 1 Ω?*

YES : Go to step **10CF5**.


NO : Repair open circuit in harness between ECM and front oxygen (A/F) sensor connector.

10CF5 : CHECK FRONT OXYGEN (A/F) SENSOR.

Measure resistance between front oxygen (A/F) sensor connector terminals.

Terminals

No. 3 — No. 1:

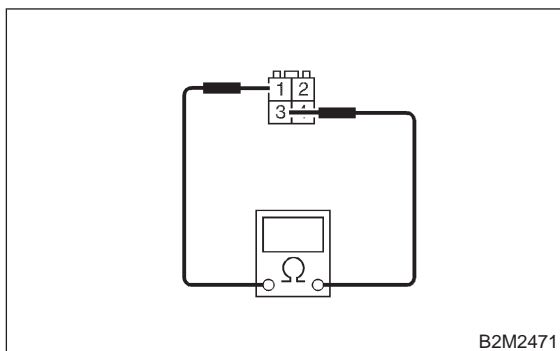

CHECK : *Is the resistance less than 5 Ω?*

YES : Go to step **10CF6**.

NO : Replace front oxygen (A/F) sensor. <Ref. to 2-7 [W7A0].>

10CF6 : CHECK POOR CONTACT.

Check poor contact in ECM and front oxygen (A/F) sensor connector. <Ref. to FOREWORD [T3C1].>

CHECK : *Is there poor contact in ECM or front oxygen (A/F) sensor connector?*

YES : Repair poor contact in ECM or front oxygen (A/F) sensor connector.

NO : Replace front oxygen (A/F) sensor. <Ref. to 2-7 [W7A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CF6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CG: DTC P1142 — THROTTLE POSITION SENSOR CIRCUIT RANGE/PERFORMANCE PROBLEM (LOW INPUT) —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Poor driving performance

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>.

● **WIRING DIAGRAM:**

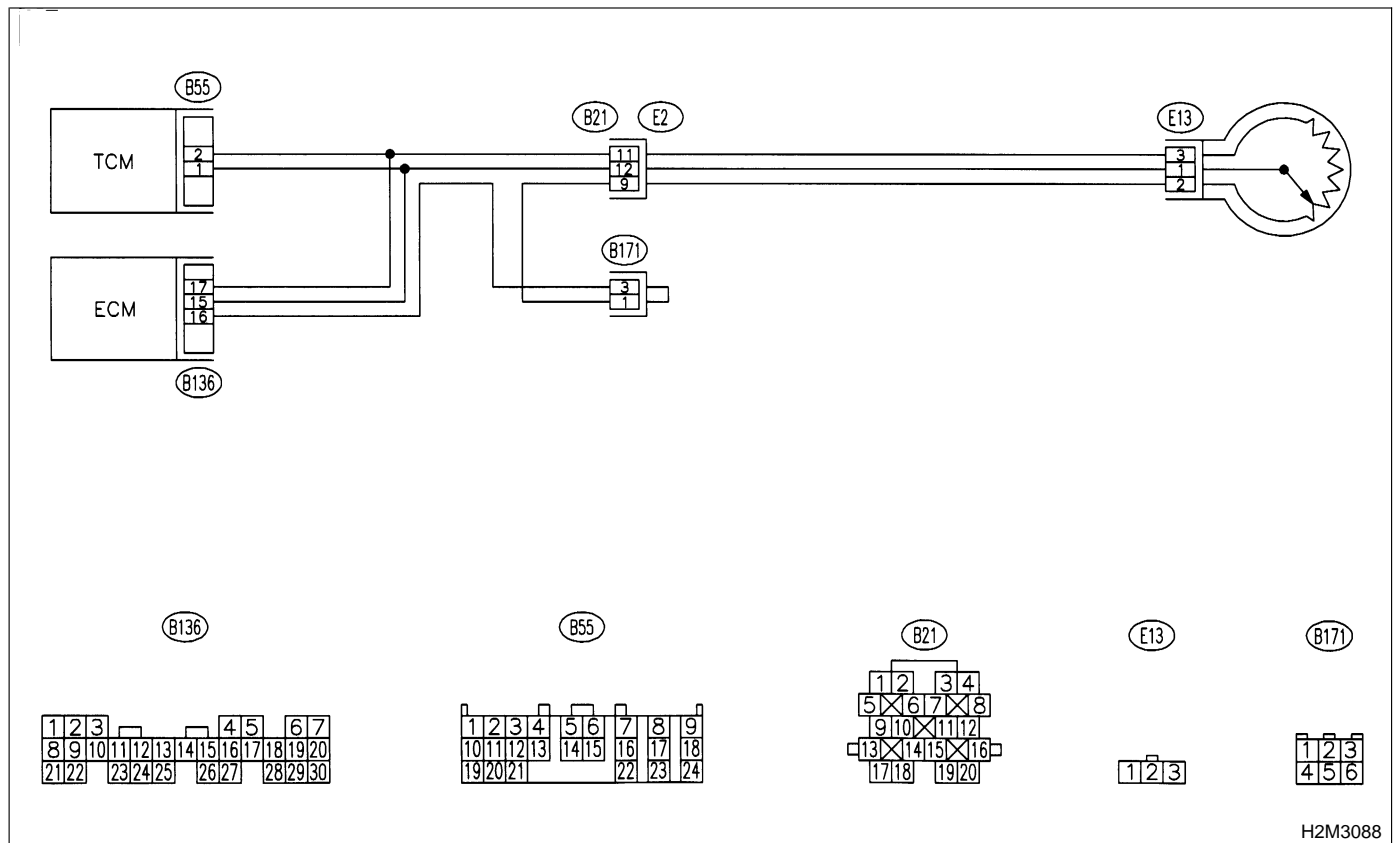

H2M3088

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CG2] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CG1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0106, P0107, P0108, P0122 or P0123?

YES : Inspect DTC P0106, P0107, P0108, P0122 or P0123 using "12. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>


NOTE:

In this case, it is not necessary to inspect DTC P1142.

NO : Go to step 10CG2.

10CG2 : CONNECT SUBARU SELECT MONITOR OR THE OBD-II GENERAL SCAN TOOL, AND READ DATA.

- 1) Turn ignition switch to OFF.
- 2) Connect Subaru Select Monitor or the OBD-II general scan tool to data link connector.

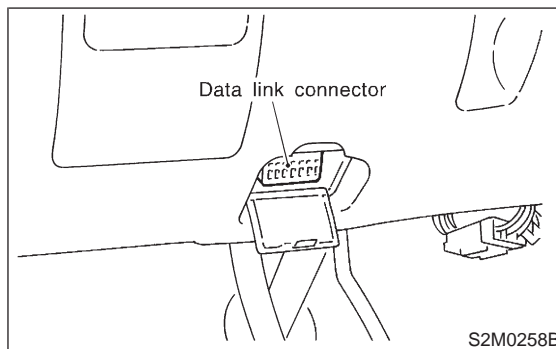

- 3) Turn ignition switch to ON and Subaru Select Monitor or the OBD-II general scan tool switch to ON.
- 4) Start engine.
- 5) Read the data of intake manifold absolute pressure signal using Subaru Select Monitor or OBD-II general scan tool.

NOTE:

- Subaru Select Monitor

For detailed operation procedure, refer to the "READ CURRENT DATA SHOWN ON DISPLAY FOR ENGINE". <Ref. to 2-7 [T3C4].>

- OBD-II general scan tool

For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.

CHECK : Is the value less than 0 kPa (0 mmHg, 0 inHg)?

YES : Replace intake manifold pressure sensor. <Ref. to 2-7 [W20A0].>

NO : Replace throttle position sensor. <Ref. to 2-7 [W9A1].>


CH: DTC P1151 — REAR OXYGEN SENSOR HEATER CIRCUIT HIGH INPUT

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

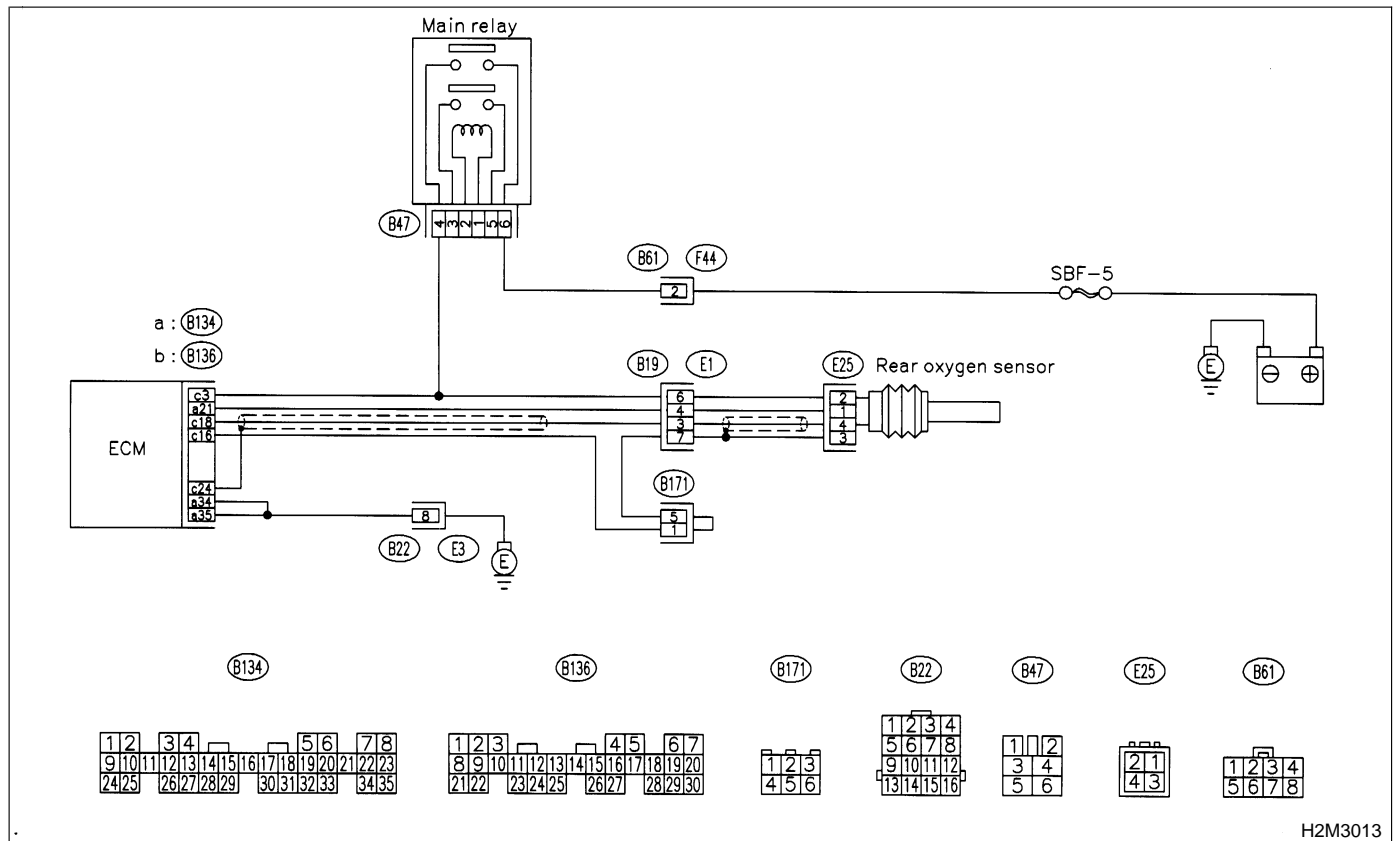


H2M3013

10CH1 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 21 (+) — Chassis ground (-):

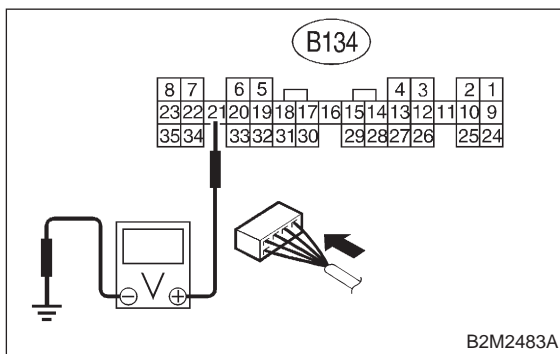

- CHECK** : Is the voltage more than 8 V?
- YES** : Go to step 10CH2.
- NO** : Go to step 10CH3.

10CH2 : CHECK DTC P1151 ON DISPLAY.


- 1) Turn ignition switch to OFF.
- 2) Repair battery short circuit in harness between ECM and rear oxygen sensor connector.
- 3) Operate the INSPECTION MODE. <Ref. to 2-7 [T3E1].>

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1151?
- YES** : Replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : END

10CH3 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 21 (+) — Chassis ground (-):

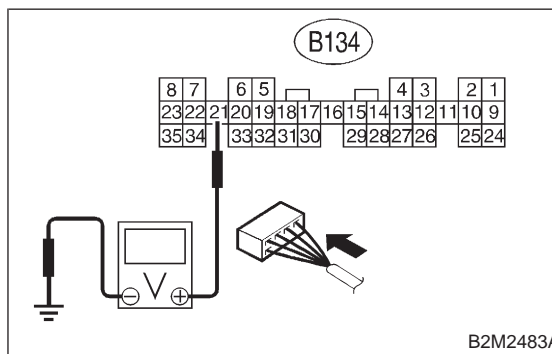


- CHECK** : Does the voltage change more than 8 V by shaking harness and connector of ECM while monitoring the value with voltage meter?
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10CH4.

10CH4 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B134) No. 21 (+) — Chassis ground (-):

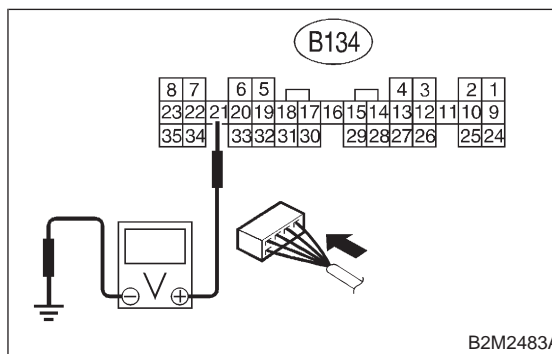

- CHECK** : Does the voltage change more than 8 V by shaking harness and connector of rear oxygen sensor while monitoring the value with voltage meter?
- YES** : Repair poor contact in rear oxygen sensor connector.
- NO** : Go to step 10CH5.

2-7 [T10CH5]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CH5 : CHECK INPUT SIGNAL FOR ECM.

Measure voltage between ECM connector and chassis ground.

Connector & terminal

(B134) No. 21 (+) — Chassis ground (-):

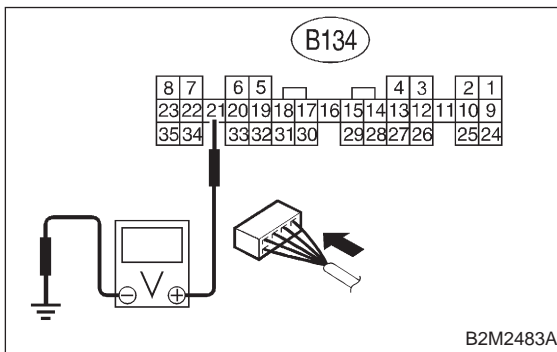

- CHECK** : Does the voltage change more than 8 V by shaking coupling connector (E1) while monitoring the value with voltage meter?
- YES** : Repair poor contact in coupling connector.
- NO** : Even if MIL lights up, the circuit has returned to normal condition at this time.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CH5] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CI: DTC P1400 — FUEL TANK PRESSURE CONTROL SOLENOID VALVE CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

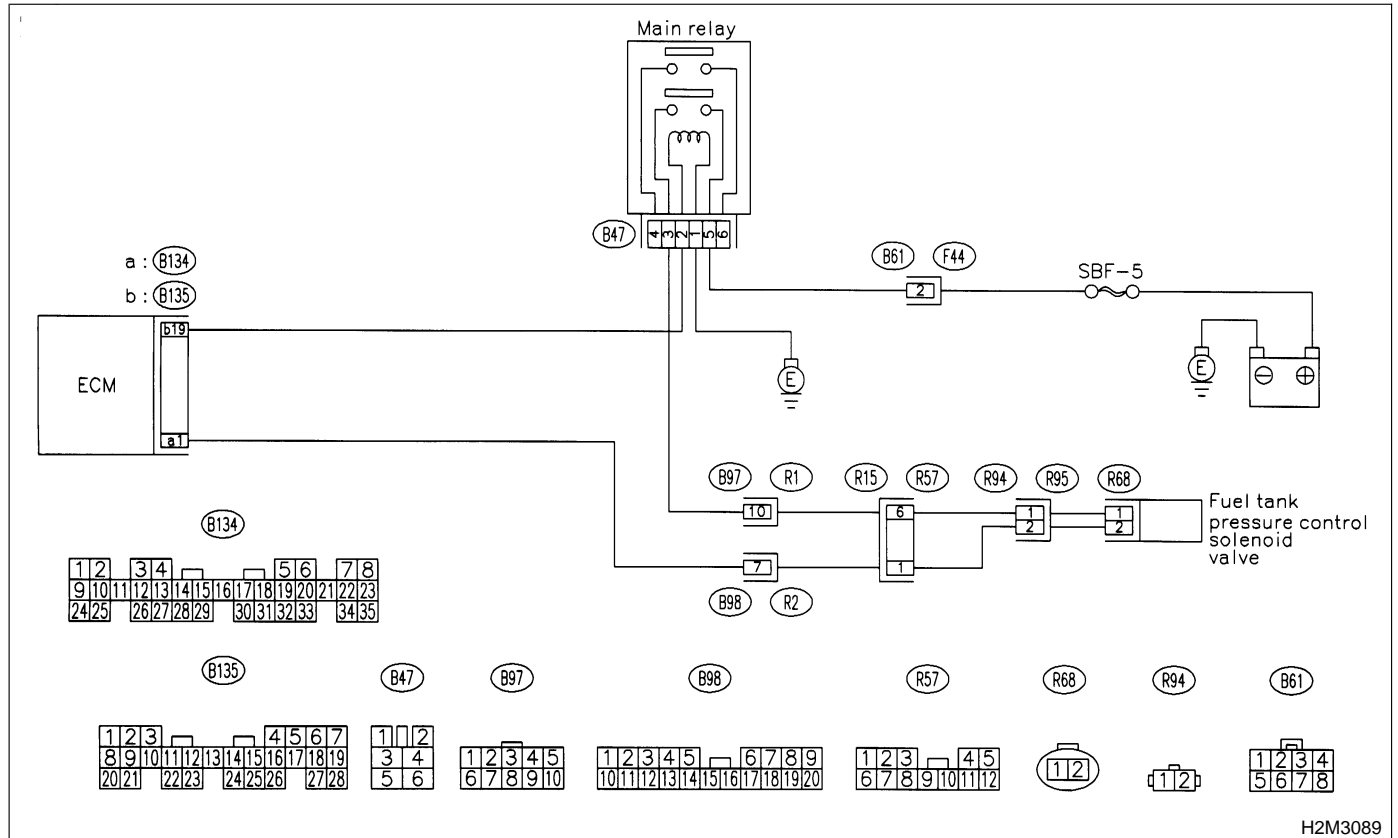

10CI1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B134) No. 1 (+) — Chassis ground (-):

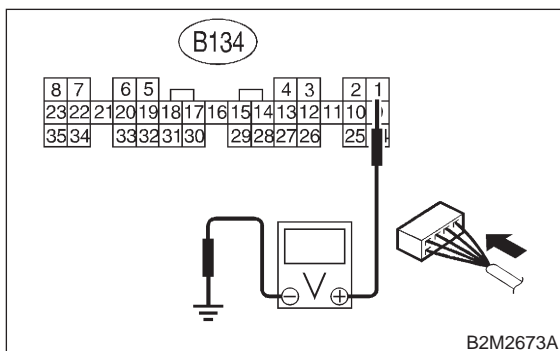

- CHECK** : *Is the voltage more than 10 V?*
- YES** : Go to step **10CI2**.
- NO** : Go to step **10CI3**.

10CI2 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Contact with SOA service.


NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10CI3 : CHECK HARNESS BETWEEN FUEL TANK PRESSURE CONTROL SOLENOID VALVE AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from fuel tank pressure control solenoid valve and ECM.
- 3) Measure resistance of harness between fuel tank pressure control solenoid valve connector and chassis ground.

Connector & terminal
(R68) No. 2 — Chassis ground:

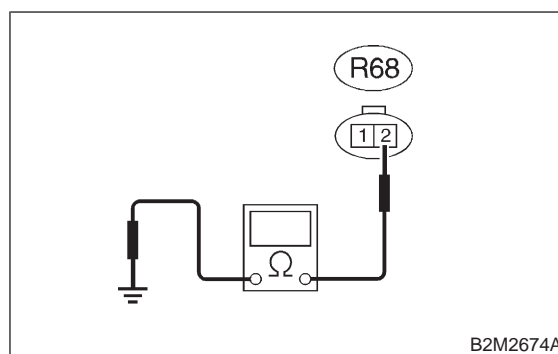

- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between ECM and fuel tank pressure control solenoid valve connector.
- NO** : Go to step **10CI4**.

2-7 [T10CI4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CI4 : CHECK HARNESS BETWEEN FUEL TANK PRESSURE CONTROL SOLENOID VALVE AND ECM CONNECTOR.

Measure resistance of harness between ECM and fuel tank pressure control solenoid valve connector.

Connector & terminal

(B134) No. 1 — (R68) No. 2:

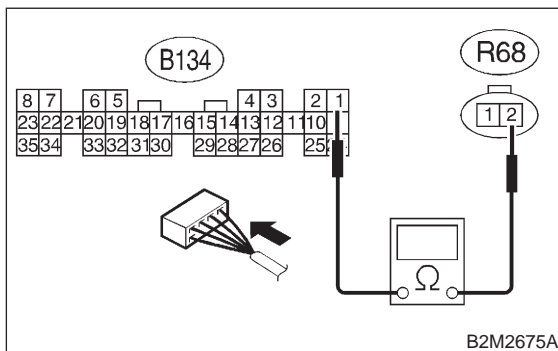

- CHECK** : Is the resistance less than 1 Ω?
YES : Go to step 10CI5.
NO : Repair harness and connector.

NOTE:

In this case, repair the following:


- Open circuit in harness between ECM and fuel tank pressure control solenoid valve connector
- Poor contact in coupling connectors (B98), (R94) and (R57)

10CI5 : CHECK FUEL TANK PRESSURE CONTROL SOLENOID VALVE.

Measure resistance between fuel tank pressure control solenoid valve terminals.

Terminals

No. 1 — No. 2:

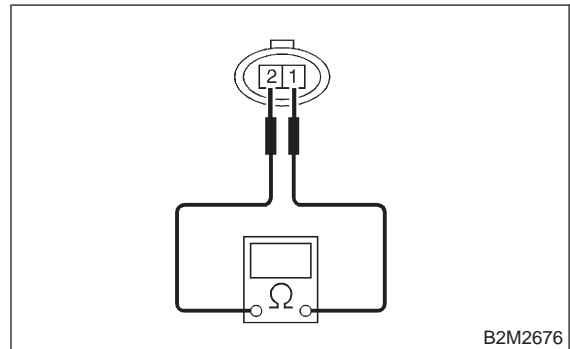


- CHECK** : Is the resistance between 10 and 100 Ω?
YES : Go to step 10CI6.
NO : Replace fuel tank pressure control solenoid valve. <Ref. to 2-1 [W6A0].>

10C16 : CHECK POWER SUPPLY TO FUEL TANK PRESSURE CONTROL SOLENOID VALVE.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between fuel tank pressure control solenoid valve and chassis ground.

Connector & terminal

(R68) No. 1 (+) — Chassis ground (-):

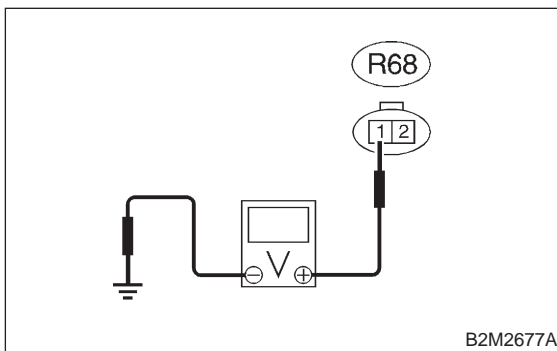

CHECK : *Is the voltage more than 10 V?*

YES : Go to step **10C17**.

NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between main relay and fuel tank pressure control solenoid valve connector
- Poor contact in coupling connectors (B97), (R94) and (R57)
- Poor contact in main relay connector

10C17 : CHECK POOR CONTACT.

Check poor contact in fuel tank pressure control solenoid valve connector. <Ref. to FOREWORD [T3C1].>

CHECK : *Is there poor contact in fuel tank pressure control solenoid valve connector?*

YES : Repair poor contact in fuel tank pressure control solenoid valve connector.

NO : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.


CJ: DTC P1420 — FUEL TANK PRESSURE CONTROL SOLENOID VALVE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:


After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

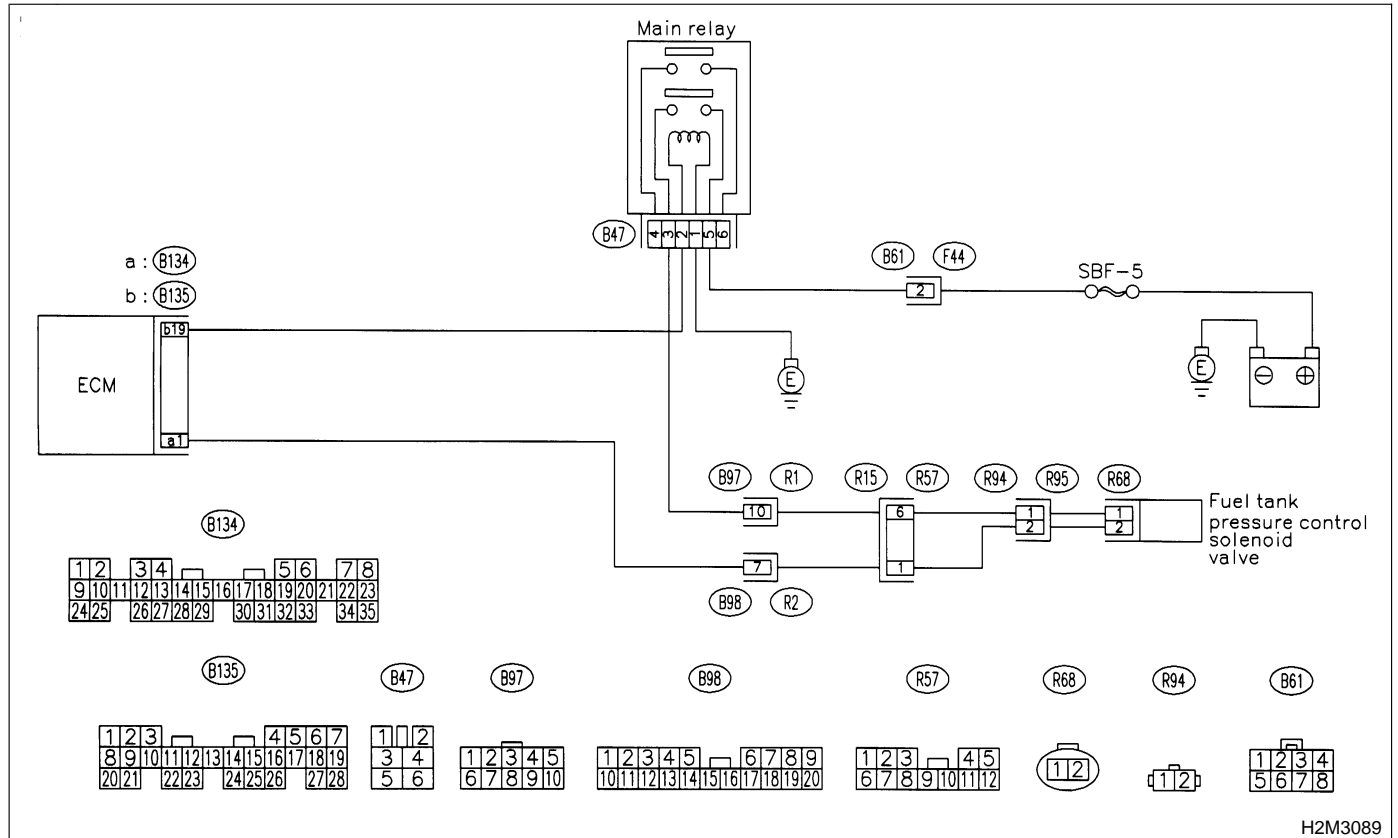

10CJ1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to OFF.
- 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

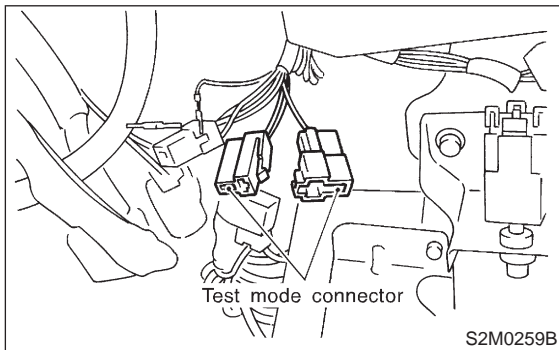


- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

NOTE:

Fuel tank pressure control solenoid valve operation check can be executed using Subaru Select Monitor. For procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

Connector & terminal

(B134) No. 1 (+) — Chassis ground (-):

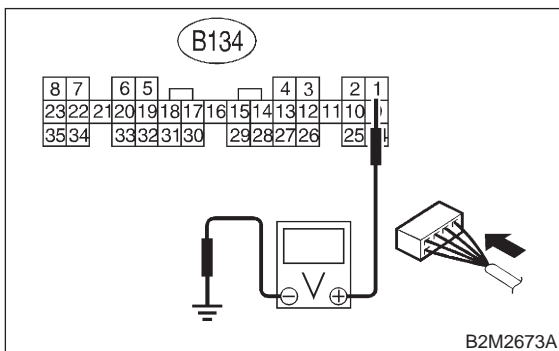

CHECK : Does voltage change between 0 and 10 volts?

YES : Go to step 10CJ2.


NO : Even if MIL light up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.

10CJ2 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 1 (+) — Chassis ground (-):

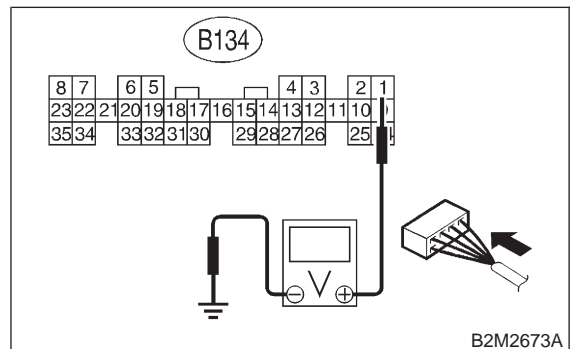

CHECK : Is the voltage more than 10 V?

YES : Go to step 10CJ4.

NO : Go to step 10CJ3.

10CJ3 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

CHECK : Is there poor contact in ECM connector?

YES : Repair poor contact in ECM connector.

NO : Replace ECM. <Ref. to 2-7 [W15A0].>

2-7 [T10CJ4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CJ4 : CHECK HARNESS BETWEEN FUEL TANK PRESSURE CONTROL SOLENOID VALVE AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from fuel tank pressure control solenoid valve.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 1 (+) — Chassis ground (-):

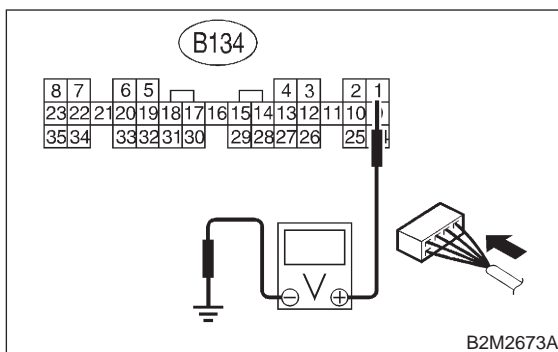


- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in harness between ECM and fuel tank pressure control solenoid valve connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10CJ5**.

10CJ5 : CHECK FUEL TANK PRESSURE CONTROL SOLENOID VALVE.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between fuel tank pressure control solenoid valve terminals.

Terminals

No. 1 — No. 2:

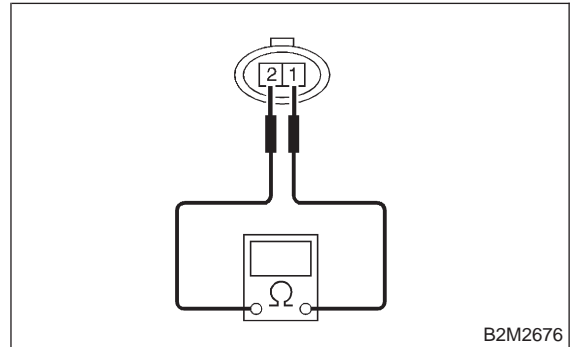

- CHECK** : **Is the resistance less than 1 Ω?**
- YES** : Replace fuel tank pressure control solenoid valve <Ref. to 2-1 [W7A0].> and ECM <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10CJ6**.

10CJ6 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : **Is there poor contact in ECM connector?**
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CJ6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CK: DTC P1422 — EVAPORATIVE EMISSION CONTROL SYSTEM PURGE CONTROL VALVE CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Erroneous idling

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

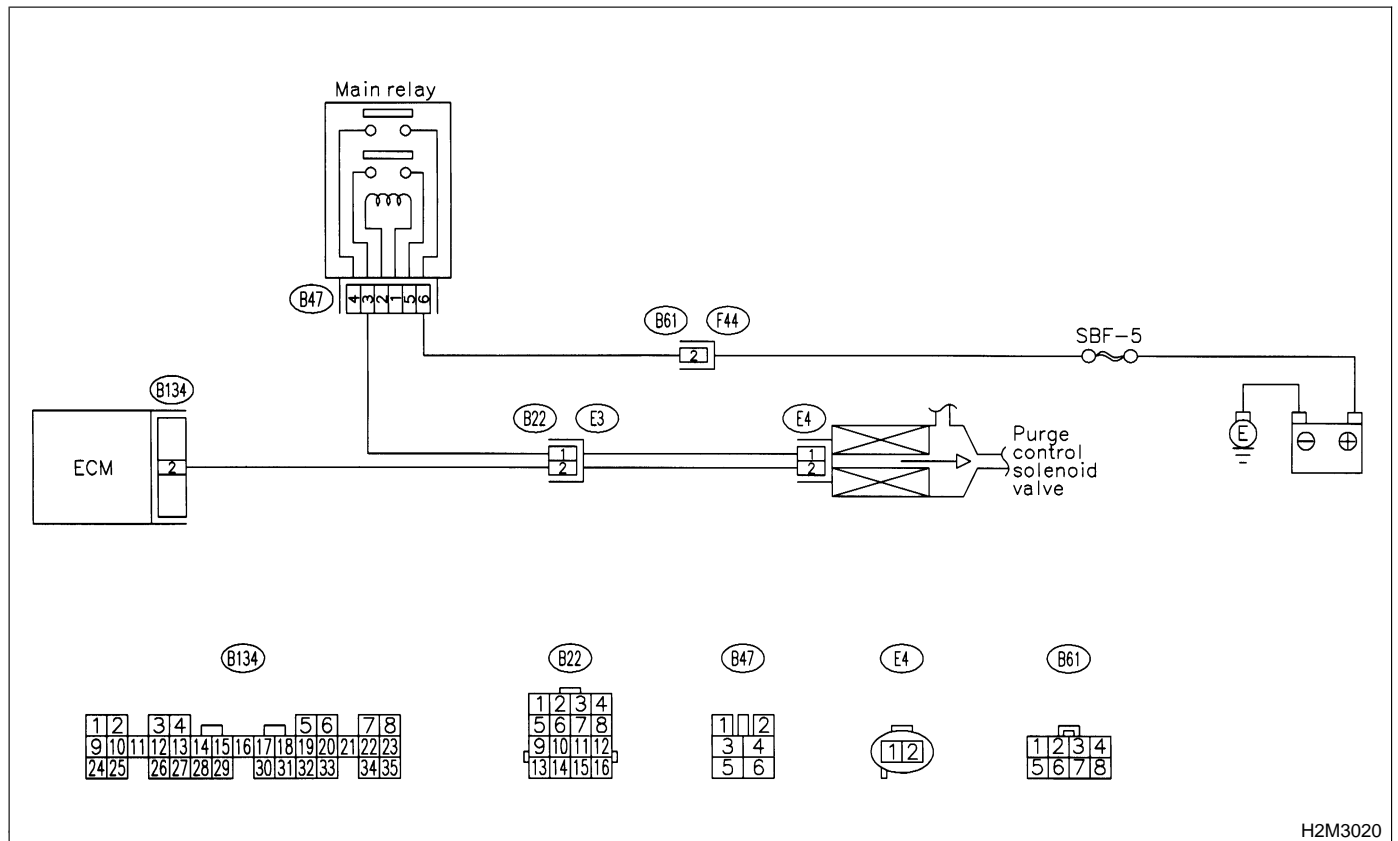

H2M3020

10CK1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to OFF.
- 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

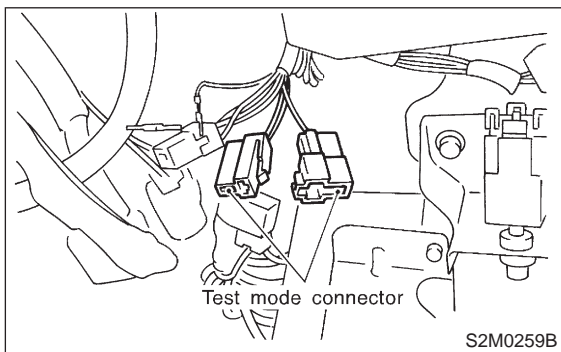


- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

NOTE:

Purge control solenoid valve operation check can be executed using Subaru Select Monitor. For procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

Connector & terminal

(B134) No. 2 (+) — Chassis ground (-):

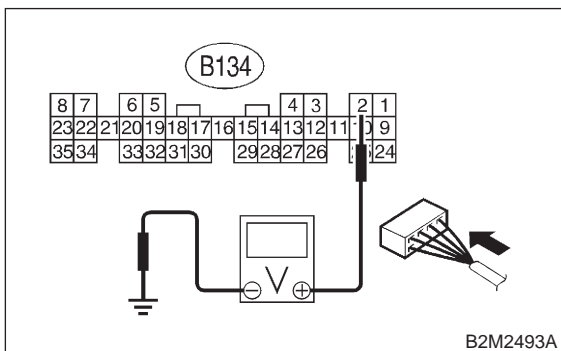


- CHECK** : Does voltage change between 0 and 10 volts?
- YES** : Go to step 10CK2.
- NO** : Even if MIL light up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.

10CK2 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 2 (+) — Chassis ground (-):

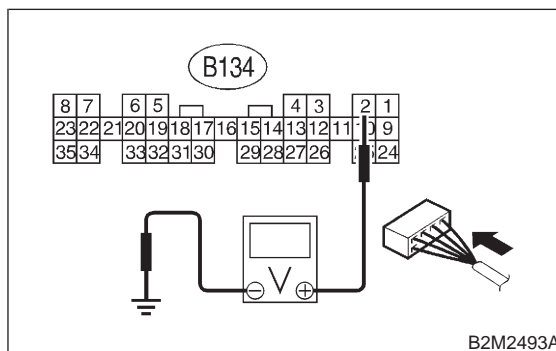

- CHECK** : Is the voltage more than 10 V?
- YES** : Go to step 10CK4.
- NO** : Go to step 10CK3.

10CK3 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : Is there poor contact in ECM connector?
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

2-7 [T10CK4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CK4 : CHECK HARNESS BETWEEN PURGE CONTROL SOLENOID VALVE AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from purge control solenoid valve.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 2 (+) — Chassis ground (-):

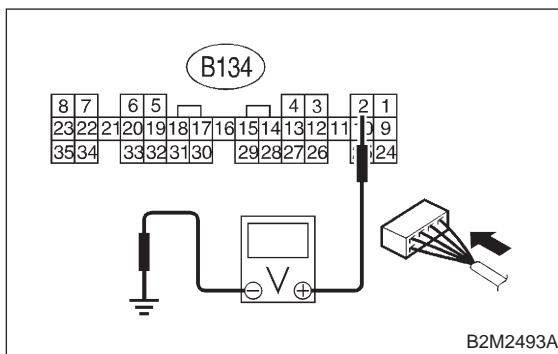


- CHECK** : *Is the voltage more than 10 V?*
- YES** : Repair battery short circuit in harness between ECM and purge control solenoid valve connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10CK5**.

10CK5 : CHECK PURGE CONTROL SOLENOID VALVE.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between purge control solenoid valve terminals.

Terminals

No. 1 — No. 2:

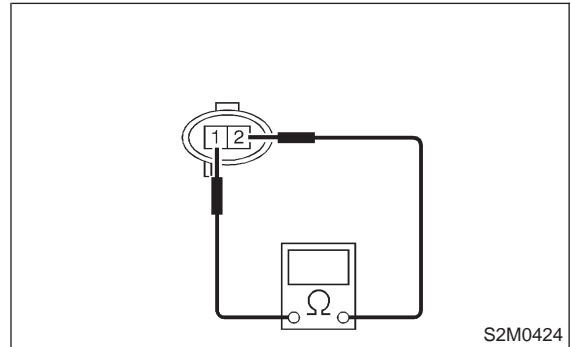

- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Replace purge control solenoid valve <Ref. to 2-1 [W4A0].> and ECM <Ref. to 2-7 [W15A0].>.
- NO** : Go to step **10CK6**.

10CK6 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CK6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CL: DTC P1423 — EVAPORATIVE EMISSION CONTROL SYSTEM VENT CONTROL HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

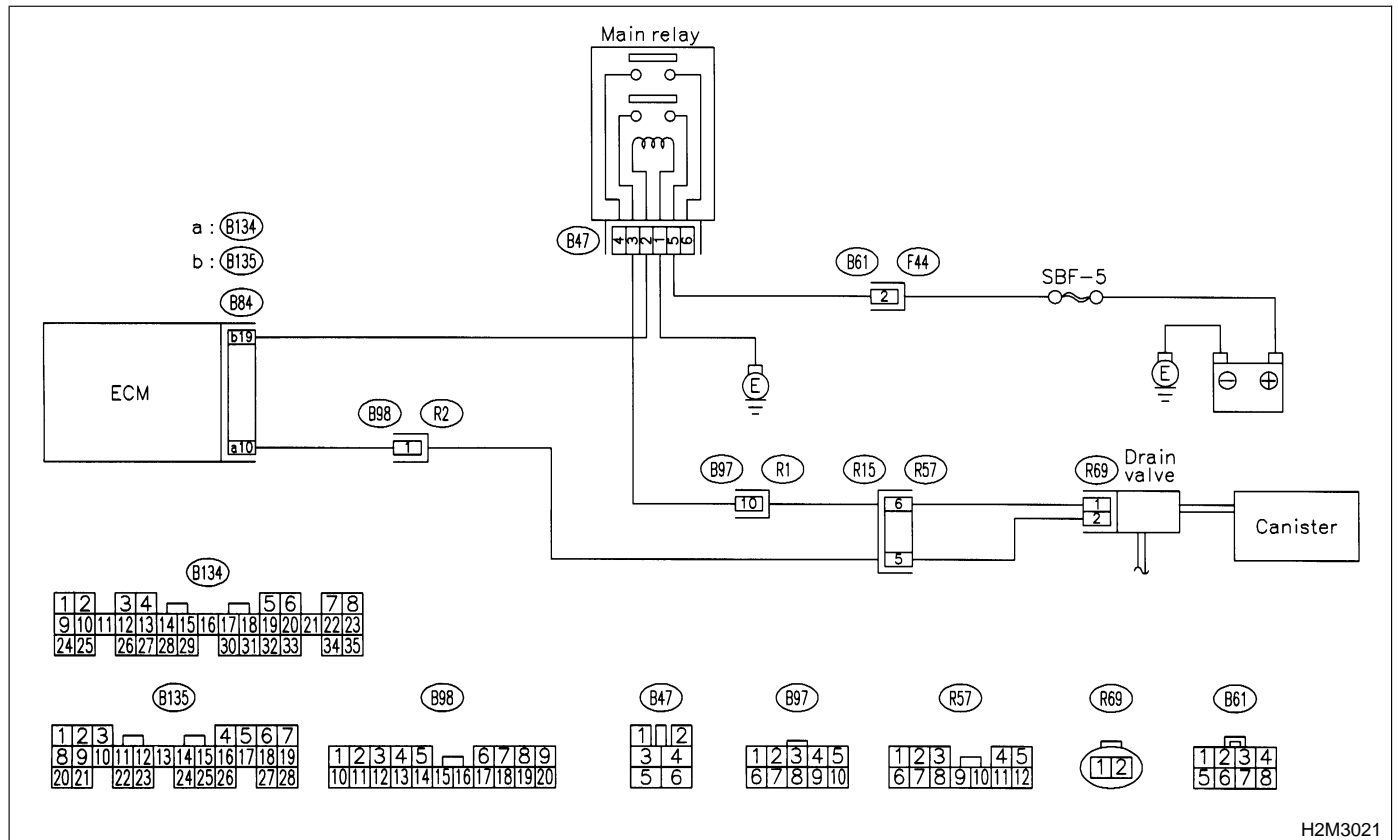

H2M3021

10CL1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to OFF.
- 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

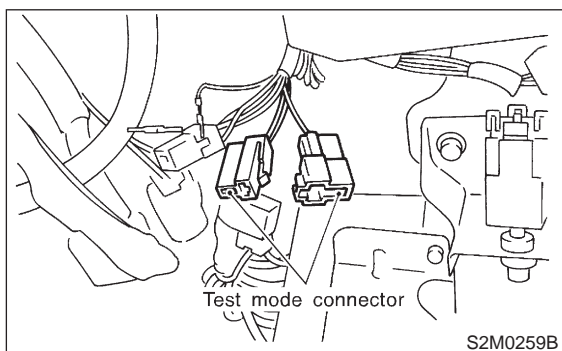


- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

NOTE:

Drain valve operation check can be executed using Subaru Select Monitor. For procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

Connector & terminal

(B134) No. 10 (+) — Chassis ground (-):

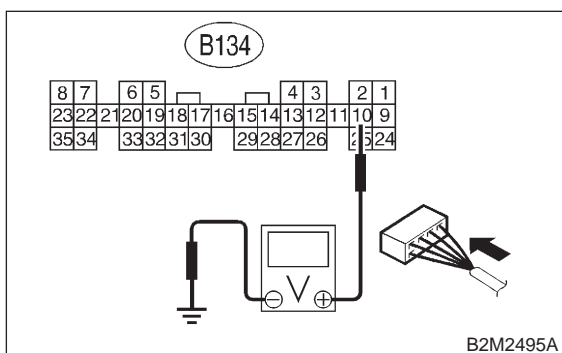


- CHECK** : Does voltage change between 0 and 10 volts?
- YES** : Go to step 10CL2.
- NO** : Even if MIL light up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.

10CL2 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 10 (+) — Chassis ground (-):

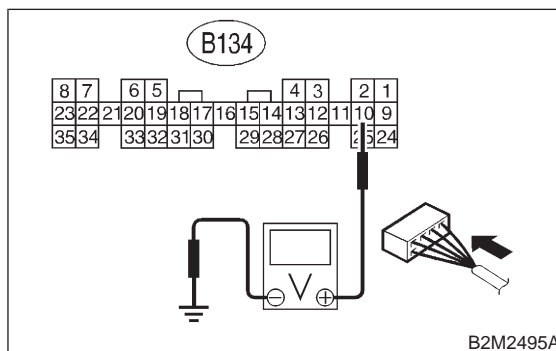

- CHECK** : Is the voltage more than 10 V?
- YES** : Go to step 10CL4.
- NO** : Go to step 10CL3.

10CL3 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : Is there poor contact in ECM connector?
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

2-7 [T10CL4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CL4 : CHECK HARNESS BETWEEN DRAIN VALVE AND ECM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from drain valve.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 10 (+) — Chassis ground (-):

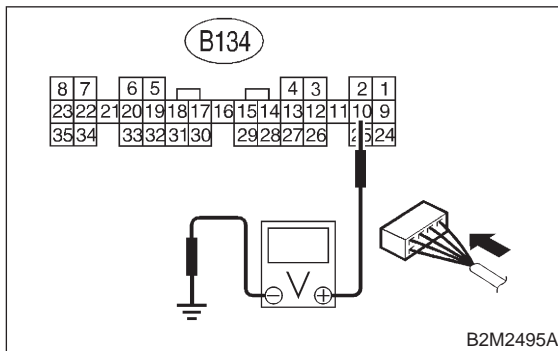


- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in harness between ECM and drain valve connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10CL5**.

10CL5 : CHECK DRAIN VALVE.

- 1) Turn ignition switch to OFF.
- 2) Measure resistance between drain valve terminals.

Terminals

No. 1 — No. 2:

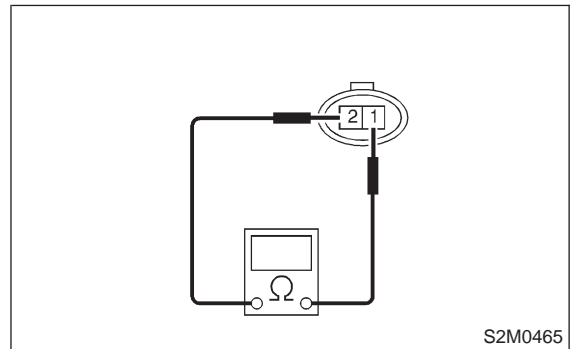

- CHECK** : **Is the resistance less than 1 Ω?**
- YES** : Replace drain valve <Ref. to 2-1 [W13A0].> and ECM <Ref. to 2-7 [W15A0].>.
- NO** : Go to step **10CL6**.

10CL6 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : **Is there poor contact in ECM connector?**
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CL6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CM: DTC P1443 — EVAPORATIVE EMISSION CONTROL SYSTEM VENT CONTROL FUNCTION PROBLEM —

- **DTC DETECTING CONDITION:**
 - Immediately after fault occurrence
- **TROUBLE SYMPTOM:**
 - Improper fuel supply

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

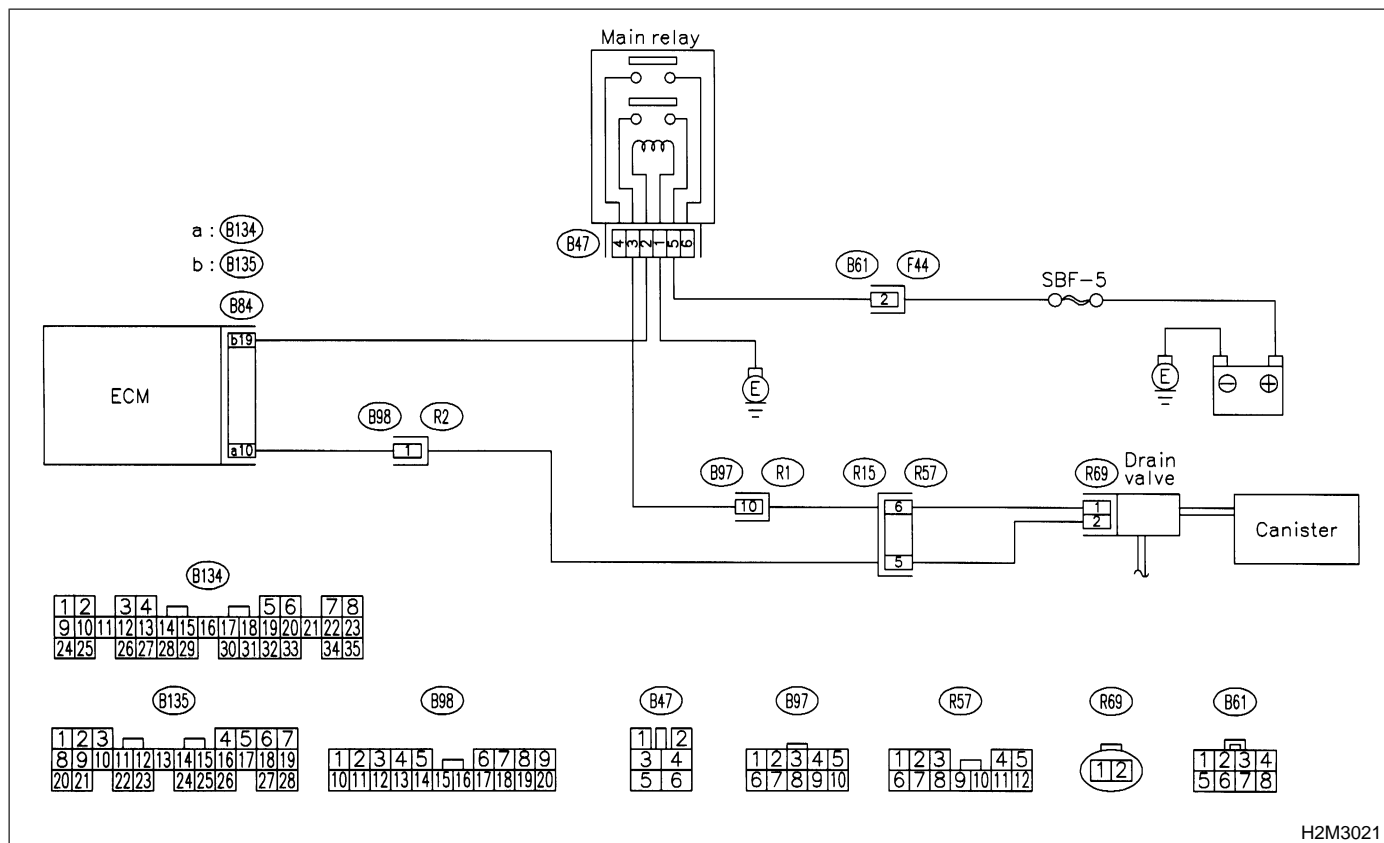

H2M3021


10CM1 : CHECK ANY OTHER DTC ON DISPLAY.

- CHECK** : *Is there any other DTC on display?*
- YES** : Inspect the relevant DTC using “10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles”. <Ref. to 2-7 [T10A0].>
- NO** : Go to step **10CM2**.

10CM2 : CHECK VENT LINE HOSES.

Check the following items.


- Clogging of vent hoses between canister and drain valve
- Clogging of vent hose between drain valve and air filter
- Clogging of vent hose between air filter and junction pipe
- Clogging of junction pipe
- Clogging of air filter

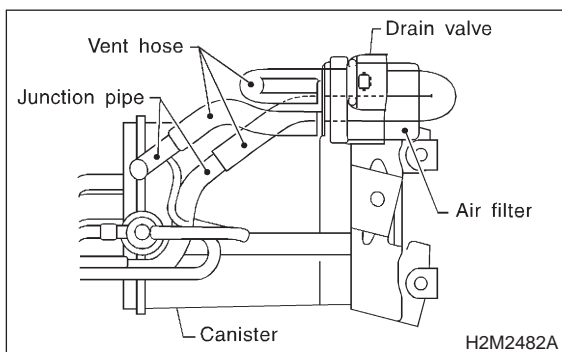

- CHECK** : *Is there a fault in vent line?*
YES : Repair or replace the faulty part.
NO : Go to step **10CM3**.

10CM3 : CHECK DRAIN VALVE OPERATION.

- 1) Turn ignition switch to OFF.
- 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

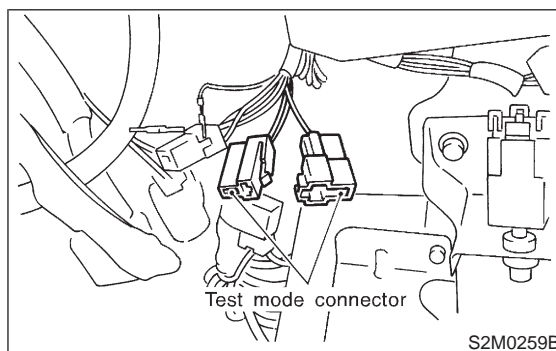

- 3) Turn ignition switch to ON.

NOTE:

Drain valve operation check can also be executed using Subaru Select Monitor. For the procedure, refer to the "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

- CHECK** : *Does drain valve produce operating sound?*
YES : Contact with SOA service.

NOTE:

Inspection by DTM is required, because probable cause is deterioration of multiple parts.

- NO** : Replace drain valve. <Ref. to 2-1 [W13A0].>


CN: DTC P1505 — IDLE CONTROL SYSTEM CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Immediately at fault recognition
- **TROUBLE SYMPTOM:**
 - Erroneous idling
 - Engine stalls.
 - Engine breathing

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

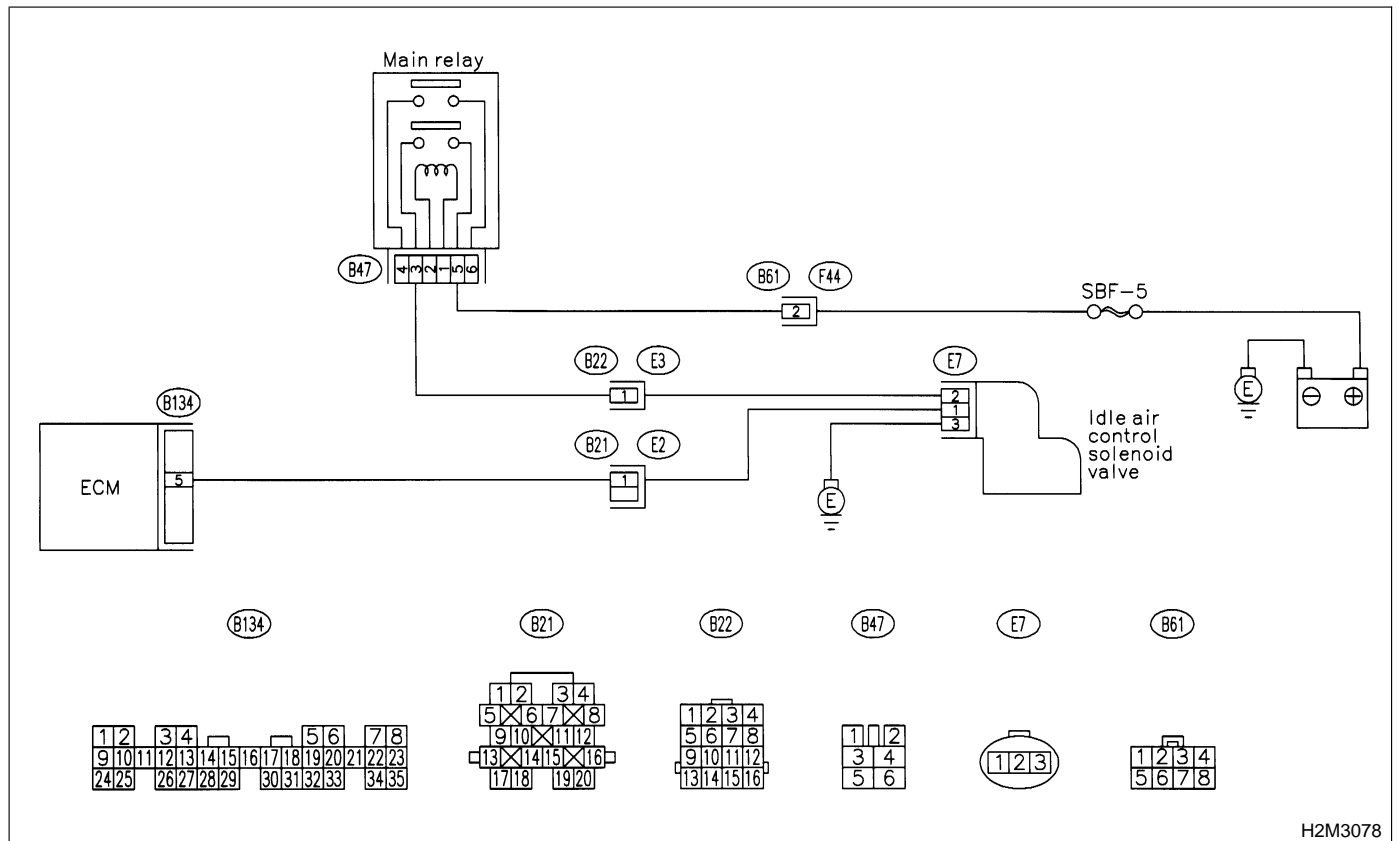

ON-BOARD DIAGNOSTICS II SYSTEM


[T10CN2] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CN1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B134) No. 5 (+) — Chassis ground (-):

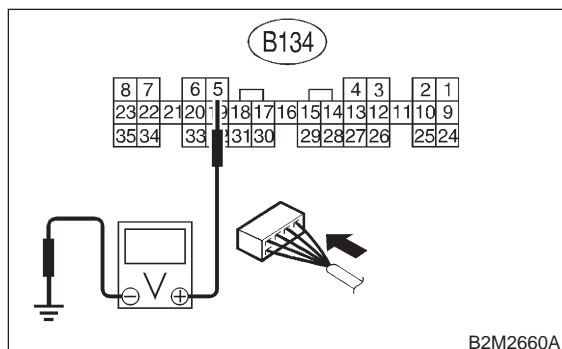


- CHECK** : Is the voltage more than 10 V?
YES : Go to step 10CN2.
NO : Go to step 10CN3.

10CN2 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from idle air control solenoid valve.
- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

Connector & terminal
(B134) No. 5 (+) — Chassis ground (-):

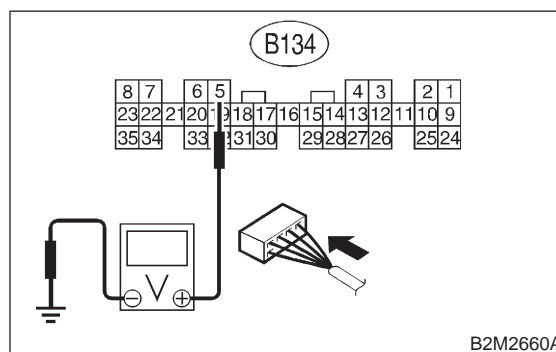


- CHECK** : Is the voltage more than 10 V?
YES : Repair battery short circuit in harness between ECM and idle air control solenoid valve connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
NO : Replace idle air control solenoid valve <Ref. to 2-7 [W12A1].> and ECM <Ref. to 2-7 [W15A0].>

10CN3 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal
(B134) No. 5 (+) — Chassis ground (-):

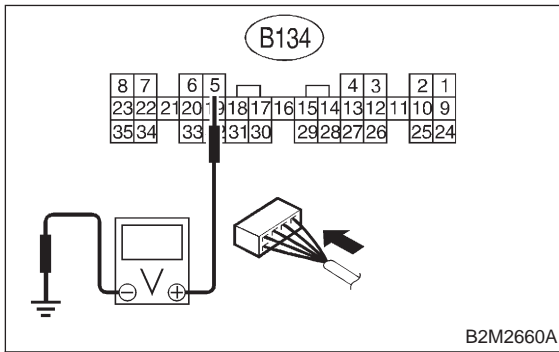

- CHECK** : *Does the voltage change more than 10 V by shaking harness and connector of ECM while monitoring the value with voltage meter?*
- YES** : Repair battery short circuit in harness between ECM and idle air control solenoid valve connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Contact with SOA service.

NOTE:
 Inseption by DTM is required, because probable cause is deterioration of multiple parts.

CO: DTC P1507 — IDLE CONTROL SYSTEM MALFUNCTION (FAIL-SAFE) —

● DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault


● TROUBLE SYMPTOM:

- Engine keeps running at higher revolution than specified idling revolution.

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● WIRING DIAGRAM:

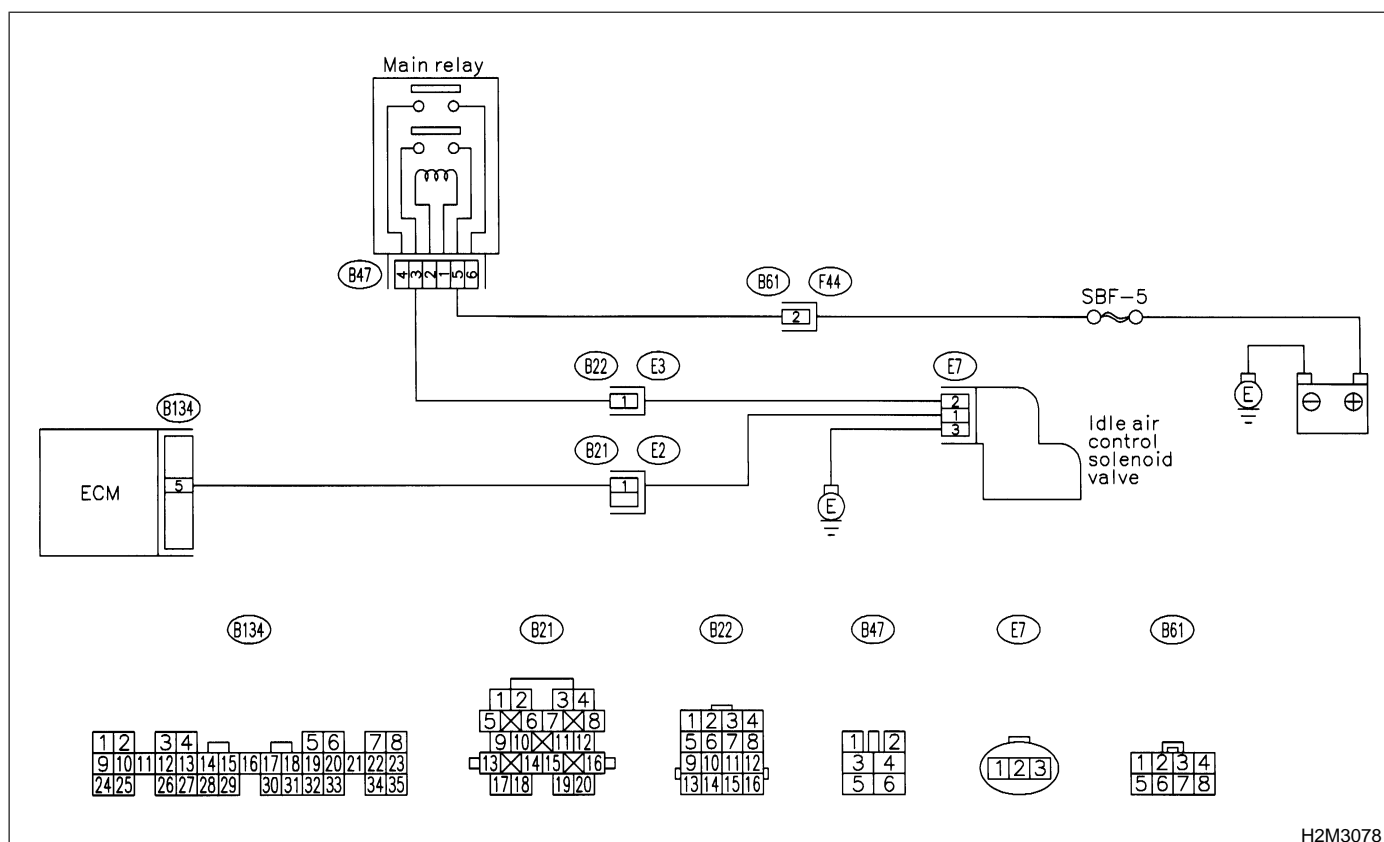

H2M3078

10CO1 : CHECK ANY OTHER DTC ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P0116 or P0117 or P0505 or P1505?

YES : Inspect DTC P0116 or P0117 or P0505 or P1505 using "10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles". <Ref. to 2-7 [T10A0].>

NOTE:
In this case, it is not necessary to inspect DTC P1507.

NO : Go to step 10CO2.

10CO2 : CHECK AIR INTAKE SYSTEM.

- 1) Turn ignition switch to ON.
- 2) Start engine, and idle it.
- 3) Check the following items.
 - Loose installation of intake manifold, idle air control solenoid valve and throttle body
 - Cracks of intake manifold gasket, idle air control solenoid valve gasket and throttle body gasket
 - Disconnections of vacuum hoses

CHECK : Is there a fault in air intake system?

YES : Repair air suction and leaks.

NO : Replace idle air control solenoid valve. <Ref. to 2-7 [W12A1].>


CP: DTC P1520 — COOLING FAN RELAY 1 CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault
- **TROUBLE SYMPTOM:**
 - Radiator fan does not operate properly.
 - Overheating

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>


● **WIRING DIAGRAM:**

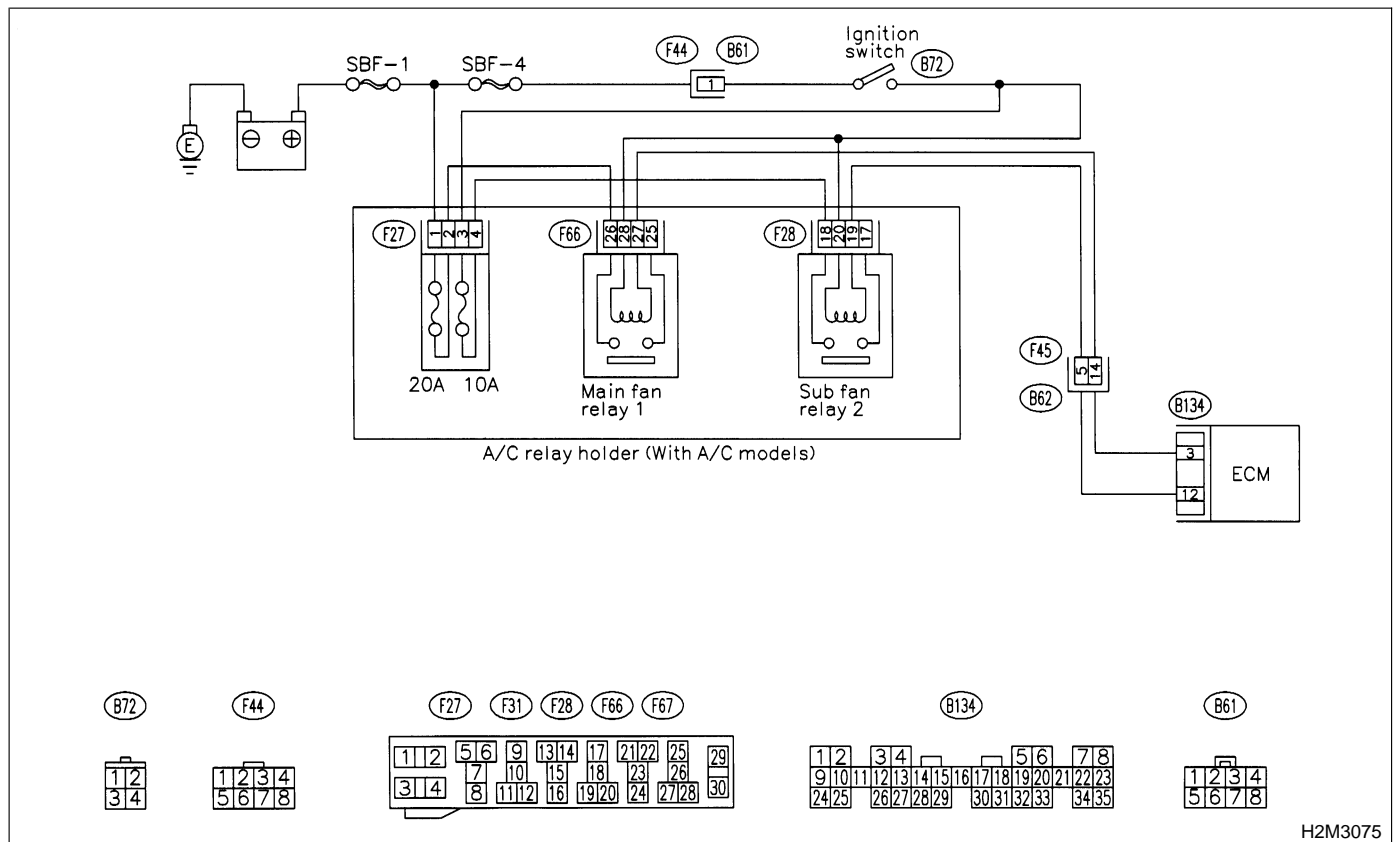

H2M3075

10CP1 : CHECK OUTPUT SIGNAL FROM ECM.

- 1) Turn ignition switch to OFF.
- 2) Connect test mode connector at the lower portion of instrument panel (on the driver's side), to the side of the center console box.

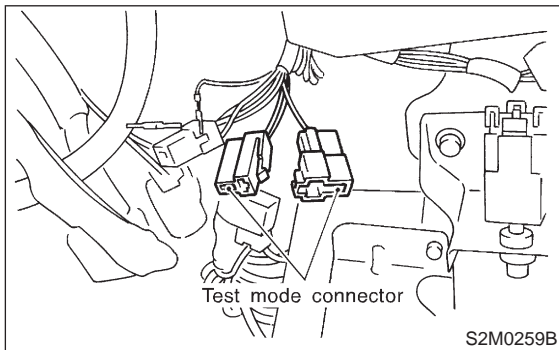


- 3) Turn ignition switch to ON.
- 4) Measure voltage between ECM and chassis ground.

NOTE:

Radiator fan relay operation check can be executed using Subaru Select Monitor. For procedure, refer to "COMPULSORY VALVE OPERATION CHECK MODE". <Ref. to 2-7 [T3F0].>

Connector & terminal

(B134) No. 3 (+) — Chassis ground (-):

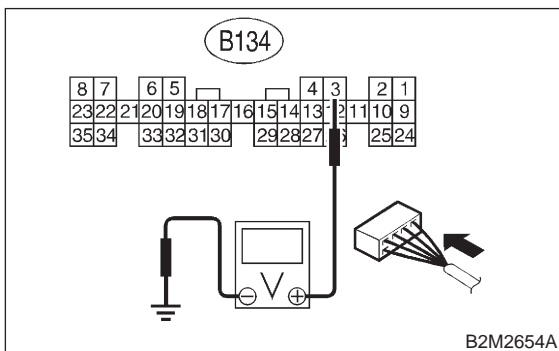


- CHECK** : **Does voltage change between 0 and 10 volts?**
- YES** : Even if MIL lights up, the circuit has returned to a normal condition at this time. In this case, repair poor contact in ECM connector.
- NO** : Go to step **10CP2**.

10CP2 : CHECK SHORT CIRCUIT IN RADIATOR FAN RELAY 1 CONTROL CIRCUIT.

- 1) Turn ignition switch to OFF.
- 2) Remove main fan relay 1 and sub fan relay 1. (with A/C models)
Remove main fan relay. (without A/C models)
- 3) Disconnect test mode connector.
- 4) Turn ignition switch to ON.
- 5) Measure voltage between ECM and chassis ground.

Connector & terminal

(B134) No. 3 (+) — Chassis ground (-):

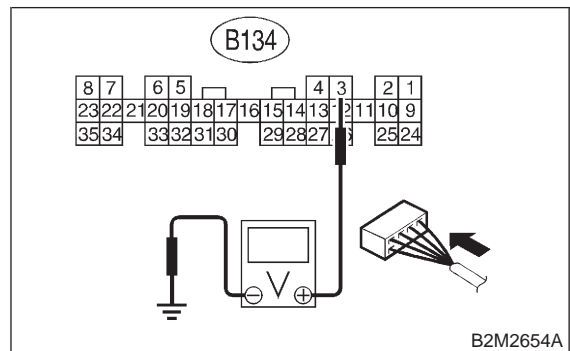

- CHECK** : **Is the voltage more than 10 V?**
- YES** : Repair battery short circuit in radiator fan relay 1 control circuit. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10CP3**.

10CP3 : CHECK VEHICLE MODEL.

- CHECK** : **Is the vehicle equipped with A/C?**
- YES** : Go to step **10CP4**.
- NO** : Go to step **10CP6**.

2-7 [T10CP4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CP4 : CHECK MAIN FAN RELAY 1.

- 1) Turn ignition switch to OFF.
- 2) Remove main fan relay 1.
- 3) Measure resistance between main fan relay 1 terminals.

Terminal

No. 1 — No. 3:

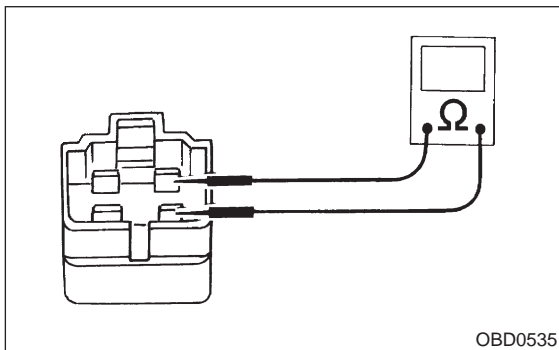


- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Replace main fan relay 1 and ECM <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10CP5**.

10CP5 : CHECK SUB FAN RELAY 1.

- 1) Remove sub fan relay 1.
- 2) Measure resistance between sub fan relay 1 terminals.

Terminal

No. 1 — No. 3

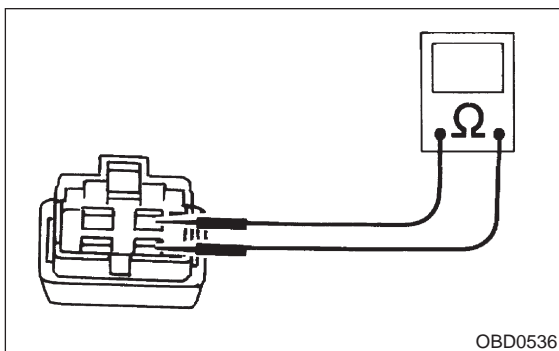

- CHECK** : *Is the resistance less than 1 Ω?*
- YES** : Replace sub fan relay 1 and ECM <Ref. to 2-7 [W15A0].>
- NO** : Go to step **10CP6**.

10CP6 : CHECK POOR CONTACT.

Check poor contact in ECM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in ECM connector?*
- YES** : Repair poor contact in ECM connector.
- NO** : Replace ECM. <Ref. to 2-7 [W15A0].>

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CP6] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:


CQ: DTC P1560 — BACK-UP VOLTAGE CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

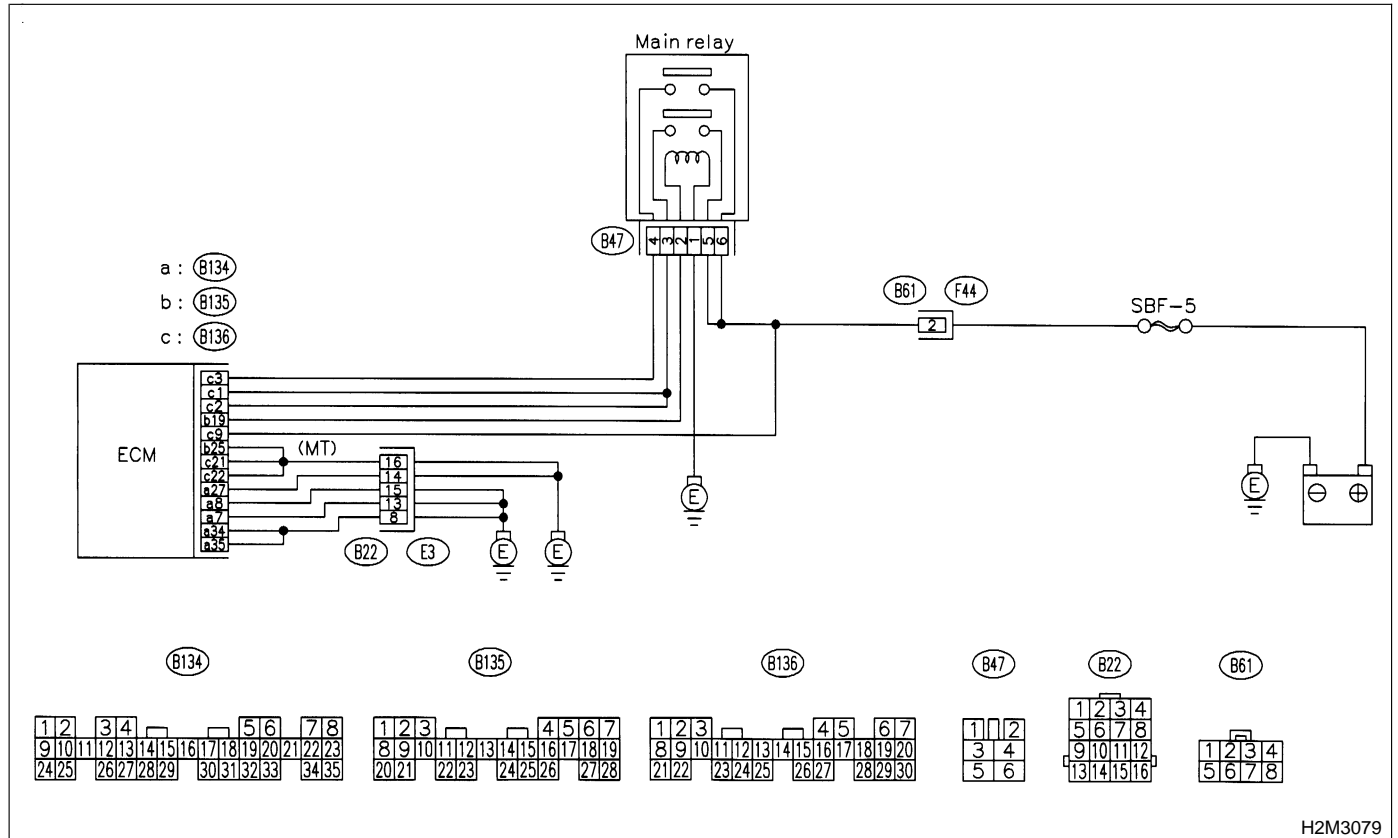


H2M3079

10CQ1 : CHECK INPUT SIGNAL FOR ECM.

- 1) Turn ignition switch to OFF.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B136) No. 9 (+) — Chassis ground (-):

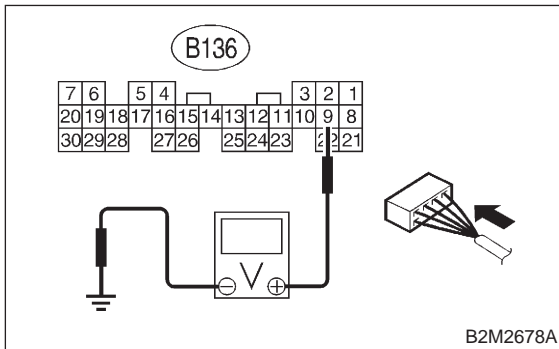


- CHECK** : *Is the voltage more than 10 V?*
YES : Repair poor contact in ECM connector.
NO : Go to step 10CQ2.

10CQ2 : CHECK HARNESS BETWEEN ECM AND MAIN FUSE BOX CONNECTOR.

- 1) Disconnect connector from ECM.
- 2) Measure resistance of harness between ECM and chassis ground.

Connector & terminal
(B136) No. 9 — Chassis ground:

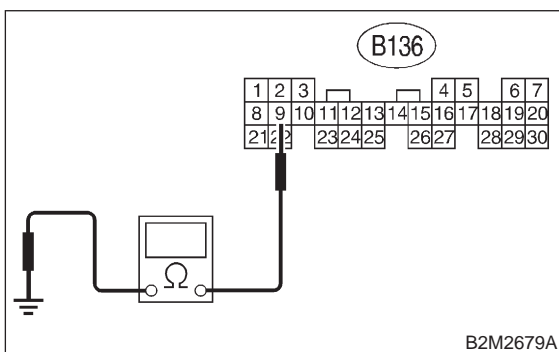

- CHECK** : *Is the resistance less than 10 Ω?*
YES : Repair ground short circuit in harness between ECM connector and battery terminal.
NO : Go to step 10CQ3.


10CQ3 : CHECK FUSE SBF-2.

- CHECK** : *Is fuse blown?*
YES : Replace fuse. <Ref. to 6-3 [D6B0].>
NO : Go to step 10CQ4.

10CQ4 : CHECK HARNESS BETWEEN ECM AND MAIN FUSE BOX CONNECTOR.

- 1) Disconnect connector from main fuse box.
- 2) Measure resistance of harness between ECM and main fuse box connector.

Connector & terminal
(B136) No. 9 — (F37) No. 1:

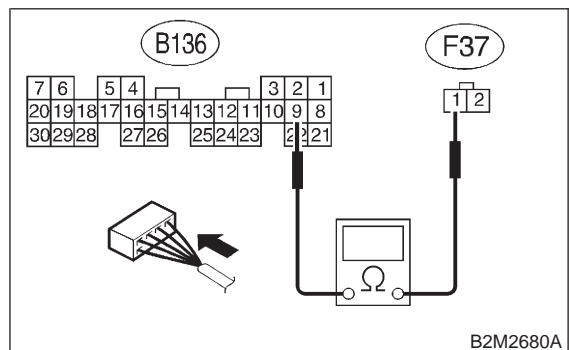

- CHECK** : *Is the resistance less than 1 Ω?*
YES : Repair poor contact in ECM and main fuse box connector.
NO : Repair harness and connector.

NOTE:

In this case, repair the following:

- Open circuit in harness between ECM and main fuse box connector
- Poor contact in coupling connector (F44)
- Poor contact in ECM connector
- Poor contact in main fuse box connector

CR: DTC P1700 — THROTTLE POSITION SENSOR CIRCUIT MALFUNCTION FOR AUTOMATIC TRANSMISSION —

● **DTC DETECTING CONDITION:**

- Two consecutive driving cycles with fault


● **TROUBLE SYMPTOM:**

- Shift point too high or too low; engine brake not effected in “3” range; excessive shift shock; excessive tight corner “braking”

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

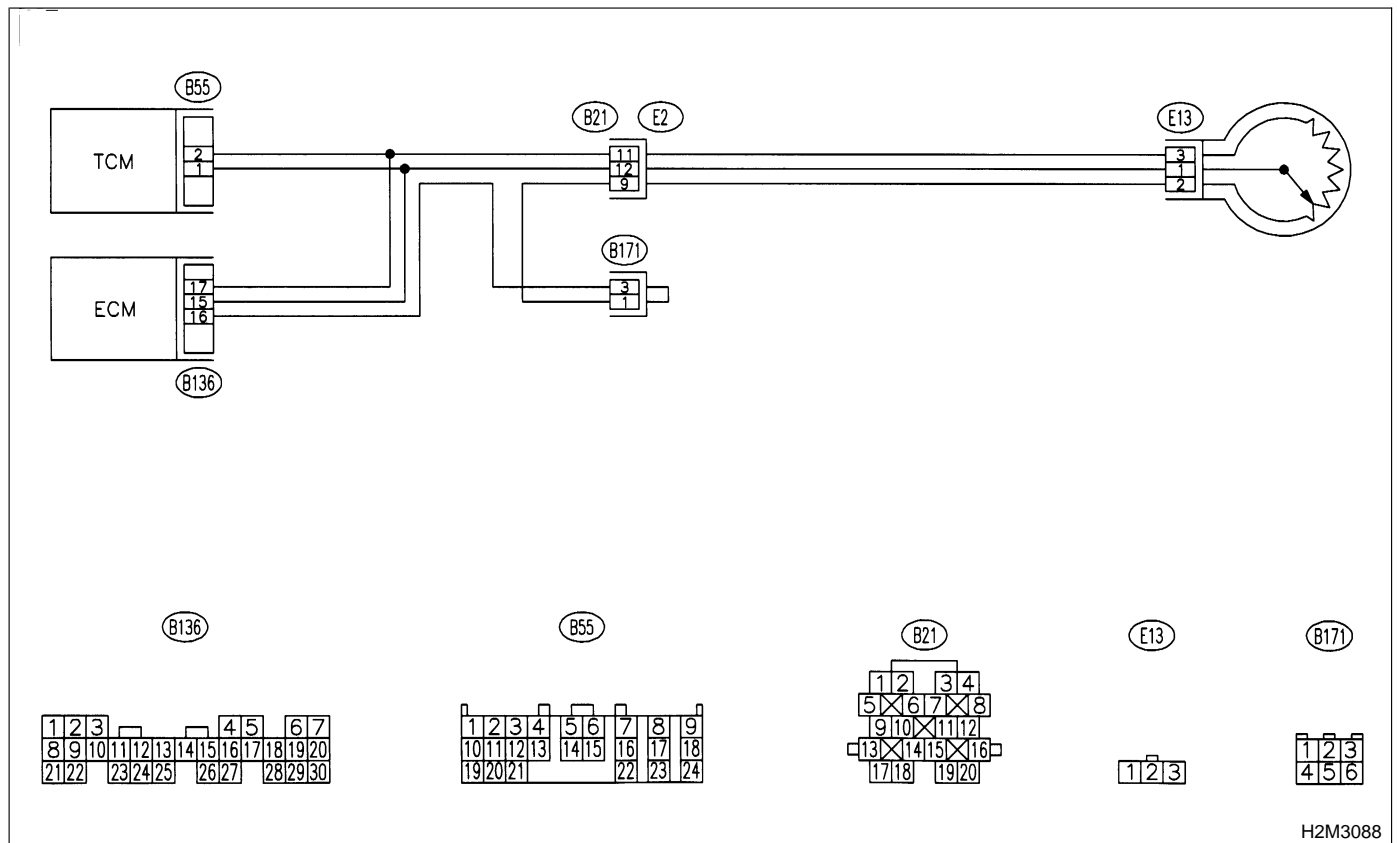

H2M3088

10CR1 : CHECK DTC P1700 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1700?
- YES** : Check throttle position sensor circuit. <Ref. to 3-2 [T8F0].>
- NO** : It is not necessary to inspect DTC P1700.

ON-BOARD DIAGNOSTICS II SYSTEM

[T10CR1] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

MEMO:

CS: DTC P1701 — CRUISE CONTROL SET SIGNAL CIRCUIT MALFUNCTION FOR AUTOMATIC TRANSMISSION —


● DTC DETECTING CONDITION:

- Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● WIRING DIAGRAM:

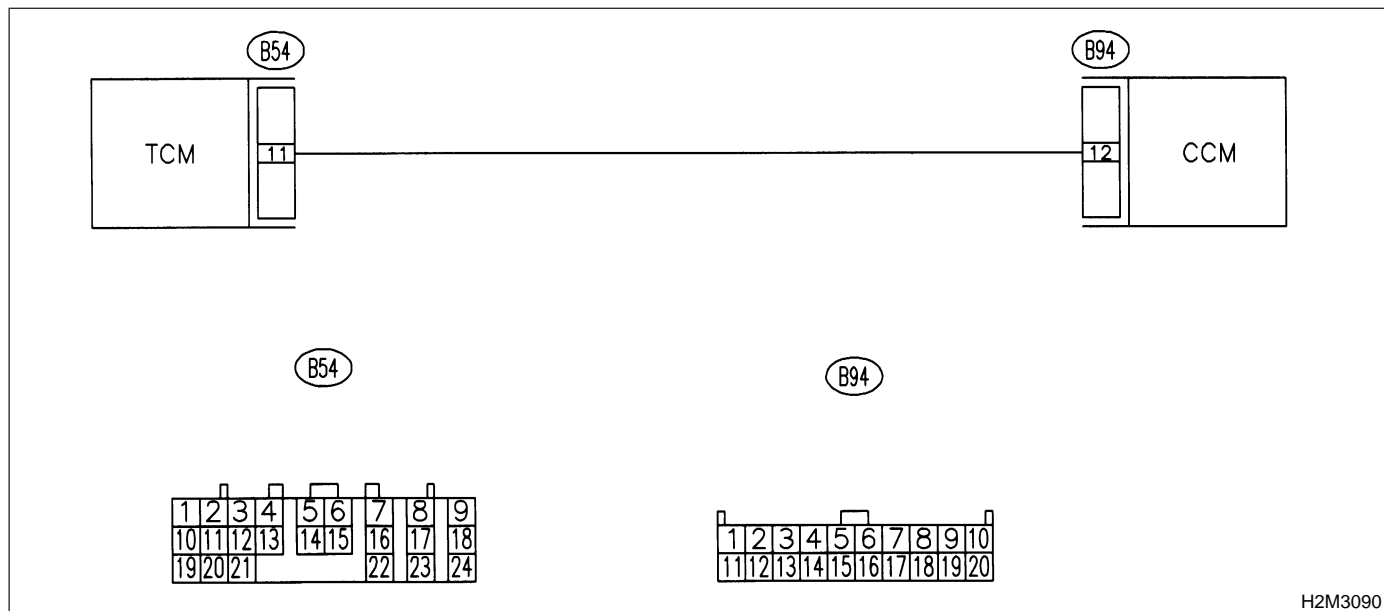


10CS1 : CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connectors from TCM and CCM.
- 3) Measure resistance of harness between TCM and CCM connector.

Connector & terminal

(B54) No. 11 — (B94) No. 12:

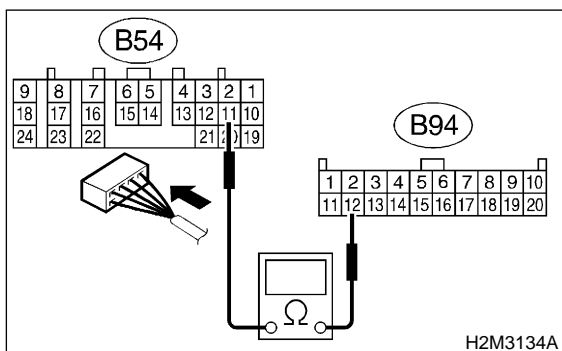


- (CHECK)** : *Is the resistance less than 1 Ω?*
- (YES)** : Go to step **10CS2**.
- (NO)** : Repair open circuit in harness between TCM and CCM connector.

10CS2 : CHECK HARNESS BETWEEN TCM AND CCM CONNECTOR.

Measure resistance of harness between TCM and chassis ground.

Connector & terminal

(B54) No. 11 — Chassis ground:

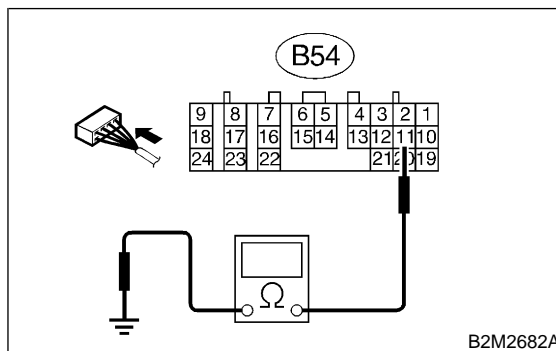

- (CHECK)** : *Is the resistance less than 10 Ω?*
- (YES)** : Repair short circuit in harness between TCM and CCM connector.
- (NO)** : Go to step **10CS3**.

10CS3 : CHECK INPUT SIGNAL FOR TCM.

- 1) Connect connector to TCM and CCM.
- 2) Lift-up the vehicle or set the vehicle on free rollers.


CAUTION:

On AWD models, raise all wheels off ground.

- 3) Start the engine.
- 4) Cruise control main switch to ON.
- 5) TCS OFF switch to ON. (with TCS models only)
- 6) Move selector lever to "D" and slowly increase vehicle speed to 50 km/h (31 MPH).
- 7) Cruise control set switch to ON.
- 8) Measure voltage between TCM and chassis ground.

Connector & terminal

(B54) No. 11 (+) — Chassis ground (-):

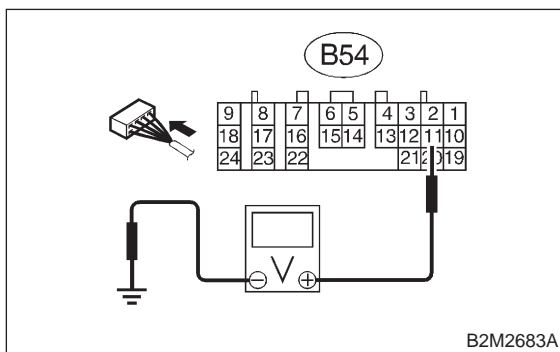

- CHECK** : *Is the resistance less than 1 V?*
- YES** : Go to step **10CS4**.
- NO** : Check cruise control set circuit.

10CS4 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

- CHECK** : *Is there poor contact in TCM connector?*
- YES** : Repair poor contact in TCM connector.
- NO** : Replace TCM. <Ref. to 3-2 [W22A0].>


CT: DTC P1702 — AUTOMATIC TRANSMISSION DIAGNOSIS INPUT SIGNAL CIRCUIT LOW INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

- **WIRING DIAGRAM:**

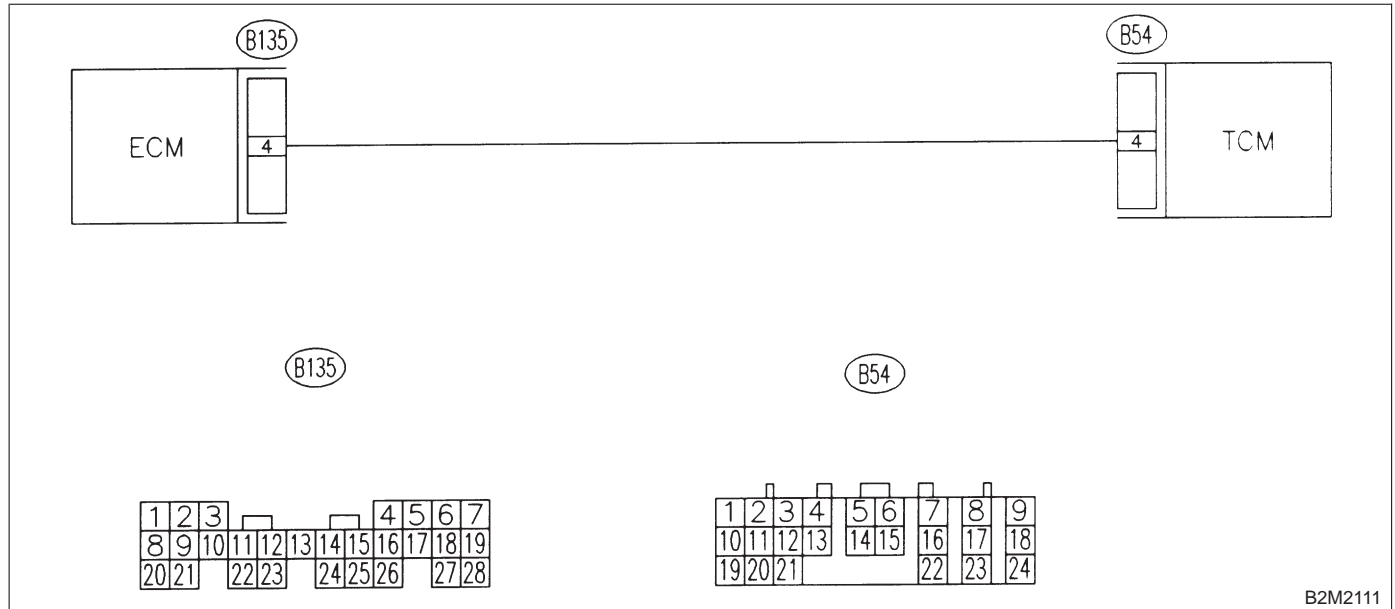


B2M2111

10CT1 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 4 (+) — Chassis ground (-):

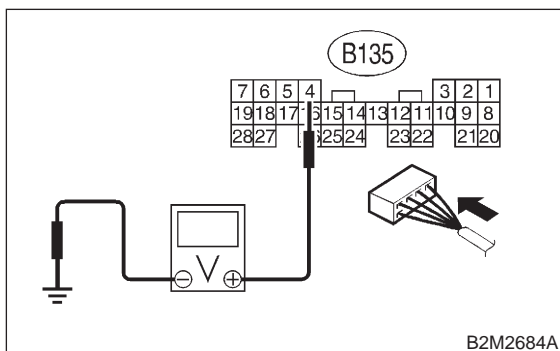

- CHECK** : *Is the voltage less than 1 V?*
- YES** : Go to step **10CT2**.
- NO** : Even if MIL lights up, the circuit has returned to a normal condition at this time.


NOTE:

- In this case, repair the following:
- Poor contact in ECM connector
 - Poor contact in TCM connector

10CT2 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to OFF.
- 2) Disconnect connector from ECM and TCM.
- 3) Measure resistance of harness between ECM and chassis ground.

Connector & terminal
(B135) No. 4 — Chassis ground:

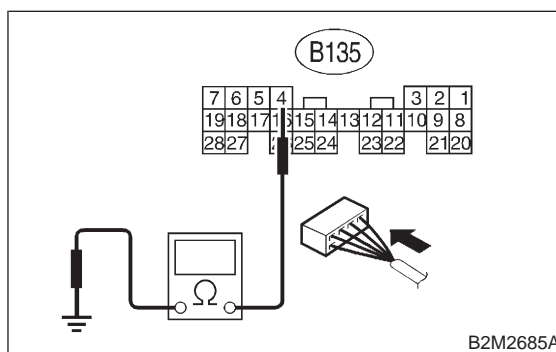


- CHECK** : *Is the resistance less than 10 Ω?*
- YES** : Repair ground short circuit in harness between ECM and TCM connector.
- NO** : Go to step **10CT3**.

10CT3 : CHECK OUTPUT SIGNAL FOR ECM.

- 1) Connect connector to ECM.
- 2) Turn ignition switch to ON.
- 3) Measure voltage between ECM and chassis ground.

Connector & terminal

(B135) No. 4 (+) — Chassis ground (-):

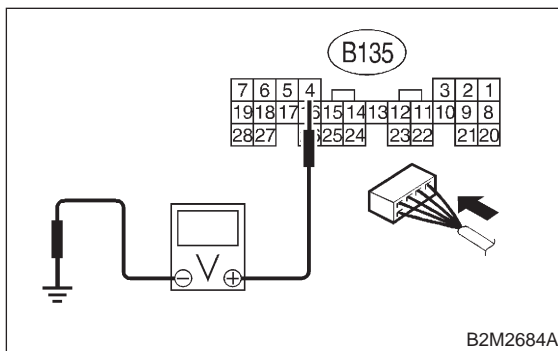

- CHECK** : **Is the voltage more than 5 V?**
- YES** : Replace TCM. <Ref. to 3-2 [W22A0].>
- NO** : Repair poor contact in ECM connector.


CU: DTC P1703 — LOW CLUTCH TIMING CONTROL SOLENOID VALVE CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

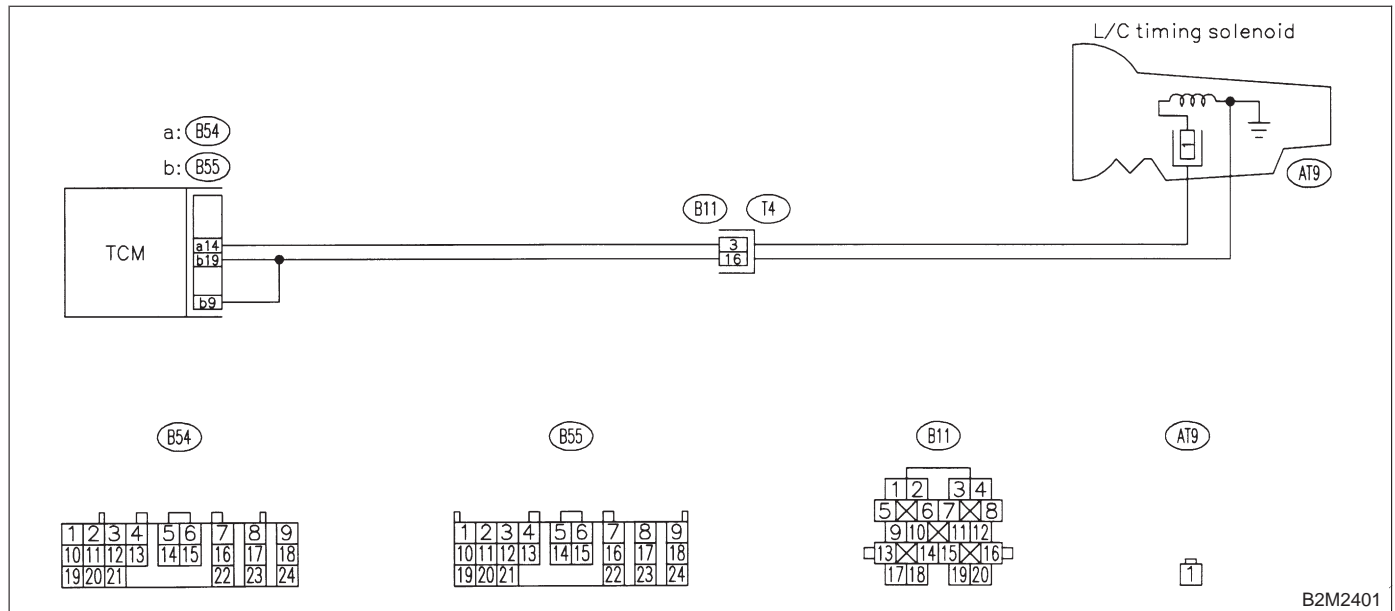

B2M2401

10CU1 : CHECK DTC P1703 ON DISPLAY.

CHECK : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1703?

YES : Check low clutch timing control solenoid valve circuit. <Ref. to 3-2 [T8M0].>

NO : It is not necessary to inspect DTC P1703.


CV: DTC P1704 — 2-4 BRAKE TIMING CONTROL SOLENOID VALVE CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

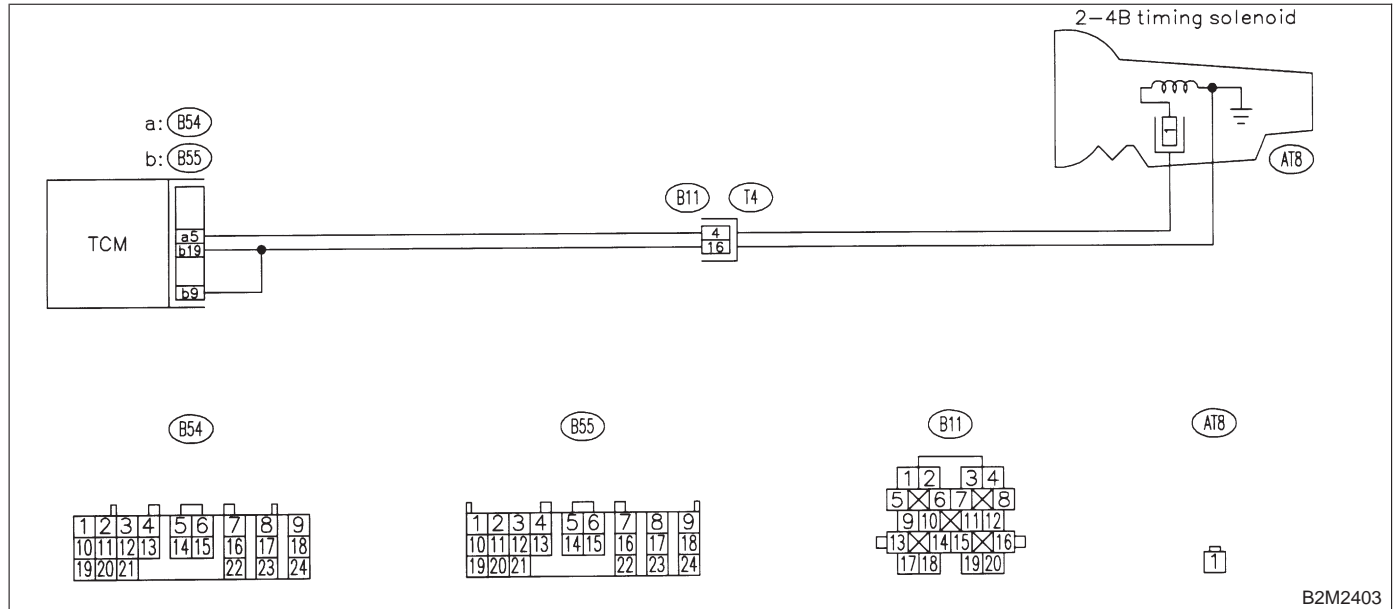

B2M2403

10CV1 : CHECK DTC P1704 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1704?
- YES** : Check 2-4 brake timing control solenoid valve circuit. <Ref. to 3-2 [T8N0].>
- NO** : It is not necessary to inspect DTC P1704.


CW: DTC P1705 — 2-4 BRAKE PRESSURE CONTROL SOLENOID VALVE (DUTY SOLENOID D) CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

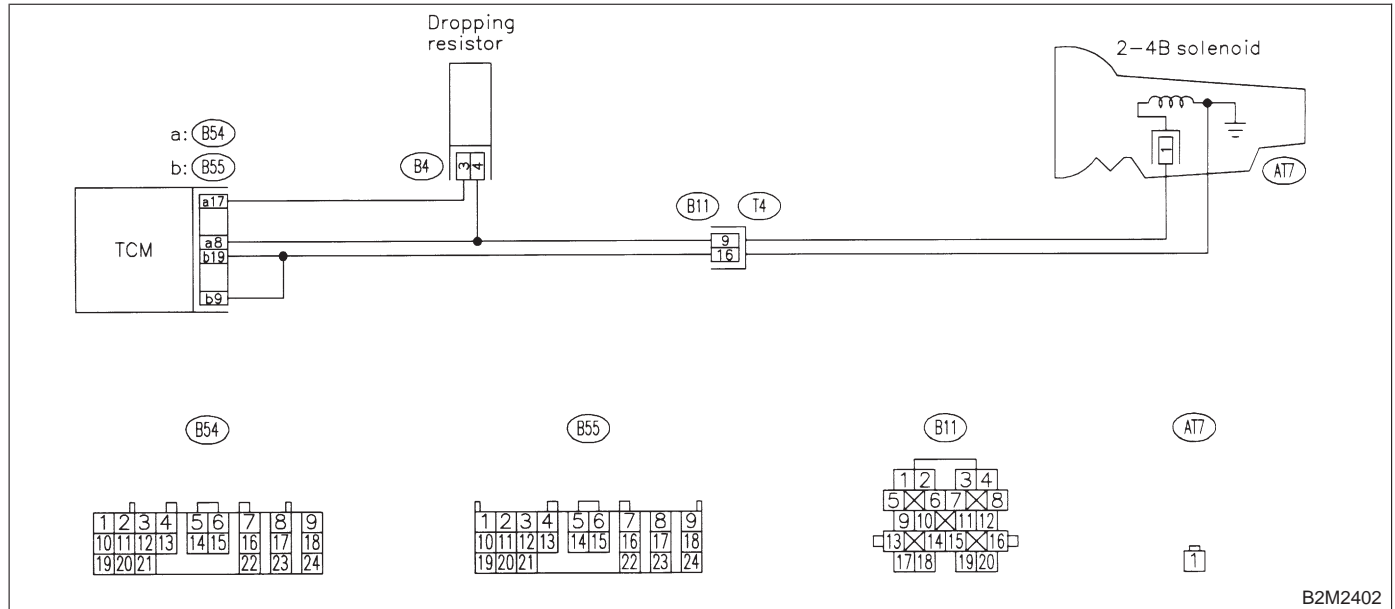

B2M2402

10CW1 : CHECK DTC P1705 ON DISPLAY.

- CHECK** : Does the Subaru Select Monitor or OBD-II general scan tool indicate DTC P1705?
- YES** : Check 2-4 brake pressure control solenoid valve circuit. <Ref. to 3-2 [T8P0].>
- NO** : It is not necessary to inspect DTC P1705.


CX: DTC P1722 — AUTOMATIC TRANSMISSION DIAGNOSIS INPUT SIGNAL CIRCUIT HIGH INPUT —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct CLEAR MEMORY MODE <Ref. to 2-7 [T3D0].> and INSPECTION MODE <Ref. to 2-7 [T3E0].>

- **WIRING DIAGRAM:**

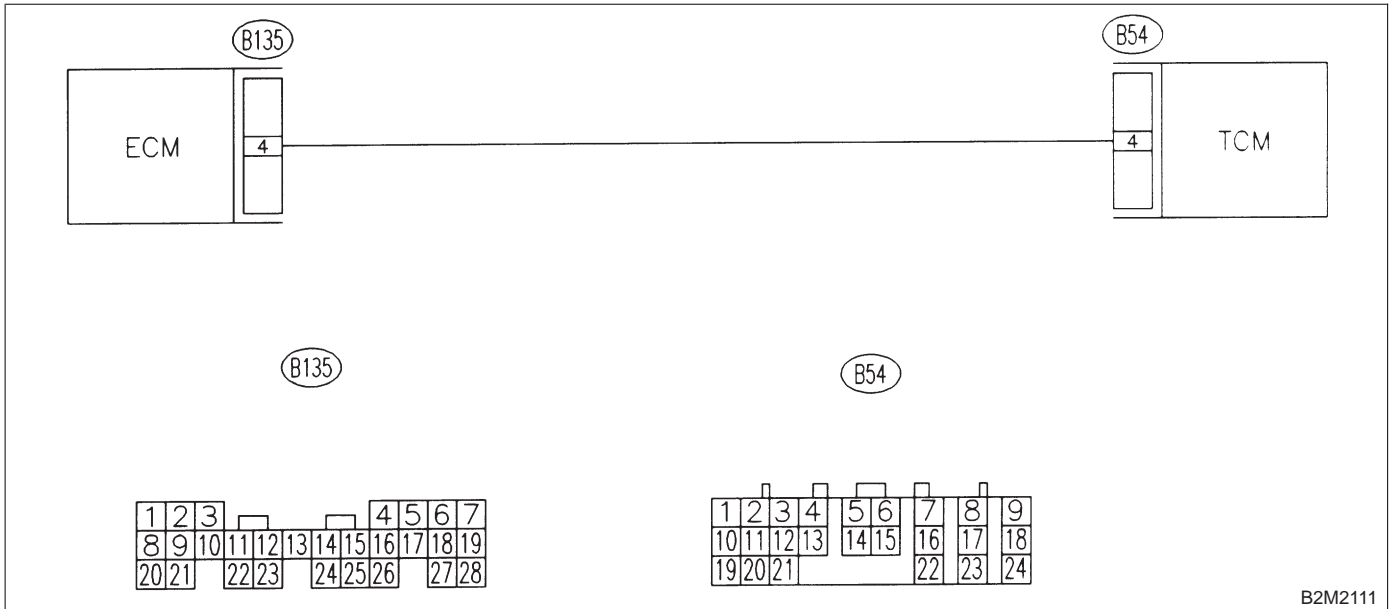

ON-BOARD DIAGNOSTICS II SYSTEM


[T10CX3] 2-7

10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CX1 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

- 1) Turn ignition switch to ON.
- 2) Measure voltage between ECM and chassis ground.

Connector & terminal
(B135) No. 4 (+) — Chassis ground (-):

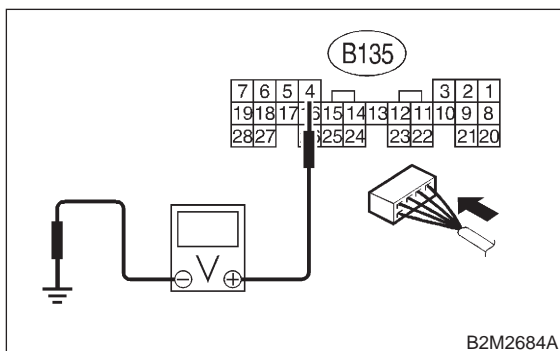


- CHECK** : Is the voltage more than 10 V?
- YES** : Repair battery short circuit in harness between ECM and TCM connector. After repair, replace ECM. <Ref. to 2-7 [W15A0].>
- NO** : Go to step 10CX2.

10CX2 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B135) No. 4 (+) — Chassis ground (-):

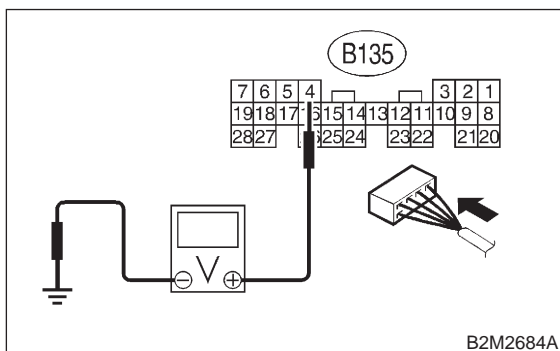


- CHECK** : Is the voltage more than 4 V?
- YES** : Go to step 10CX5.
- NO** : Go to step 10CX3.

10CX3 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

Measure voltage between ECM connector and chassis ground.

Connector & terminal
(B135) No. 4 (+) — Chassis ground (-):

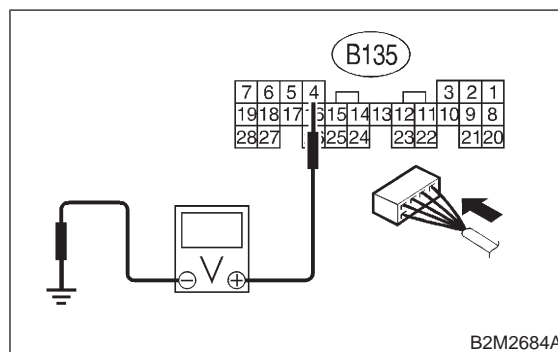

- CHECK** : Is the voltage less than 1 V?
- YES** : Repair poor contact in ECM connector.
- NO** : Go to step 10CX4.

2-7 [T10CX4]

ON-BOARD DIAGNOSTICS II SYSTEM


10. Diagnostics Chart with Trouble Code for 2200 cc California Spec. Vehicles

10CX4 : CHECK OUTPUT SIGNAL FROM ECM.

Measure voltage between ECM and chassis ground.

Connector & terminal

(B135) No. 4 (+) — Chassis ground (-):

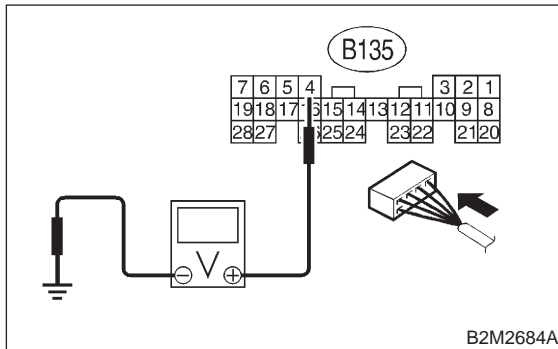

CHECK : Does the voltage change from 1 V to 4 V while monitoring the value with voltage meter?

YES : Even if MIL lights up, the circuit has returned to a normal condition at this time.

NOTE:

In this case, repair the following:

- Poor contact in ECM connector
- Poor contact in TCM connector

NO : Contact with SOA service.

NOTE:


Inspection by DTM is required, because probable cause is deterioration of multiple parts.

10CX5 : CHECK HARNESS BETWEEN ECM AND TCM CONNECTOR.

Measure voltage between TCM and chassis ground.

Connector & terminal

(B54) No. 4 (+) — Chassis ground (-):

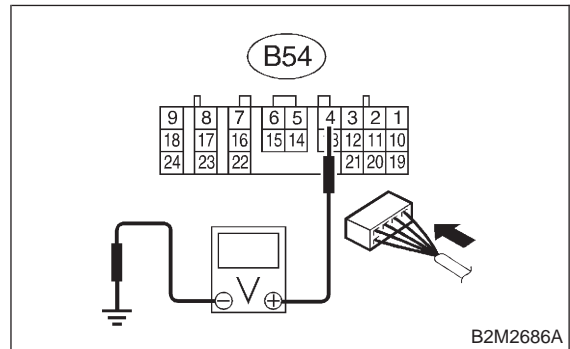

CHECK : Is the voltage more than 4 V?

YES : Go to step 10CX6.

NO : Repair open circuit in harness between ECM and TCM connector.

10CX6 : CHECK POOR CONTACT.

Check poor contact in TCM connector. <Ref. to FOREWORD [T3C1].>

CHECK : Is there poor contact in TCM connector?

YES : Repair poor contact in TCM connector.

NO : Check TCM power supply line and grounding line.


CY: DTC P1742 — AUTOMATIC TRANSMISSION DIAGNOSIS INPUT SIGNAL CIRCUIT MALFUNCTION —

- **DTC DETECTING CONDITION:**
 - Two consecutive driving cycles with fault

CAUTION:

After repair or replacement of faulty parts, conduct **CLEAR MEMORY MODE** <Ref. to 2-7 [T3D0].> and **INSPECTION MODE** <Ref. to 2-7 [T3E0].>

● **WIRING DIAGRAM:**

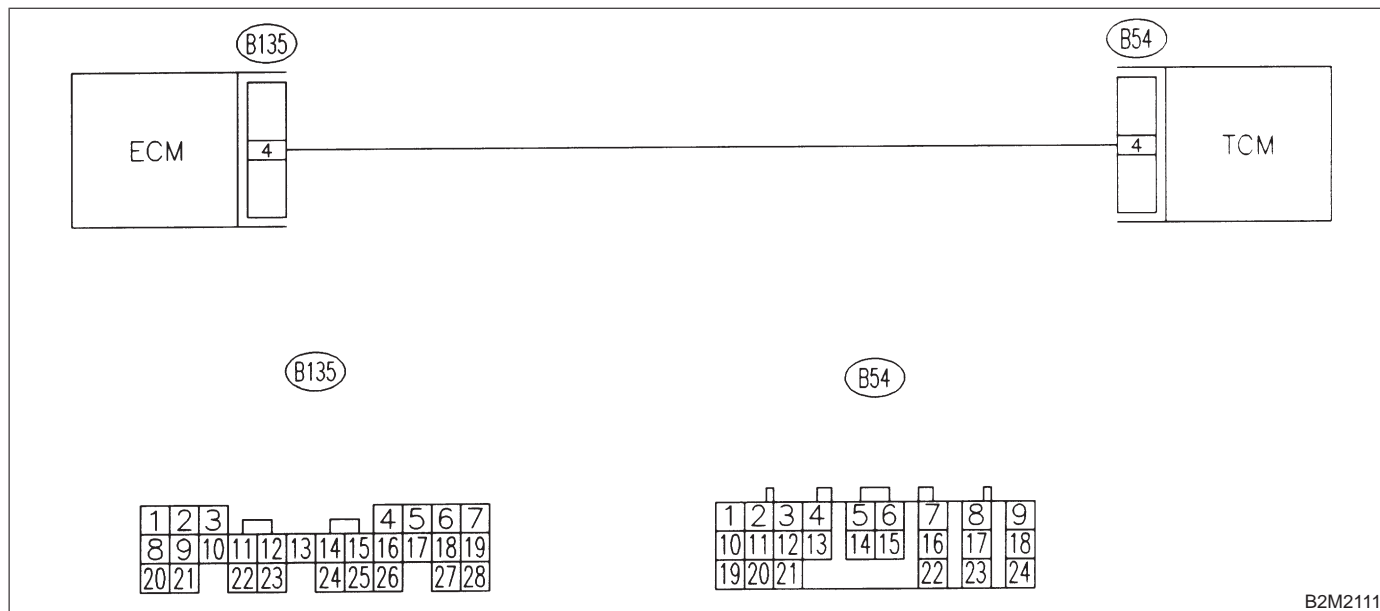

B2M2111

10CY1 : CHECK DRIVING CONDITION.

- 1) Start and warm-up the engine until the radiator fan makes one complete rotation.
- 2) Drive the vehicle.

- CHECK** : *Is AT shift control functioning properly?*
- YES** : Go to step **10CY2**.
- NO** : Replace TCM. <Ref. to 3-2 [W22A0].>

10CY2 : CHECK ACCESSORY.

- CHECK** : *Are car phone and/or CB installed on vehicle?*
- YES** : Repair grounding line of car phone or CB system.
- NO** : Replace TCM. <Ref. to 3-2 [W22A0].>