



6) Remove bolts which install sub fuel level sensor on fuel tank.

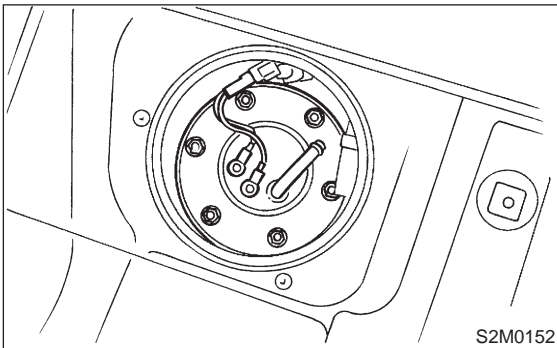


7) Remove sub fuel level sensor.

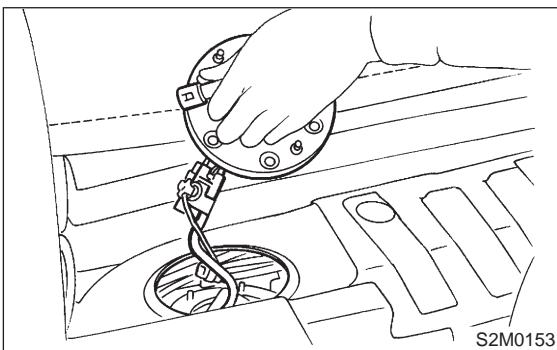

8) Installation is in the reverse order of removal.

Tightening torque:


T: 4.4 ± 1.5 N·m (0.45 ± 0.15 kg·m, 3.3 ± 1.1 ft·lb)

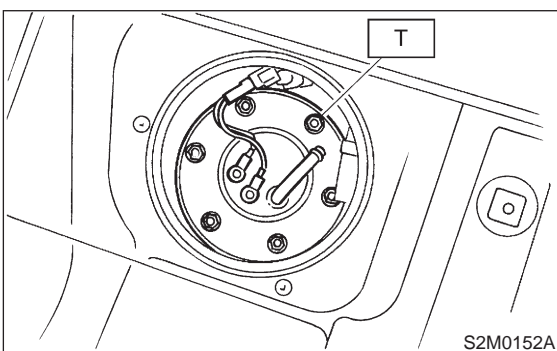


11. Vent Valve

A: REMOVAL AND INSTALLATION


- 1) Release fuel pressure. <Ref. to 2-8 [W1B0].>
- 2) Open fuel flap lid, and remove fuel filler cap.

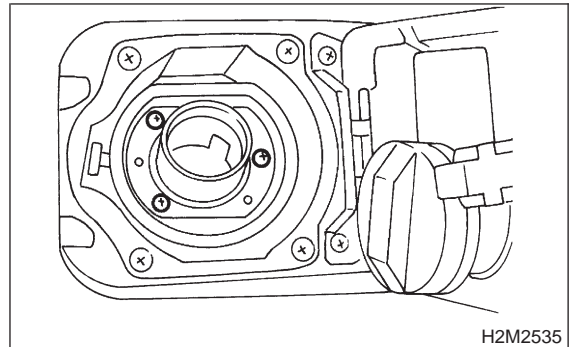


- 3) Disconnect battery ground cable.

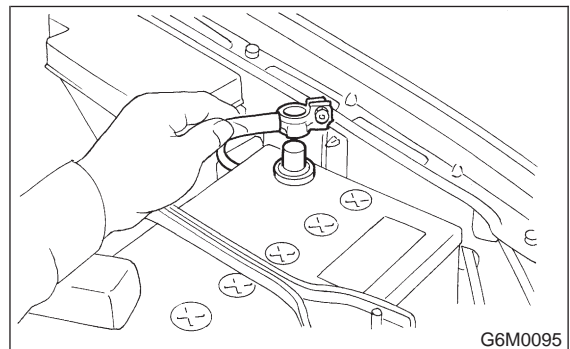


- 4) Drain fuel from fuel tank. <Ref. to 2-8 [W1C0].>

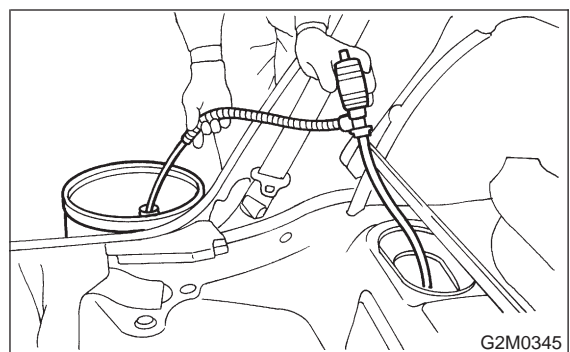


- 5) Remove fuel tank. <Ref. to 2-8 [W2A0].>

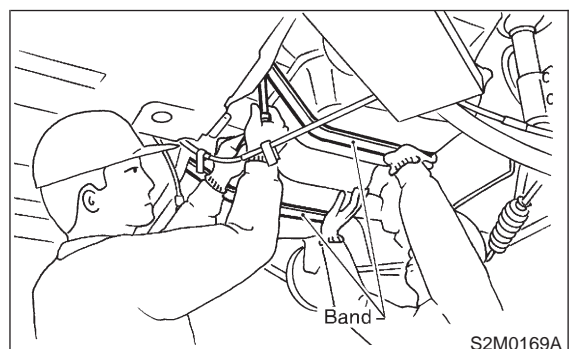


6) Remove protector cover.

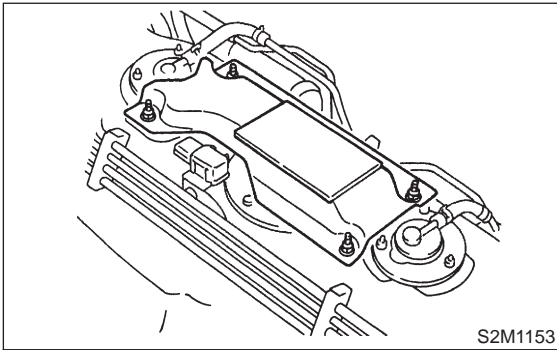

7) Move clips, and disconnect hoses from vent valve.

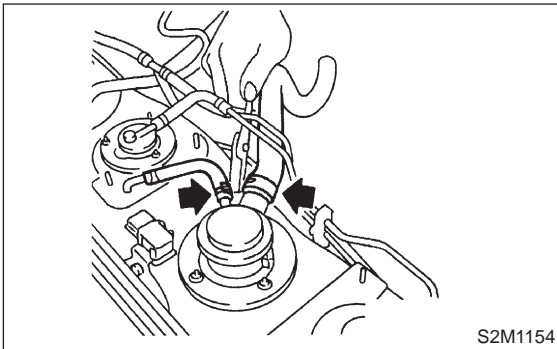

8) Remove nuts which install vent valve on fuel tank.

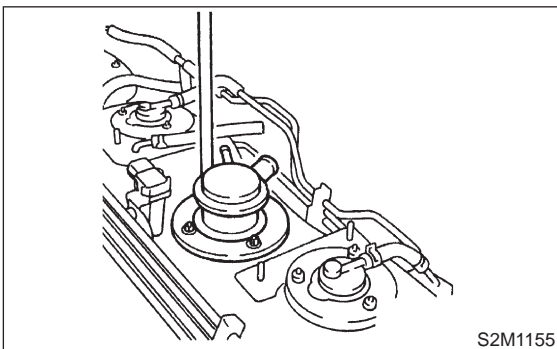

9) Installation is in the reverse order of removal.

CAUTION:
Replace rubber seat with a new one.

Tightening torque:
T: 4.4 ± 1.5 N·m (0.45 ± 0.15 kg·m, 3.3 ± 1.1 ft·lb)

