



- 8) Lower the vehicle.
- 9) Connect front oxygen sensor connector.

7) Connect rear oxygen sensor connector.

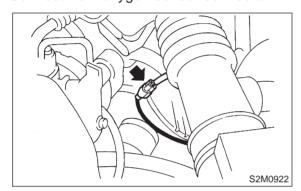


10) Connect battery ground cable.

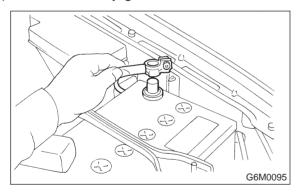

2. Rear Exhaust Pipe

A: REMOVAL


1) Separate rear exhaust pipe from front catalytic converter.

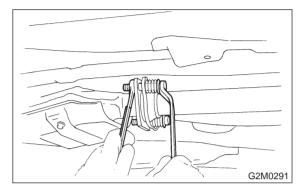

2) Separate rear exhaust pipe from muffler.

CAUTION:

Be careful not to pull down front exhaust pipe and front catalytic converter.

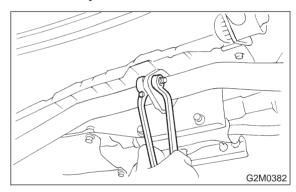


3) Remove rear exhaust pipe bracket from rubber cushion.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC to pipe bracket in advance.

SUBARU CRC (Part No. 004301003)

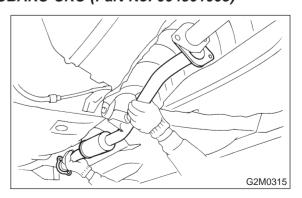

SERVICE PROCEDURE

B: INSTALLATION

CAUTION:


Replace gaskets with new ones.

1) Install rear exhaust pipe bracket to rubber cushion.

NOTE:

To facilitate installation, apply a coat of SUBARU CRC to mating area of rubber cushion in advance.


SUBARU CRC (Part No. 004301003)

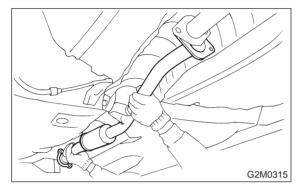

2) Install rear exhaust pipe to muffler.

Tightening torque:


48±5 N·m (4.9±0.5 kg-m, 35.4±3.6 ft-lb)

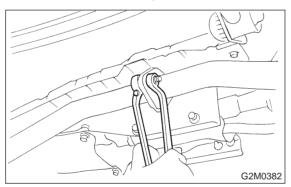

3) Install rear exhaust pipe to front catalytic converter.

Tightening torque:


18±5 N·m (1.8±0.5 kg-m, 13.0±3.6 ft-lb)

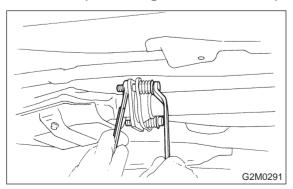

3. Muffler

A: REMOVAL AND INSTALLATION

1) Separate muffler from rear exhaust pipe.

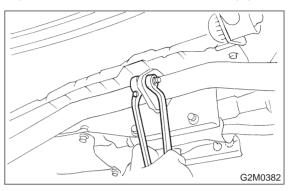

2) Remove left and right rubber cushions.


CAUTION:

Be careful not to pull down front exhaust pipe and front catalytic converter.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC to mating area of rubber cushions in advance.

SUBARU CRC (Part No. 004301003)

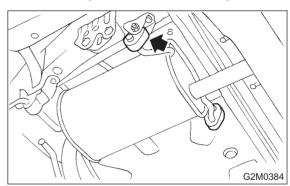

3) Remove front rubber cushion, and detach muffler assembly.

NOTE:

To facilitate removal, apply a coat of SUBARU CRC to mating area of rubber cushion in advance.

SUBARU CRC (Part No. 004301003)

