



## 17. Fuel Pump Relay

### A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

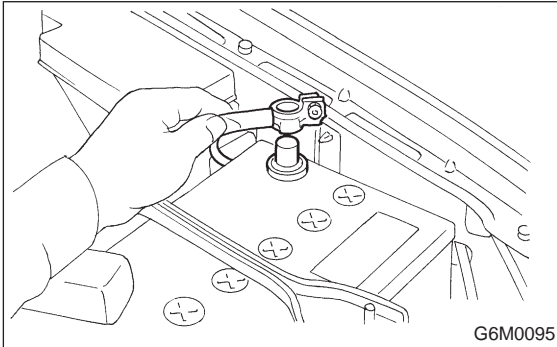

- 2) Disconnect connector from fuel pump relay.

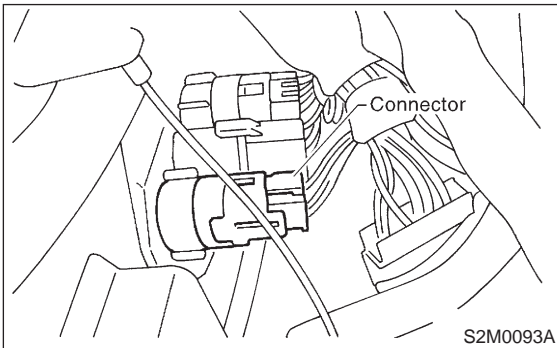

- 3) Remove fuel pump relay from mounting bracket.

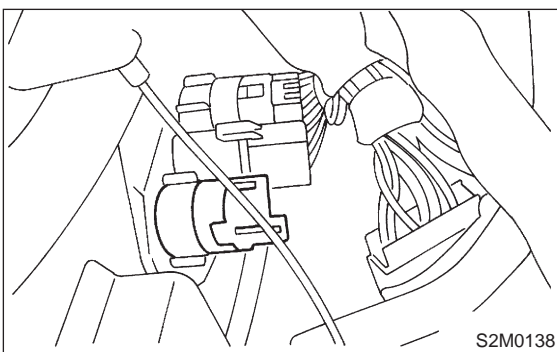


- 4) Installation is in the reverse order of removal.


## 18. Air Intake Chamber (Except 2200 cc California Spec. Vehicles)

### A: REMOVAL AND INSTALLATION

- 1) Loosen clamps which connect air intake chamber to throttle body and air intake duct.

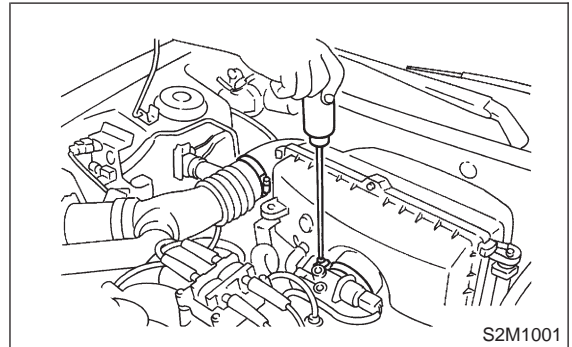

- 2) Disconnect air hoses from air intake chamber.
- 3) Remove bolts which secure air intake chamber to stays.

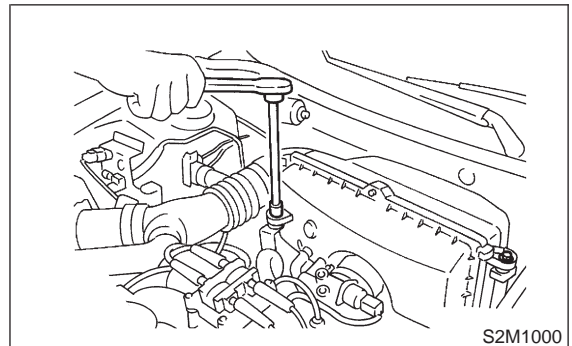

- 4) Remove air intake chamber.
- 5) Installation is in the reverse order of removal.

#### **Tightening torque:**

**$4.9 \pm 0.5$  N-m ( $0.5 \pm 0.05$  kg-m,  $3.6 \pm 0.4$  ft-lb)**