



15. Engine Control Module (ECM)

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

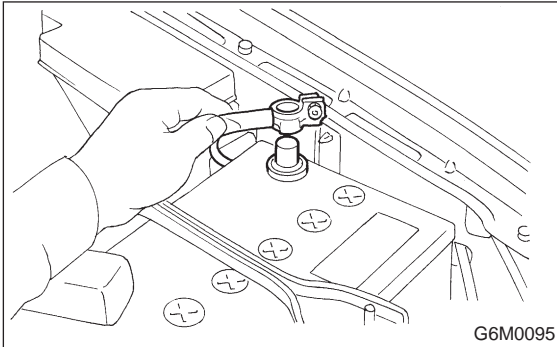


- 2) Remove side sill front cover.
<Ref. to 5-3 [W5A0].>

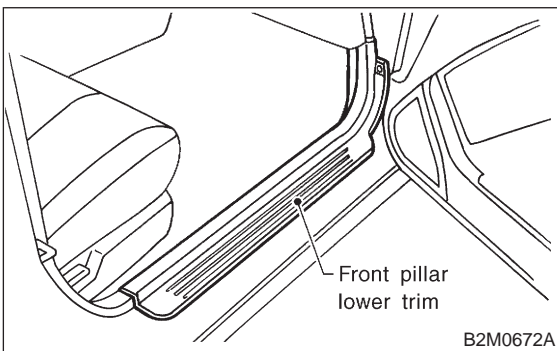


- 3) Detach floor mat of front passenger seat.

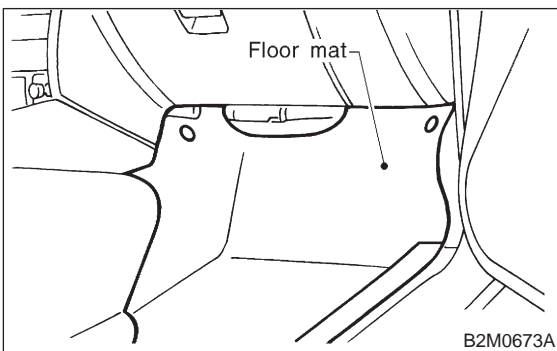


- 4) Remove protect cover.

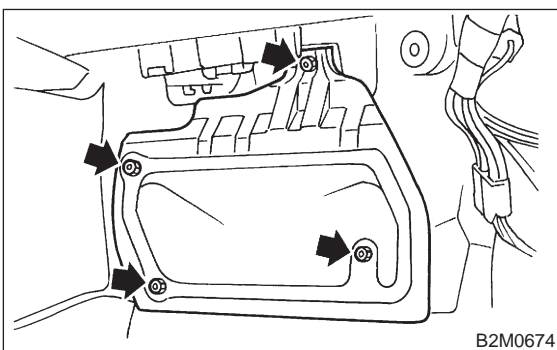


- 5) Remove nuts which hold ECM to bracket.

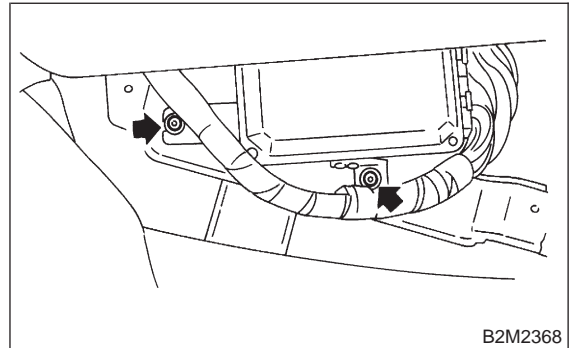


- 6) Remove clip from bracket.

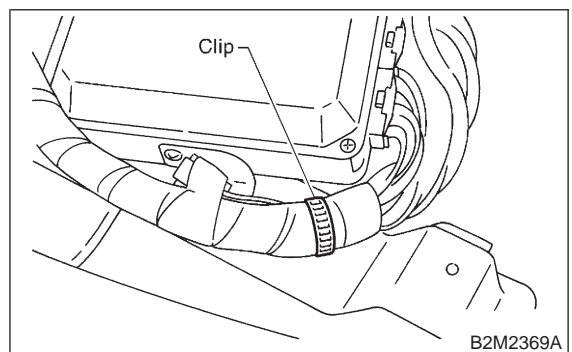

- 7) Disconnect ECM connectors.

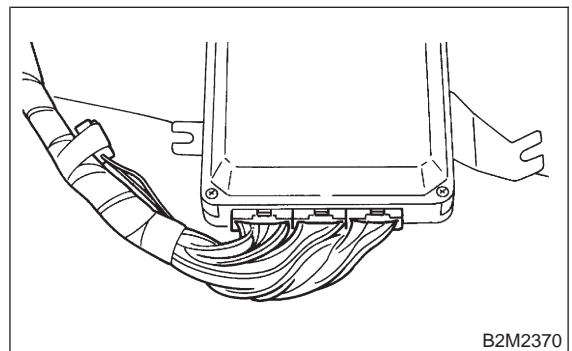

- 8) Take out ECM.

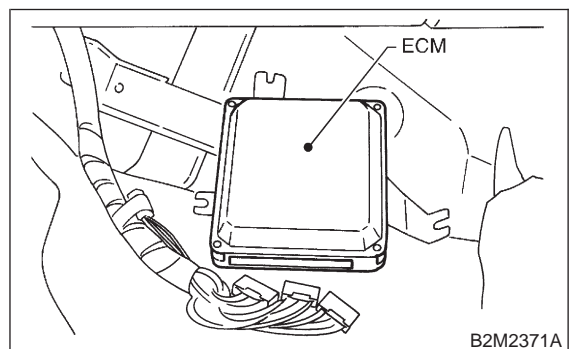

- 9) Installation is in the reverse order of removal.

CAUTION:
When replacing ECM, be careful not to use the wrong spec. ECM to avoid any damage to the fuel injection system.