



17. Fuel Pump Relay

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

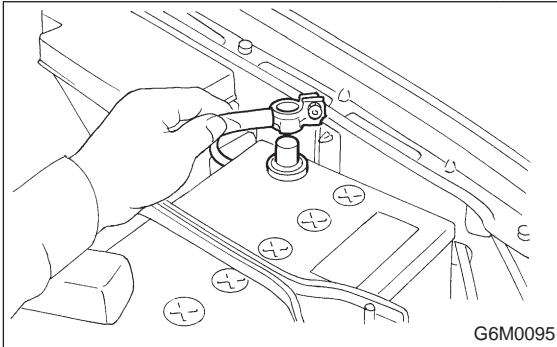

- 2) Disconnect connector from fuel pump relay.

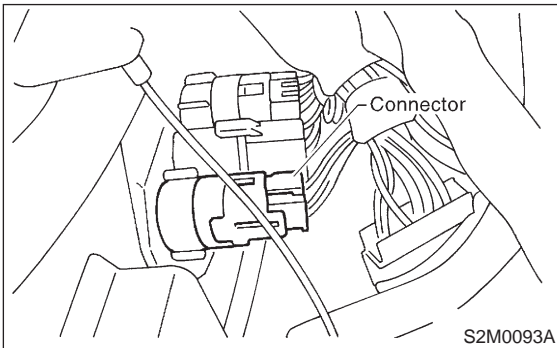

- 3) Remove fuel pump relay from mounting bracket.

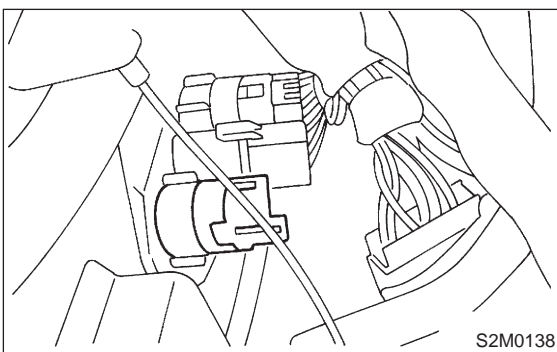


- 4) Installation is in the reverse order of removal.


18. Air Intake Chamber (Except 2200 cc California Spec. Vehicles)

A: REMOVAL AND INSTALLATION

- 1) Loosen clamps which connect air intake chamber to throttle body and air intake duct.

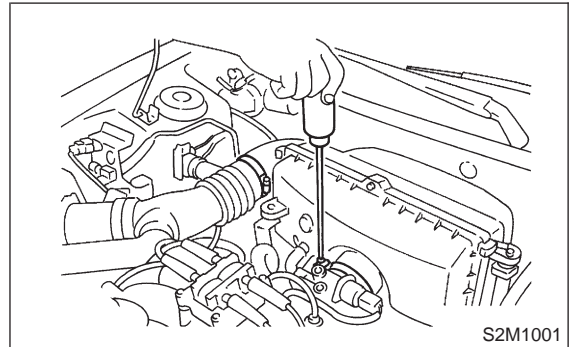

- 2) Disconnect air hoses from air intake chamber.
- 3) Remove bolts which secure air intake chamber to stays.

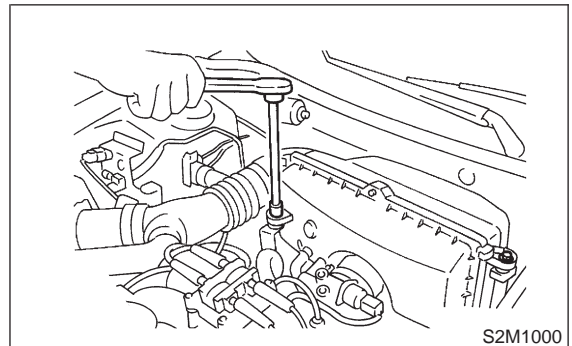

- 4) Remove air intake chamber.
- 5) Installation is in the reverse order of removal.

Tightening torque:

4.9 ± 0.5 N-m (0.5 ± 0.05 kg-m, 3.6 ± 0.4 ft-lb)