
## 6. Planetary Gear and 2-4 Brake

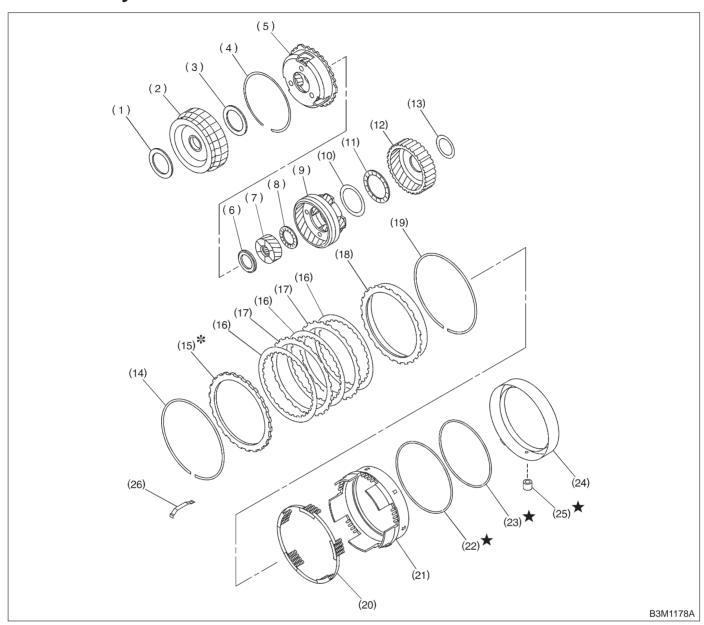

- (1) Thrust needle bearing
- (2) Front sun gear
- (3) Thrust needle bearing
- (4) Snap ring
- (5) Front planetary carrier
- (6) Thrust needle bearing
- (7) Rear sun gear
- (8) Thrust needle bearing
- (9) Rear planetary carrier

- (10) Washer
- (11) Thrust needle bearing
- (12) Rear internal gear
- (13) Washer
- (14) Snap ring
- (15) Retaining plate
- (16) Drive plate
- (17) Driven plate
- (18) Pressure rear plate

- (19) Snap ring
- (20) Spring retainer
- (21) 2-4 brake piston
- (22) Lathe cut seal ring
- (23) Lathe cut seal ring
- (24) 2-4 brake piston retainer
- (25) 2-4 brake seal
- (26) Leaf spring