

INSPECTION MODE

ENGINE (DIAGNOSTICS)

12. Inspection Mode

A: OPERATION

Carry out trouble diagnosis shown in the following DTC table.

When performing trouble diagnosis which is not shown in the DTC table, refer to the next item Drive cycle.

<Ref. to EN(H4SO)-46, Drive Cycle.>

DTC No.	Item
P0031	HO ₂ S Heater Control Circuit Low (Bank 1 Sensor 1)
P0032	HO ₂ S Heater Control Circuit High (Bank 1 Sensor 1)
P0037	HO ₂ S Heater Control Circuit Low (Bank 1 Sensor 2)
P0038	HO ₂ S Heater Control Circuit High (Bank 1 Sensor 2)
P0066	Air Assisted Injector Control Circuit or Circuit Low
P0068	Manifold Absolute Pressure/Barometric Pressure Circuit Range/Performance
P0107	Manifold Absolute Pressure/Barometric Pressure Circuit Low Input
P0108	Manifold Absolute Pressure/Barometric Pressure Circuit High Input
P0112	Intake Air Temperature Circuit Low Input
P0113	Intake Air Temperature Circuit High Input
P0117	Engine Coolant Temperature Circuit Low Input
P0118	Engine Coolant Temperature Circuit High Input
P0122	Throttle/Pedal Position Sensor/Switch "A" Circuit Low Input
P0123	Throttle/Pedal Position Sensor/Switch "A" Circuit High Input
P0129	Barometric Pressure Too Low
P0131	O ₂ Sensor Circuit Low Voltage (Bank 1 Sensor 1)
P0132	O ₂ Sensor Circuit High Voltage (Bank 1 Sensor 1)
P0134	O ₂ Sensor Circuit No Activity Detected (Bank 1 Sensor 1)
P0137	O ₂ Sensor Circuit Low Voltage (Bank 1 Sensor 2)
P0138	O ₂ Sensor Circuit High Voltage (Bank 1 Sensor 2)
P0182	Fuel Temperature Sensor "A" Circuit Low Input
P0183	Fuel Temperature Sensor "A" Circuit High Input
P0327	Knock Sensor 1 Circuit Low Input (Bank 1 or Single Sensor)
P0328	Knock Sensor 1 Circuit High Input (Bank 1 or Single Sensor)
P0335	Crankshaft Position Sensor "A" Circuit
P0336	Crankshaft Position Sensor "A" Circuit Range/Performance
P0340	Camshaft Position Sensor "A" Circuit (Bank 1 or Single Sensor)
P0341	Camshaft Position Sensor "A" Circuit Range/Performance (Bank 1 or Single Sensor)
P0447	Evaporative Emission Control System Vent Control Circuit Open
P0448	Evaporative Emission Control System Vent Control Circuit Shorted
P0452	Evaporative Emission Control System Pressure Sensor Low Input
P0458	Evaporative Emission Control System Purge Control Valve Circuit Low
P0462	Fuel Level Sensor Circuit Low Input
P0463	Fuel Level Sensor Circuit High Input
P0502	Vehicle Speed Sensor Circuit Low Input
P0503	Vehicle Speed Sensor Intermittent/Erratic/High
P0512	Starter Request Circuit
P0519	Idle Control System Malfunction (Fail-safe)
P0565	Cruise Control Set Signal Circuit Malfunction for AT
P0604	Internal Control Module Random Access Memory (RAM) Error
P0691	Cooling Fan 1 Control Circuit Low
P0692	Cooling Fan 1 Control Circuit High
P0703	Torque Converter/Brake Switch "B" Circuit

INSPECTION MODE

ENGINE (DIAGNOSTICS)

DTC No.	Item
P0705	Transmission Range Sensor Circuit (PRNDL Input)
P0710	Transmission Fluid Temperature Sensor Circuit
P0716	Input/Turbine Speed Sensor Circuit
P0720	Output Speed Sensor Circuit
P0726	Engine Speed Input Circuit
P0731	Gear 1 Incorrect Ratio
P0732	Gear 2 Incorrect Ratio
P0733	Gear 3 Incorrect Ratio
P0734	Gear 4 Incorrect Ratio
P0741	Torque Converter Clutch Circuit Performance or Stuck Off
P0743	Torque Converter Clutch Circuit Electrical
P0748	Pressure Control Solenoid "A" Electrical
P0753	Shift Solenoid "A" Electrical
P0758	Shift Solenoid "B" Electrical
P0771	AT Low Clutch Timing Solenoid Valve Circuit Malfunction
P0778	Pressure Control Solenoid "B" Electrical
P0785	Shift/Timing Solenoid
P0851	Neutral Switch Input Circuit Low
P0852	Neutral Switch Input Circuit High
P0864	TCM Communication Circuit Range/Performance
P0865	TCM Communication Circuit Low
P0866	TCM Communication Circuit High
P1110	Atmospheric Pressure Sensor Circuit Malfunction (Low Input)
P1111	Atmospheric Pressure Sensor Circuit Malfunction (High Input)
P1400	Fuel Tank Pressure Control Solenoid Valve Circuit Low
P1420	Fuel Tank Pressure Control Sol. Valve Circuit High
P1446	Fuel Tank Sensor Control Valve Circuit Low
P1447	Fuel Tank Sensor Control Valve Circuit High
P1492	EGR Signal #1 Circuit (Low Input)
P1493	EGR Signal #1 Circuit (High Input)
P1494	EGR Signal #2 Circuit (Low Input)
P1495	EGR Signal #2 Circuit (High Input)
P1496	EGR Signal #3 Circuit (Low Input)
P1497	EGR Signal #3 Circuit (High Input)
P1498	EGR Signal #4 Circuit (Low Input)
P1499	EGR Signal #4 Circuit (High Input)
P1510	ISC Solenoid Valve Signal #1 Circuit Malfunction (Low Input)
P1511	ISC Solenoid Valve Signal #1 Circuit Malfunction (High Input)
P1512	ISC Solenoid Valve Signal #2 Circuit Malfunction (Low Input)
P1513	ISC Solenoid Valve Signal #2 Circuit Malfunction (High Input)
P1514	ISC Solenoid Valve Signal #3 Circuit Malfunction (Low Input)
P1515	ISC Solenoid Valve Signal #3 Circuit Malfunction (High Input)
P1516	ISC Solenoid Valve Signal #4 Circuit Malfunction (Low Input)
P1517	ISC Solenoid Valve Signal #4 Circuit Malfunction (High Input)
P1518	Starter Switch Circuit Low input
P1560	Back-up Voltage Circuit Malfunction
P1698	Engine Torque Control Cut Signal Circuit Malfunction (Low Input)
P1699	Engine Torque Control Cut Signal Circuit Malfunction (High Input)
P1700	Throttle Position Sensor Circuit Malfunction for AT
P1711	Engine Torque Control Signal #1 Circuit Malfunction

INSPECTION MODE

ENGINE (DIAGNOSTICS)


DTC No.	Item
P1712	Engine Torque Control Signal #2 Circuit Malfunction

1. PREPARATION FOR THE INSPECTION MODE

- 1) Make sure the fuel remains approx. half amount [20 — 40 ℓ (5.3 — 10.6 US gal, 4.4 — 8.8 Imp gal)] and the battery voltage is 12 V or more.
- 2) Raise the vehicle using a garage jack and place on safety stands or drive the vehicle onto free rollers.

WARNING:


- Before raising the vehicle, ensure the parking brake is applied.
- Do not use a pantograph jack in place of a safety stand.
- Secure a rope or wire to the front and rear towing or tie-down hooks to prevent the lateral runout of front wheels.
- Do not abruptly depress/release the clutch pedal or accelerator pedal during works even when engine is operating at low speeds since this may cause vehicle to jump off free rollers.
- In order to prevent the vehicle from slipping due to vibration, do not place any wooden blocks or similar items between the safety stands and the vehicle.
- Since the rear wheels will also rotate, do not place anything near them. Also, make sure nobody goes in front of the vehicle.

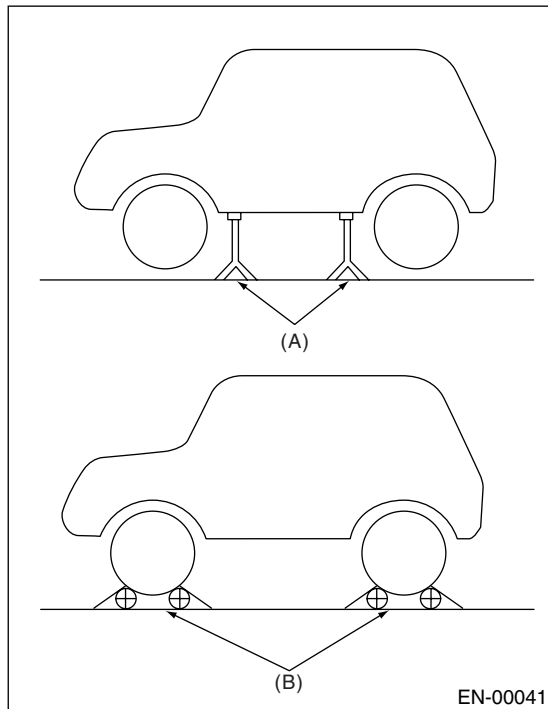


- (A) Safety stand
(B) Free rollers

2. SUBARU SELECT MONITOR


- 1) After clearing the memory, check for any remaining unresolved trouble data. <Ref. to EN(H4SO)-49, Clear Memory Mode.>
- 2) Warm up the engine.
- 3) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

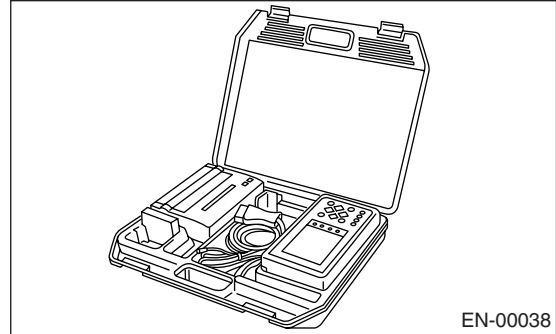

- 4) Connect the diagnosis cable to Subaru Select Monitor.
- 5) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4SO)-8, PREPARATION TOOL, General Description.>

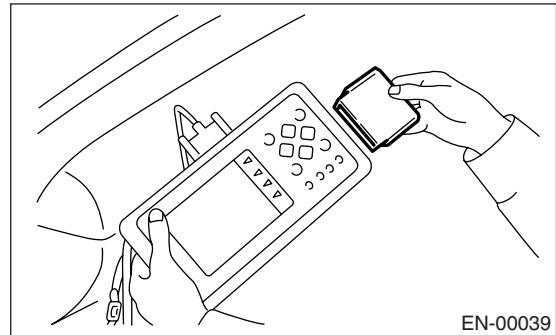

- 6) Connect the test mode connector (A) at the lower portion of instrument panel (on driver's side).

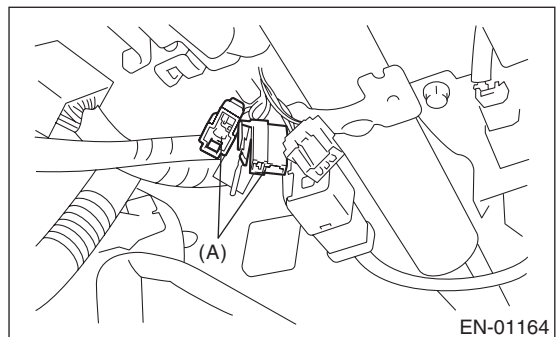


INSPECTION MODE

ENGINE (DIAGNOSTICS)

7) Connect the Subaru Select Monitor to data link connector.

(1) Data link connector is located in the lower portion of the instrument panel (on the driver's side).

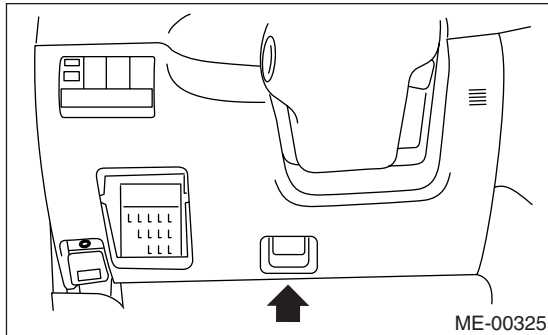


(2) Connect the diagnosis cable to data link connector.

CAUTION:

Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

8) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

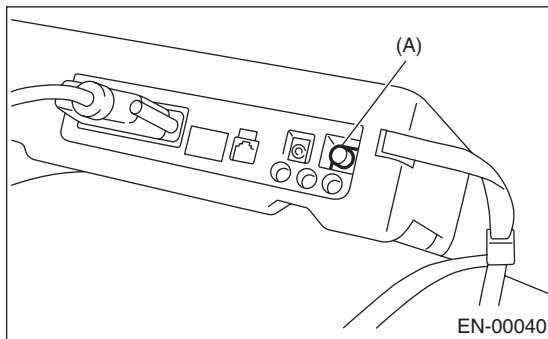

(A) Power switch

9) On «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.

10) On «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.

11) Press the [YES] key after the information of engine type is displayed.

12) On «Engine Diagnosis» display screen, select the {Dealer Check Mode Procedure} and press the [YES] key.

13) When the "Perform Inspection (Dealer Check) Mode?" is shown on display screen, press the [YES] key.

14) Perform subsequent procedures as instructed on display screen.

- If trouble still remains in memory, the corresponding DTC appears on display screen.

NOTE:

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

- For details concerning the DTC, refer to the List of Diagnostic Trouble Code (DTC).

<Ref. to EN(H4SO)-77, List of Diagnostic Trouble Code (DTC).>

- Release the parking brake.


- The speed difference between front and rear wheels may light either the ABS warning light, but this indicates no malfunctions. When the engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis function.

3. OBD-II GENERAL SCAN TOOL

1) After clearing memory, check for any remaining unresolved trouble data: <Ref. to EN(H4SO)-49, Clear Memory Mode.>

2) Warm up the engine.


3) Connect the test mode connector (A) at the lower side of instrument panel (on the driver's side).

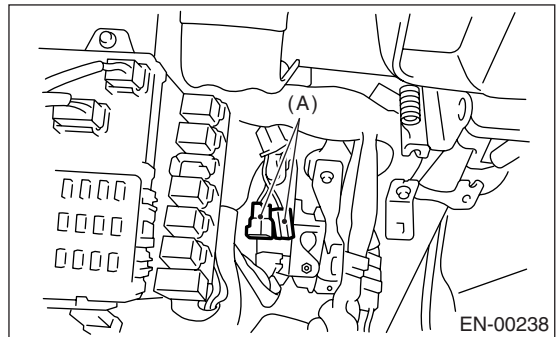

4) Connect the OBD-II general scan tool to its data link connector.

CAUTION:

Do not connect the scan tools except for Subaru Select Monitor and OBD-II general scan tool.

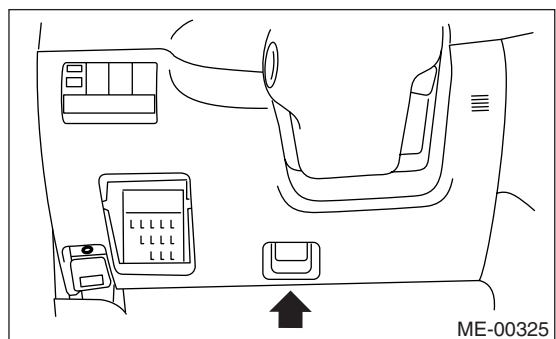

5) Start the engine.

NOTE:

- Ensure the selector lever is placed in "P" position before starting. (AT model)

- Depress the clutch pedal when starting engine. (MT model)
- 6) Using the selector lever or shift lever, turn the “P” position switch and “N” position switch ON.
- 7) Depress the brake pedal to turn brake switch ON. (AT model)
- 8) Keep the engine speed in 2,500 — 3,000 rpm range for 40 seconds.
- 9) Place the selector lever or shift lever in “D” position (AT model) or “1st” gear (MT model) and drive the vehicle at 5 to 10 km/h (3 to 6 MPH).

NOTE:

- On AWD vehicles, release the parking brake.
 - The speed difference between front and rear wheels may light ABS warning light, but this indicates no malfunctions. When the engine control diagnosis is finished, perform the ABS memory clearance procedure of self-diagnosis function.
- 10) Using the OBD-II general scan tool, check for DTC and record the result(s).

NOTE:

- For detailed operation procedures, refer to the OBD-II General Scan Tool Instruction Manual.
 - For details concerning DTC, refer to the List of Diagnostic Trouble Code (DTC).
- <Ref. to EN(H4SO)-77, List of Diagnostic Trouble Code (DTC).>