


# CONDENSER

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


## 14. Condenser

### A: REMOVAL


- 1) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-20, OPERATION, Refrigerant Recovery Procedure.>
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the pressure hose and pipe from condenser.

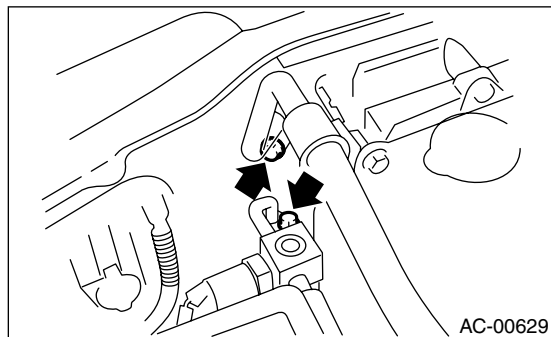

- 4) Remove the radiator bracket (A).

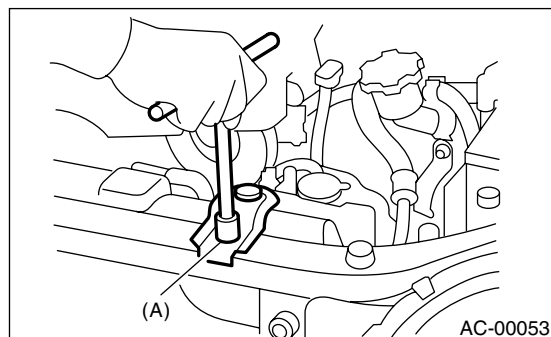

- 5) Remove the two bolts. While lifting the condenser, pull it out through the space between radiator and radiator panel.

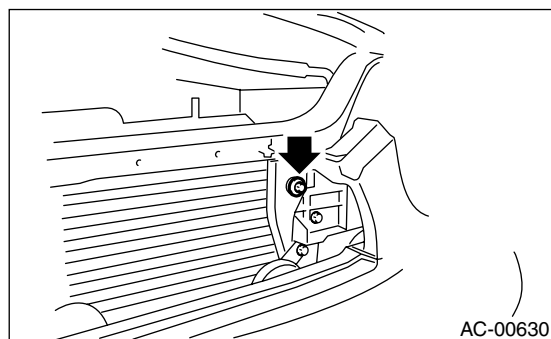

### CAUTION:


- Be careful not to damage the condenser fins. If a damaged fin is found, repair it using a thin screwdriver.
- If the condenser is replaced, add appropriate amount of compressor oil to the compressor. <Ref. to AC-25, REPLACEMENT, Compressor Oil.>

### B: INSTALLATION

- 1) Install in the reverse order of removal.

### CAUTION:

Replace the O-rings on hoses or pipes with new ones, and then apply compressor oil. Confirm that lower guide of condenser (A) has been fitted into holes on radiator panel.

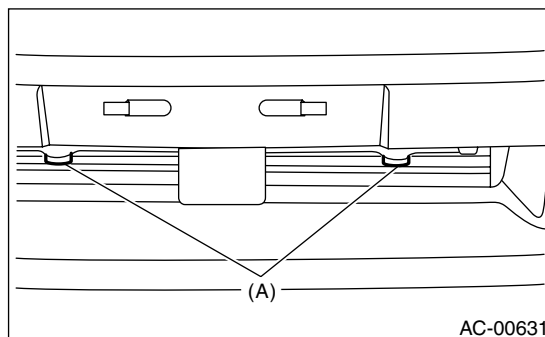

- 2) Charge refrigerant. <Ref. to AC-21, OPERATION, Refrigerant Charging Procedure.>

### Tightening torque:

Refer to **COMPONENT** in *General Description*. <Ref. to AC-11, AIR CONDITIONING UNIT, COMPONENT, General Description.> and <Ref. to CO(H4SO)-4, RADIATOR AND RADIATOR FAN, COMPONENT, General Description.>

### C: INSPECTION

- 1) Confirm that no dust or insects are found on the condenser fins. Air-blow or flush fins with water as needed.
- 2) Confirm that no oil leaks from condenser. If a failure is found, replace the condenser with a new one.