
15.Rear Window Glass

A: REMOVAL

- 1) Disconnect the electrical connectors from rear defogger terminals.
- 2) Remove the glass in the same procedure as for windshield glass. <Ref. to GW-23, REMOVAL, Windshield Glass.>

B: INSTALLATION

1) Bond the dam rubber and matching pin.

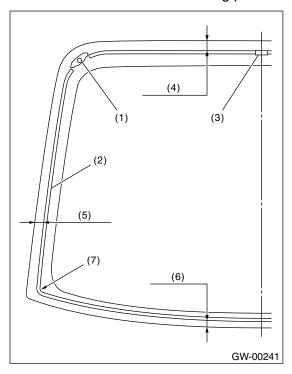

- (1) Matching pin
- (2) Dam rubber
- (3) Fastener
- (4) 14.5 mm (0.571 in)
- (5) 8 mm (0.315 in)
- (6) 22 mm (0.866 in)
- (7) R20
- 2) Install the glass in the same procedure as for windshield glass. <Ref. to GW-24, INSTALLATION, Windshield Glass.>
- 3) Connect the rear defogger terminals.

4) After completion of all work, allow the vehicle to stand for about 24 hours.

NOTE:

- When the door is opened/closed after glass is bonded, always lower the door glass and then open/close door carefully.
- Move the vehicle slowly.
- For minimum drying time and time the vehicle must be left standing before driving after bonding, follow the instructions or instruction manual from adhesive manufacturer.
- 5) After curing of adhesive, pour water on external surface of vehicle to check that there are no water leaks.

NOTE:

When a vehicle is returned to user, tell him or her that the vehicle should not be subjected to heavy impact for at least three days.