


DROPPING RESISTOR

AUTOMATIC TRANSMISSION

23. Dropping Resistor


A: REMOVAL

1) Disconnect the ground terminal from battery.

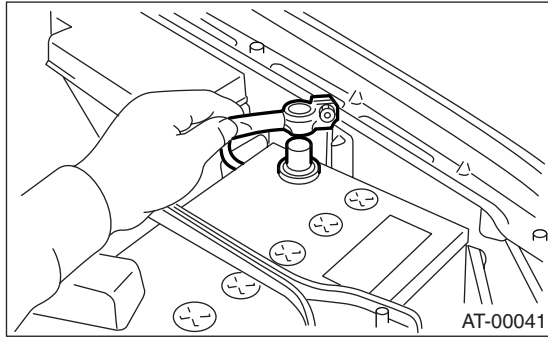

2) Disconnect the connector from dropping resistor.

3) Remove the dropping resistor.

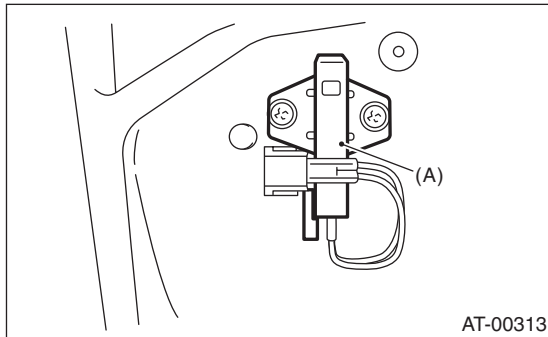


(A) Dropping resistor

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.4 N·m (0.65 kgf·m, 4.7 ft·lb)

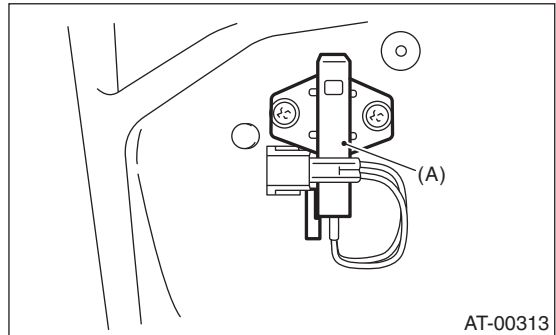

(A) Dropping resistor

C: INSPECTION

Step	Check	Yes	No
1 CHECK RESISTOR. 1) Turn the ignition switch to OFF. 2) Disconnect the connector from dropping resistor. 3) Measure the resistance between dropping resistor terminal. Terminals No. 1 — No. 2:	Is the resistance 9 — 15 Ω ?	Go to step 2.	Replace the dropping resistor. <Ref. to 4AT-78, Dropping Resistor.>
2 CHECK RESISTOR. Measure the resistance between dropping resistor terminal. Terminals No. 3 — No. 4:	Is the resistance 9 — 15 Ω ?	Dropping resistor is normal.	Replace the dropping resistor. <Ref. to 4AT-78, Dropping Resistor.>