


TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

7. Transmission Control Module (TCM) I/O Signal

A: ELECTRICAL SPECIFICATION

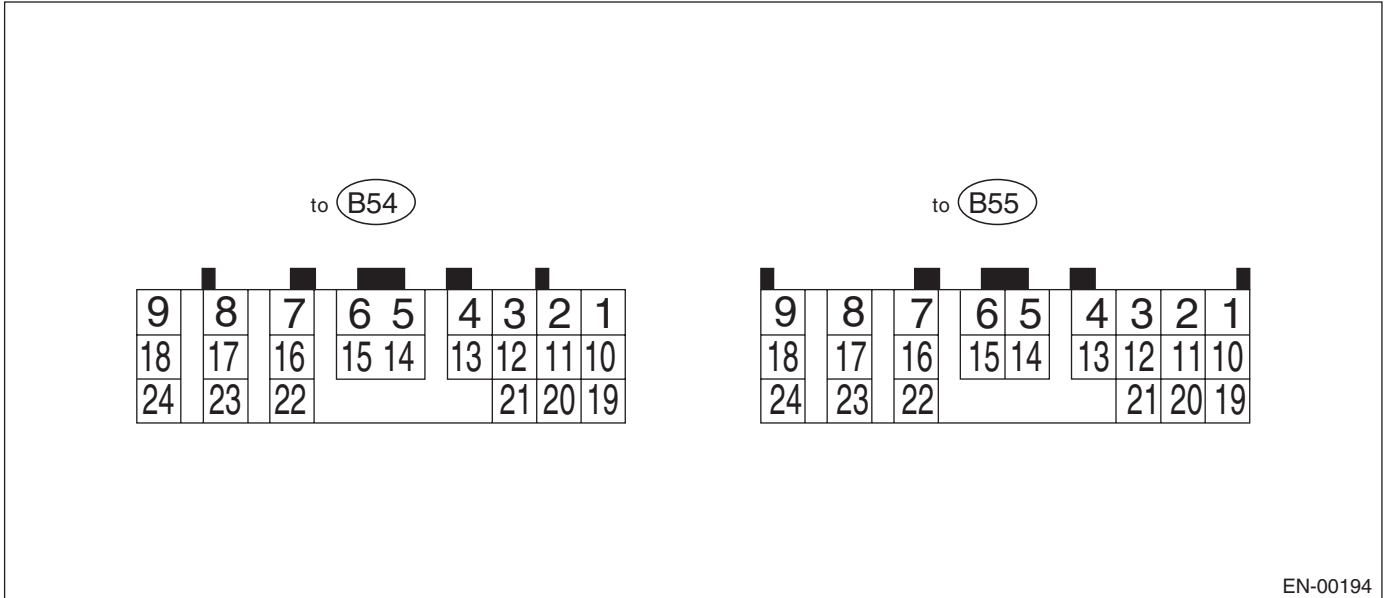

EN-00194

NOTE:

Check with ignition switch ON.

Content		Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Back-up power supply		B55	6	Ignition switch OFF	10 — 13	—
Ignition power supply		B54	23	Ignition switch ON (with engine OFF)	10 — 13	—
		B54	24			
Inhibitor switch	“P” range switch	B55	23	Selector lever in “P” range	Less than 1	—
				Selector lever in any other than “P” range	More than 8	
	“N” range switch	B55	22	Selector lever in “N” range	Less than 1	—
				Selector lever in any other than “N” range	More than 8	
	“R” range switch	B55	17	Selector lever in “R” range	Less than 1	—
				Selector lever in any other than “R” range	More than 8	
	“D” range switch	B55	8	Selector lever in “D” range	Less than 1	—
				Selector lever in any other than “D” range	More than 8	
	“3” range switch	B55	18	Selector lever in “3” range	Less than 1	—
				Selector lever in any other than “3” range	More than 8	
	“2” range switch	B54	10	Selector lever in “2” range	Less than 1	—
				Selector lever in any other than “2” range	More than 8	
	“1” range switch	B54	1	Selector lever in “1” range	Less than 1	—
				Selector lever in any other than “1” range	More than 8	
Brake switch		B55	24	Brake pedal depressed.	More than 10.5	—
				Brake pedal released.	Less than 1	
ABS signal		B54	19	ABS switch ON	Less than 1	—
				ABS switch OFF	More than 6.5	

TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
AT OIL TEMP light	B54	3	Light ON	Less than 1	—
			Light OFF	More than 9	
Throttle position sensor	B55	2	Throttle fully closed.	Approx. 0.5	—
			Throttle fully open.	Approx. 4.3	
Throttle position sensor power supply	B55	1	Ignition switch ON (With engine OFF)	4.8 — 5.3	—
ATF temperature sensor	B55	11	ATF temperature 20°C (68°F)	1.6 — 2.0	2.1 k — 2.9 k
			ATF temperature 80°C (176°F)	0.4 — 0.9	275 — 375
Rear vehicle speed sensor (AWD)	B55	3	Vehicle stopped.	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Front vehicle speed sensor	B55	5	Vehicle stopped.	0	450 — 650
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Torque converter turbine speed sensor	B55	12	Engine idling after warm-up (D range).	0	450 — 650
			Engine idling after warm-up (N range).	More than 1 (AC range)	
Vehicle speed output signal	B55	13	Vehicle speed at most 10 km/h (6 MPH)	1 ← → 5	—
Engine speed signal	B55	4	Ignition switch ON (with engine OFF)	0	—
			Ignition switch ON (with engine ON)	0 — 13 or more	
Cruise set signal	B54	11	When cruise control is set (SET lamp ON)	Less than 1	—
			When cruise control is not set (SET lamp OFF)	More than 6.5	
Torque control 1 signal	B54	13	Ignition switch ON (with engine ON)	More than 4.8	—
Torque control 2 signal	B54	21	Ignition switch ON (with engine ON)	More than 4.8	—
Torque control cut signal	B54	2	Ignition switch ON	8	—
Intake manifold pressure signal	B55	20	Engine idling after warm-up.	0.4 — 1.8	—
AT load signal	B55	20	Engine idling after warm-up.	1.2 — 1.8	—
Shift solenoid 1	B54	7	1st gear	More than 9	10 — 16
			3rd gear	Less than 1	
Shift solenoid 2	B54	6	2nd gear	More than 9	10 — 16
			4th gear	Less than 1	
Line pressure duty solenoid	B54	9	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 5.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 1	
Dropping resistor	B54	18	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
Lock-up duty solenoid	B54	16	When lock up occurs.	More than 8.5	10 — 17
			When lock up is released.	Less than 0.5	

TRANSMISSION CONTROL MODULE (TCM) I/O SIGNAL

ENGINE (DIAGNOSTICS)

Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (ohms)
Transfer duty solenoid	B54	15	Fuse on FWD switch	More than 8.5	10 — 17
			Fuse removed from FWD switch (with throttle fully open and with select lever in 1st gear).	Less than 0.5	
2-4 brake duty solenoid	B54	8	Throttle fully closed (with engine OFF) after warm-up.	1.5 — 5.0	2.0 — 4.5
			Throttle fully open (with engine OFF) after warm-up.	Less than 1	
2-4 brake dropping resistor	B54	17	Throttle fully closed (with engine OFF) after warm-up.	More than 8.5	9 — 15
			Throttle fully open (with engine OFF) after warm-up.	Less than 0.5	
2-4 brake timing solenoid	B54	5	1st gear	Less than 1	10 — 16
			3rd gear	More than 9	
Low clutch timing solenoid	B54	14	2nd gear	Less than 1	10 — 16
			4th gear	More than 9	
Sensor ground line	B55	21	—	0	Less than 1
System ground line	B55	9	—	0	Less than 1
		19			
FWD switch	B55	14	Fuse removed.	More than 9	—
			Fuse installed.	Less than 1	
FWD indicator light	B54	12	Fuse on FWD switch	Less than 1	—
			Fuse removed from FWD switch	More than 9	
Data link signal (Subaru Select Monitor)	B55	7	—	—	—
		16	—	—	
AT diagnosis signal	B54	4	Ignition switch ON	Less than 1 ← → More than 4	—